

AVAGARDTM

ULTIMATE DURABILITY

RETRACTABLE HOSE REEL

**User's Manual
AVGWR5850-2**



“CONNECT LEAD IN HOSE TO HOSE REEL INLET BEFORE CONNECTING LEAD IN HOSE TO THE WATER SUPPLY”

FEATURES:

Spring driven drum for automatic rewind

Locking ratchet to maintain the desired length of hose in use

DO NOT DISCARD

Read the following precautions and instructions before you begin assembly or using.
Failure to comply with these instructions could result in personal injury or property damage
Keep these instructions in a convenient location for future reference .

⚠️ WARNING!

If the rewind spring fails for any reason: For safety reasons, the manufacturer strongly recommends the replacement of the spring canister be carried out by a professional mechanic.

SAFETY PRECAUTIONS

- *Make sure incoming line pressure does not exceed rated operating pressure for your model hose reel.*
- *Use proper eye protection when assembling and using the hose reel.*
- *Assemble the hose reel on a clean workbench.*
- *Use soap and water when checking for leaks.*
- *Keep children away from the work area.*

Warning: Exposure of skin directly to pressurized air, or fluid could result in severe bodily injury.

ASSEMBLY

Installation of Reel:

- *For overhead ceiling mounting: Install reels at least 10 feet above the floor.*
- *If the reel you have purchased does not have hose included, you will need to purchase and attach. Refer to specifications on box to determine appropriate hose size and length.*
- *You will need to purchase appropriate hardware for mounting your new reel.*

1. *The reel base has four 1/2" (or 12.7mm) drilled holes for mounting on a suitable flat surface. Figure 3 is a template showing the correct location of the 4 mounting holes in the base.*

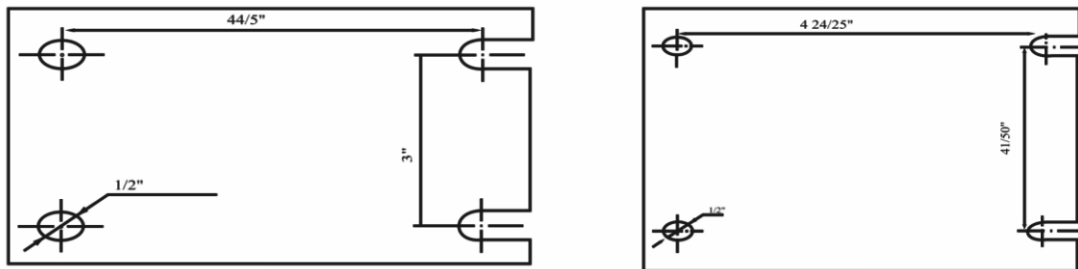


Figure 3

2. *The reel is supplied with hose guide roller bracket. The bracket position may be changed depending on the reel mounting position. Figure 2 show "Typical Mounting Positions". If bracket position needs to be changed, do the following:*
 - (a) *Pull out some hose and let reel latch.*
 - (b) *Remove the bolts that attach the guide roller bracket to the support post.*
 - (c) *Rotate guide roller bracket to correct position, replace bolts and tighten.*

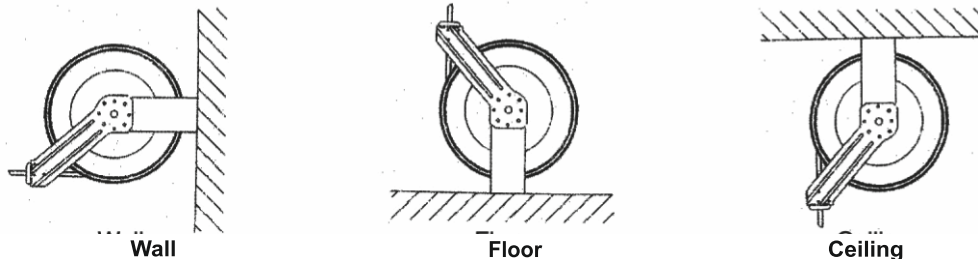


Figure 2

Assembly *(continued)*

- 3. Using the four holes in the base, mount the reel in the desired location. Be sure to use appropriate hardware and tighten securely.*
- 4. Apply Teflon tape or pipe sealant to supply line threads, attach to reel inlet and tighten. The other end of incoming line can now be connected to desired supply source.*
- 5. If connecting hose has been supplied with reel, Please connect the leader hose first to the Reel by using Teflon tape & then connect the other end to your air/water source.*
- 6. Check connection for leakage, also check hose reel for correct operation. (Details see Operation section.)*
- 7. If hose stopper adjustment is required, pull hose from reel and allow to latch at desired length. Loosen stopper bolts and slide stopper to a position close to the hose guide. Tighten stopper bolts, and unlatch the reel.*

Installation of Hose:

- 1. Securely stabilize the reel.*
- 2. Facing the swivel fitting side of reel: Turn the drum clockwise, by hand, until the rewind spring is tight, and drum has latched. As an extra precaution while installing new hose, secure drum in the latched position.*
- 3. Insert end of the hose through guide roller bracket and feed through opening in the drum fange.*
- 4. Use Teflon tape or pipe sealant on hose fitting threads, screw fitting into swivel, and tighten.*

Note: To avoid damage to the swivel, use a wrench to support the swivel fitting while tightening the hose.
- 5. Attach hose stopper on the other end of hose, near the outlet fitting.*
- 6. Carefully release drum latch and slowly allow hose to wind onto the reel.*

Note: Final spring tension adjustment is accomplished by adding wraps of hose around the drum (to increase tension) or taking off wraps of hose (to decrease tension). Refer to Adjustment of Spring Tension section.

Operation

- 1. Check reel for correct operation by slowly pulling out the hose. A "clicking" noise will be heard every half revolution of the drum.*
- 2. To latch the reel, pull out the hose and allow it to retract after hearing the firsts, second, or third "click".*
- 3. To unlatch, slowly pull out the hose until the "clicking" noise stops, then let the hose retract until the hose stop rests against the hose guide.*

Note: To avoid damage to the reel, always hold on to the hose while it is rewinding.
- 4. Periodically check the hose condition for wear or damage, and check the swivel fitting for leakage. Replace any worn, damaged, or leaking parts.*

Adjustment of Spring Tension

- 1. Pull out approximately 6 ft of 2m of hose and allow the drum to latch.**
- 2. Remove hose stopper from hose and feed hose back through guide.**
- 3. Wrap the pulled hose one time around the drum to increase tension or un-wrap hose one time from drum to decrease tension.**
- 4. Re-insert hose through guide and install stopper onto hose end.**
- 5. Unlatch the drum and check tension. Pull hose from reel and adjust stopper position if necessary.**

Replacement of Swivel Seal

- 1. Turn off and disconnect supply line from swivel inlet.**
- 2. Remove swivel assembly from reel axle.**
- 3. Remove c-clip from swivel and take apart.**
Note: You may want to remove swivel from reel hose and, but this is not necessary unless a new swivel is being installed.
- 4. Replace the seals and re-assemble swivel.**
- 5. Use Teflon tape of thread sealant on swivel thread fitting, reconnect the swivel thread fitting with axle.**
- 6. Re-connect inlet supply line.**

Replacement of Hose

- 1. Turn off supply to reel.**
- 2. Pull out all the old hose and lock the reel in this position.**
Caution: Make sure reel drum is securely locked and cannot rotate back.
- 3. Remove two hose clamps from hose.**
- 4. Carefully disconnect hose from swivel joint on side of reel and remove old hose.**
- 5. Feed new hose through guide and opening in drum and connect to swivel. Re-install two hose clamps on inside and outside of drum flange. Install stopper on the other end of hose in same position as before.**
- 6. Carefully release the drum latch and slowly allow the hose to wind onto the reel.**
Note: Final spring adjustment is accomplished by adding or removing wraps of hose around the drum. (Details see Adjustment of Spring Tension section.)

 **AVAGARD**TM
ULTIMATE DURABILITY

RMX

I N D U S T R I E S

For more information please visit

www.rmxind.com

WARRANTY INFORMATION

To make sure the defective product is eligible for replacement, please visit before sending replacement

www.thebluehose.com/warrantyinfo

for any assistance, email us at:

claims@thebluehose.com

We would be happy to help you.

For warranty Claims, The following items must be submitted

1. An original copy or copy of the dated cash register receipt from the store when the product was purchase.
2. The Retail package or the UPC from the package.
3. The original reel with full length hose.

Thank you for choosing Avagard.

RMX

Manufactured by:
RMX Industries

www.rmxind.com 