



BLADELESS FAN

USER MANUAL

FOR MODEL:
1PBF30



Before using your bladeless fan, please read this manual carefully and keep it for future reference, along with your receipt.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING: To reduce the risk of fire, electrical shock, or injury to person:

 
1. This fan is for household use only.
2. Before using for the first time, please check that your voltage is in accordance with the product nameplate requirements.
3. Please check the power cord and plug for any damage before use.
4. Always turn the fan OFF and unplug it from the electrical outlet when not in use.
5. Caution is necessary when the appliance is used near children.
6. Do not run the power cord under carpeting and do not cover the cord with throw rugs, runners or the like. Place the cord away from traffic areas to avoid tripping hazards.
7. Do not operate the appliance with a damaged cord or plug, or after the unit malfunctions, or if it has been dropped or damaged in any manner.
8. If the fan's internal power supply is damaged, it must be replaced by the manufacturer or its service agent to avoid a safety hazard.
9. Use the fan in a well-ventilated area. When in use, place the fan at least 8 inches from any walls to ensure proper air flow. The fan must not be located immediately below or beside a curtain.
11. Do not obstruct the airflow with any objects or place anything inside the fan opening.
12. Do not use in areas where curtains could be sucked in.
10. Only place the fan on a hard, flat, dry floor.
13. Do not use in extreme temperatures, humidity, or dusty environments.
14. Do not place heavy objects on the fan.
15. Do not place the fan directly below a power outlet or you risk the cord being sucked in.
16. When the fan is oscillating do not manually turn the fan to avoid damage.
17. Always turn off the power supply before unplugging the power cord from the electrical outlet to prevent a short circuit, fire or electric shock.
18. Do not twist or pull the power cord.
19. Do not unplug the fan if your hands are wet, there is danger of electric shock.
20. Children under 8 should not operate the fan.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS

Model No	1PBF30 (LW03-19AR)
Voltage	120V
Frequency	60Hz
Rated Power	65W


PRODUCT DIAGRAM

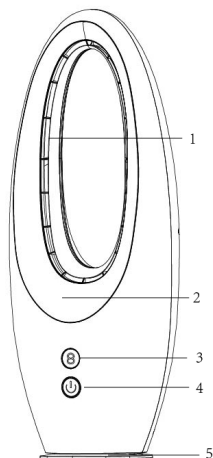

1. Air outlet
2. Nightlight
3. Display
4. ON/OFF Button
5. Oscillation base

INSTRUCTIONS FOR USE

 Control Panel:

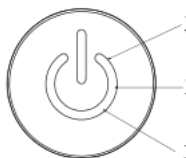

Function 1: In standby mode, press this button to power the fan on or off and to change the fan speed. Settings 1–2 -3-off.

Function 2: when the screen is off, press this button to unlock.

Function 3: While in use, press for 2 seconds to start or stop oscillation.

Remote control:

Speed button “+” “-”

Press “+”, to increase fan speed one level.

Press “-”, to reduce fan speed one level.

Timer button “+” “-”

Press “+”, to increase the timer by one hour.

Press “-”, to reduce the timer by one hour.

 
OSC button: Press to turn the oscillation On or Off

Screen Off button: Press to turn the display On or Off.


This locks all remote functions until the Screen Off button is pressed again to prevent accidental or inadvertent changes.

Light button: Press to turn the nightlight On or Off.

 : Press to turn the fan On or Off.

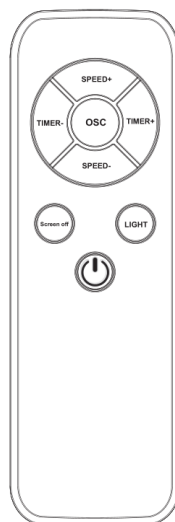

 Note: The remote control requires AAA batteries

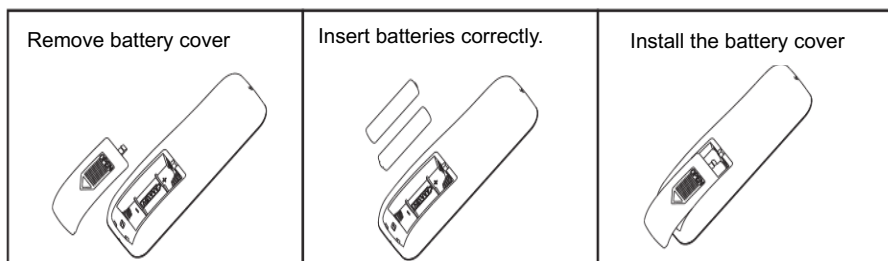

MAINTENANCE AND STORAGE

Turn off the power and unplug the fan before maintenance

 
1. This fan only needs general external cleaning and maintenance.
2. Wipe with a clean, dry, soft cloth after using a damp cloth with mild cleaner if necessary, to remove dirt.
3. Use a general-purpose household cleaner only to avoid discoloration or deterioration.
4. Do not rinse directly with water.
5. If the fan has any oily residue, it must be cleaned to avoid discoloration and damage.
6. For proper storage, place the fan in the original box using the original packaging material and store in a dry place after maintenance and cleaning.

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the electric receptacle, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to subvert this safety feature.

TO CHANGE THE FUSE:

The following should **ONLY** be conducted by a qualified professional:

1. Grasp plug and remove from the electrical receptacle. Do not unplug by pulling on the cord.
2. Open the fuse cover by sliding the fuse access cover on the top of the plug toward the blades as shown in the diagram below.



3. Remove fuse carefully. Push the fuse from the other side or turn fuse holder upside down to remove fuse.
 4. Risk of fire. Replace the fuse only with 5 Amp, 125 Volt fuses.
 5. Close fuse cover by sliding the fuse access cover on the top of the plug away from the blades.
 6. Risk of fire. Do not replace the polarized plug as it contains a safety device that should not be removed.
- Discard product if the polarized plug is damaged.

Distributed by:



Perfect Aire, LLC
5401 Dansher Rd.
Countryside, IL 60525

844-4PA-AIRE | 844-472-2473
www.perfectaire.us

PA/User_1PBF30/01282020

Specification and performance data is subject to change without notice.

Printed in China