



INSTRUCTION MANUAL & PARTS BREAKDOWN



MODEL 71055 **Golden Buddy Instruction Manual**

2347 Circuit Way, Brooksville, Florida, USA 34604

Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)

Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net



INSTRUCTION MANUAL

71055 Demount Instructions



1. Remove valve core, break tire beads, lubricate well.



2. Kick tool between bead and rim



3. Pull handle across wheel to opposite side to demount top bead. (see figures below)



4. Keeping tool engaged, pull handle back to starting side. Be sure handle returns almost to the ground. (See next two pictures)





INSTRUCTION MANUAL

71055 Demount Instructions



5. Repeat Steps 1-3 to demount bottom bead.



6. Pull handle down , remove tire.



7. You have just removed a tire the Buddy Way!



INSTRUCTION MANUAL



1. Position the wheel drop center down and position a clean, properly lubricated tire for mounting.



2. The Golden Buddy mount bar may be used to press the first bead over the lip allowing the bead to fall into the rim gutter.

BEAD KEEPER METHOD (RECOMMENDED)



3. Place bead keeper on the wheel to hold the bead as the tire is mounted. Begin working around the edge where the bead is not yet mounted.



4. Use the Golden Buddy mount bar to pry the bead onto the wheel. Continue working around the wheel until the tire is mounted.



INSTRUCTION MANUAL

STANDING METHOD



3. Stand on the tire to retain the bead. Begin working at one edge where the bead is not yet mounted.




4. Use the Golden Buddy Mount bar to pry the bead onto the wheel. Continue working the wheel until the tire is mounted. It may be necessary to widen your stance.



INSTRUCTION MANUAL

Parts Breakdown

71055 Golden Buddy

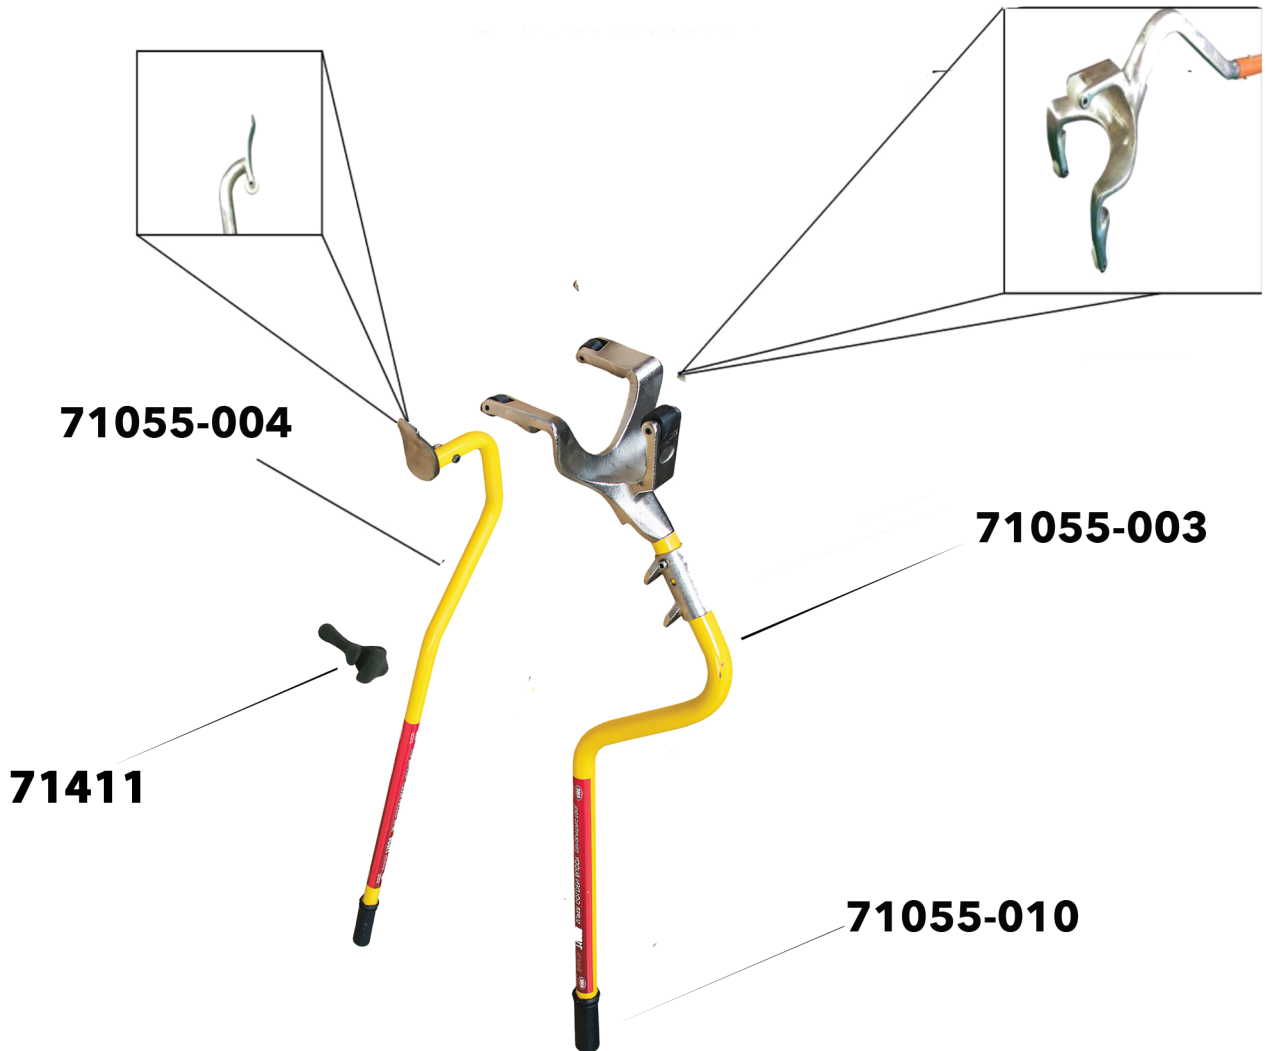


Parts #	Description	QTY (Needed)
71055-003	Dismount Handle	1
71055-004	Mount Handle for 71055	1
71411	Bead Keeper for Golden Buddy	1
71055-010	Rubber Grip for 71055	1



PARTS BREAKDOWN

Parts Breakdown 71055 Golden Buddy

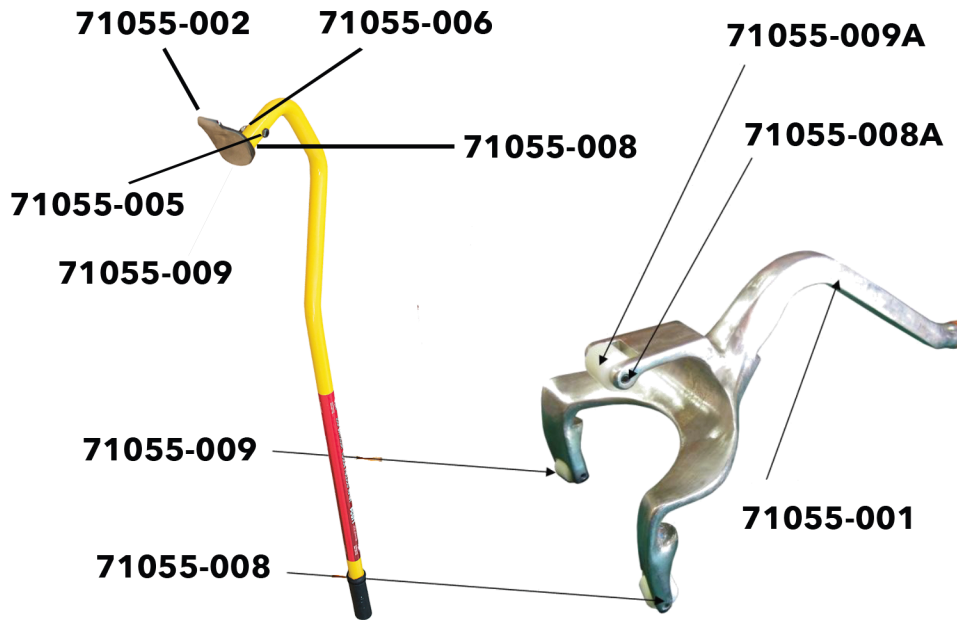

Part #	Description	QTY (Needed)
71055-001	Dismount Head Only	1
71055-002	Mount Head Only	1
71055-005	Handle Nut	1
71055-006	Handle Screw	1
71055-008	Pin for Roller	3
71055-008A	Pin for Center Dismount Head Roller	1
71055-009	Roller for Mount/Dismount Head	3
71055-009A	Center Roller for Mount/Dismount Head	1

2347 Circuit Way, Brooksville, Florida, USA 34604

Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)

Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net