



Quality, Innovation, Solutions

17-Gallon Low Profile Portable Oil Drain

Model JDI-LP4

Owners Manual



REV 9/16



Quality, Innovation, Solutions

17-Gallon Low Profile Portable Oil Drain

Model JDI-LP4

Owners Manual



REV 9/16

JDI-LP4 Assembly & Operating Instructions

Component Check List

Your portable oil drain was shipped with the following components. Please be sure you receive them as listed below. Contact us if anything is missing.

Item No.	Description	Qty
1	Low Profile Drain	1
2	3/4" Drain Valve	1
3	T-Handle with bolt	1
4	Front and Rear Wheels	4
5	Expanded Metal Screen	1

Assembly

1. Thread the 3/4" Drain Valve onto the 3/4" drain pipe located on the back of the low profile drain.
2. Check fittings for tightness. The oil drain is now ready for use.

Operating

1. Make sure the 3/4" drain valve is closed by turning the handle clockwise until tight.
2. Roll the drain under the vehicle to be serviced and drain the oil.
3. To empty, position the oil drain over the oil storage receptical and open the drain valve.

Note: Aboveground used oil storage requires the use of adapter kit 61431-2 for suction pump evacuation or JDI-EK for self-evacuation.

**For Service Assistance
Call Toll Free
1-800-433-0708**

JDI-LP4 Assembly & Operating Instructions

Component Check List

Your portable oil drain was shipped with the following components. Please be sure you receive them as listed below. Contact us if anything is missing.

Item No.	Description	Qty
1	Low Profile Drain	1
2	3/4" Drain Valve	1
3	T-Handle with bolt	1
4	Front and Rear Wheels	4
5	Expanded Metal Screen	1

Assembly

1. Thread the 3/4" Drain Valve onto the 3/4" drain pipe located on the back of the low profile drain.
2. Check fittings for tightness. The oil drain is now ready for use.

Operating

1. Make sure the 3/4" drain valve is closed by turning the handle clockwise until tight.
2. Roll the drain under the vehicle to be serviced and drain the oil.
3. To empty, position the oil drain over the oil storage receptical and open the drain valve.

Note: Aboveground used oil storage requires the use of adapter kit 61431-2 for suction pump evacuation or JDI-EK for self-evacuation.

**For Service Assistance
Call Toll Free
1-800-433-0708**