


ALC

36" x 24" CABINET WITH SIDE DOOR

INSTRUCTION AND ASSEMBLY MANUAL-41391

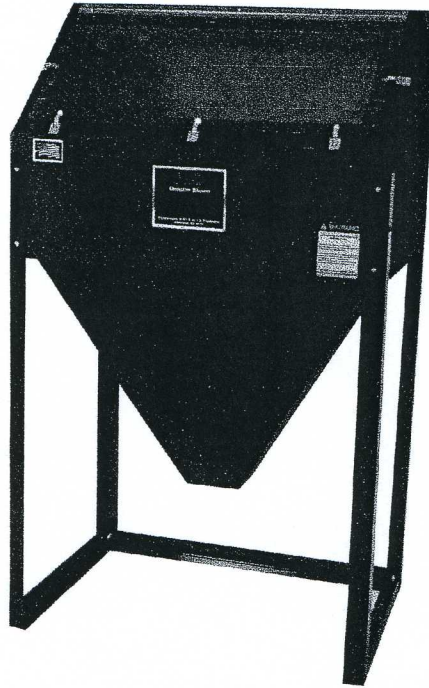

ALC

DIVISION OF S&H INDUSTRIES

5200 Richmond Road • Cleveland, OH 44146

Phone 216-831-0550 • Toll Free 800-253-9726 •

Fax 216-831-9573

www.shindustries.com

E-mail: www.service@shindustries.com

Revised 1/5/07

WARNING!

Do not use an ALC Cabinet Blaster until you have read this manual and you understand its contents and warnings. These warnings are included for the health and safety of the operator and those in the immediate vicinity. Keep this manual for future reference.

Dust created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals known to cause cancer, birth defects or other reproductive harm and respiratory illnesses. Some examples of the chemicals include:

- Lead from lead based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically-treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

Abrasive blasting produces harmful dust. Everyone in the blasting area must wear a properly fitted and properly maintained NIOSH approved air supplied respirator.


SILICOSIS AND OTHER DUST WARNINGS:

Breathing dust from silica sand may cause silicosis, a fatal lung disease. Breathing dust during blasting operations may also cause asbestosis and/or other serious or fatal diseases. A NIOSH-approved, well maintained air supplied abrasive blasting respirator must be used by anyone blasting, anyone handling or using media containing toxic substances or media with more than one percent free crystalline silica and anyone in the area of the dust. Harmful dust can remain suspended in the air for long periods of time after blasting has ceased, causing serious injury or death.

Before removing respirator, use an air monitoring instrument to determine if atmosphere is safe to breathe. Contact local OSHA or NIOSH office to determine the proper respirator for your particular application.


Air supplied respirators do not remove or protect against carbon monoxide (CO) or any other toxic gas. Use a carbon monoxide removal device and monitoring device with the respirator to ensure grade D quality air. Follow all applicable OSHA standards and OSHA regulation 1910.134 (d).

36" X 24" POLYMER CABINET – 41391

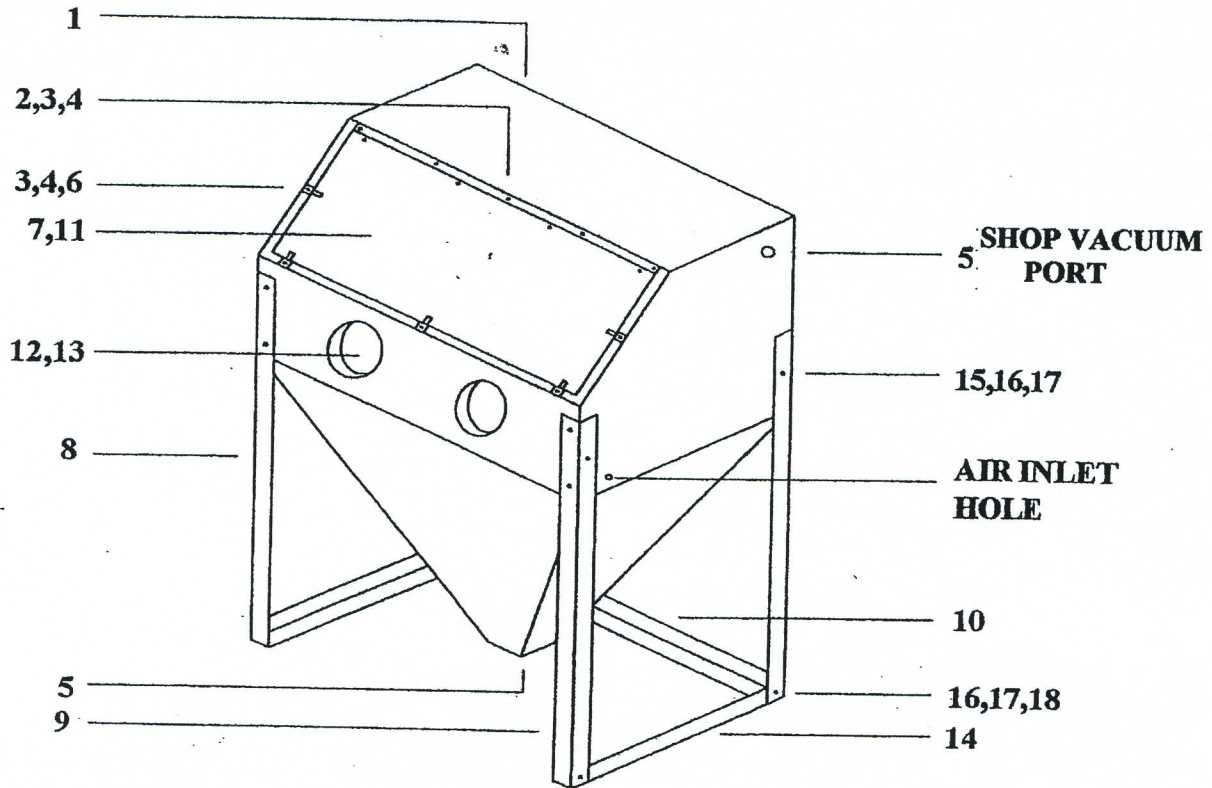


Key	Part No.	Description	Qty.	Key	Part No.	Description	Qty.
1	11646	Louver vent	1	10	11658	Rear support	1
2	11659	Hinge	1	11	11670	Lens underlay	1
3	11160	8-32 x 1/2" Screw	25	12	11640cs	Rubber Gloves	1
4	11161	8-32 Nut	25	13	40240	Glove clamps	2
5	10904	Plug	2	14	11650	Side support	2
6	11644	Snap fastener	10	15	10199	1/4-20 x 1" Bolt	12
7	11647	Lens	1	16	10218	1/4" USS washer	18
8	11652	Leg (LF & RR)	2	17	10201	1/4-20 Nut	18
9	11652	Leg (RF & LR)	2	18	10182	1/4-20 x 1/2" bolt	6
ADDITIONAL PARTS NOT SHOWN ON SCHEMATIC							
	11580	Grate	1		11605	Suction hose	1
	40151	Pick-up tube	1		11604	Blast gun	1
		Side door	1				

36" x 24" POLYMER CABINET SIPHON GUN REPLACEMENTS PARTS

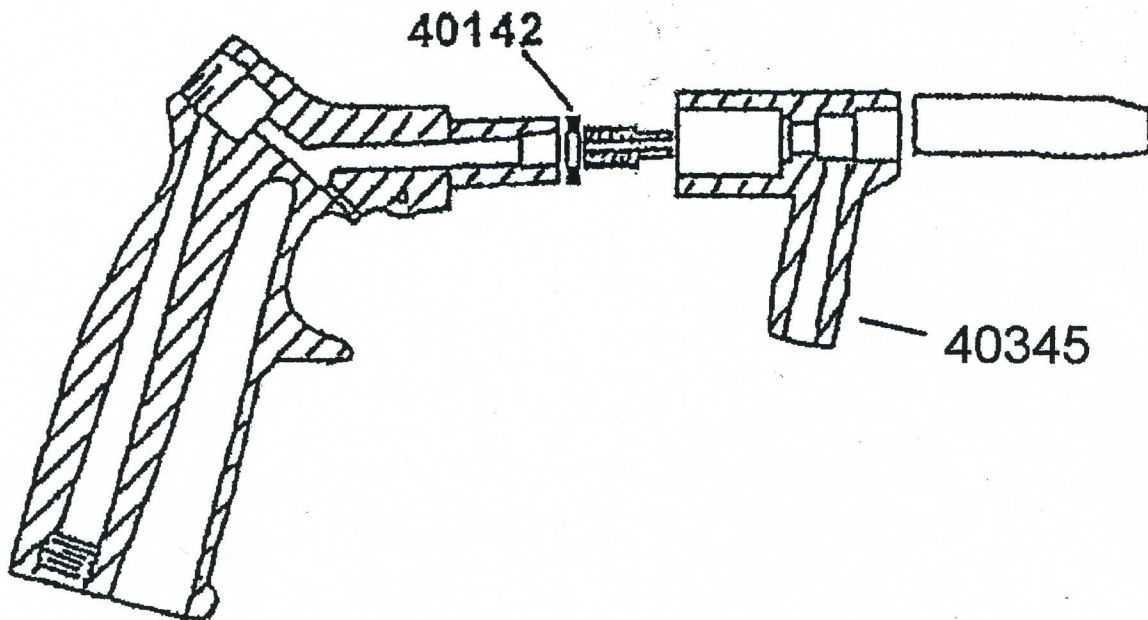

REPLACEMENT PARTS	
ALC Part No.	Description
S1599	Blast gun with 1/4" nozzle, 1/8" air jet
S1555	13/64" Steel nozzle (gold), 7 CFM @ 80 PSI** Nozzle Kit
S1556	1/4" Steel nozzle (silver), 15 CFM @ 80 PSI Nozzle Kit
	5/64" Air jet (gold)** Inc. in Nozzle Kit
	1/8" Air jet (silver) Inc. in Nozzle Kit
40142	Air jet washer
155513	13/64" Ceramic nozzle, 7 CFM @ 80 PSI** Nozzle Kit
155512	1/4" Ceramic nozzle, 15 CFM @ 80 PSI** Nozzle Kit
40345	Siphon head
11605	5' Suction Hose
** = optional, not included	

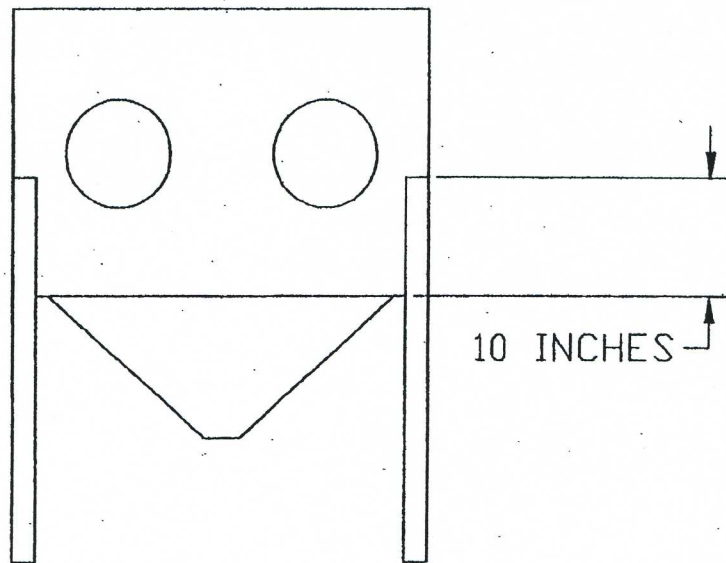36" x 24" POLYMER CABINET**DRAWING SHOWING LEG LOCATION**

Left front leg and right rear leg are not the same as right front leg and left rear leg. Leg top with two holes on one side should point front and rear, not to side of cabinet. Install legs per instructions with top of leg 10 inches up from bottom lip of cabinet. After installation of all corner legs, install side supports and back support.

ASSEMBLY INSTRUCTIONS

1. Lay cabinet on back and set left front leg (11652) at left front of cabinet. Secure leg to cabinet using 1/4-20 x 1" bolt, washer and hex nut. Install other three legs in same manner. After assembly of legs, install side and rear supports using 1/4-20 x 1/2" bolt, washer and hex nut.
2. Take gloves and slip over circular flanges inside the cabinet. Secure gloves to flanges with glove clamps. If cabinet is supplied with 18" rubber gloves, help may be required to stretch gloves over the flanges. This is normal. If cabinet is supplied with 24" rubber gloves, excess material at gauntlet must be folded over before installing glove clamp.
3. Attach hinge to cabinet using 8-32 x 1" screws and 8-32 nuts. Be sure hinge is on top. Holes should line up. Be sure to use the hinge side with a number marked on it on the bottom or window side. Attach window lens to outside of hinge with 8-32 x 1/2" screws and 8-32 nuts. Apply foam to window lens (not cabinet). Lastly, install the protective underlay to the inside of the window lens.
4. Attach abrasive blast hose to pick-up tube on inner portion of pick-up tube leaving 1/4" gap between hose end and outer tube. Lay pick-up tube in bottom of cabinet with hose end towards right rear of cabinet. Attach other end of hose to suction head of gun.
5. Attach pressure inlet hose (not supplied) to 1/4" threaded inlet on gun. If using whip hose inside cabinet, run threaded end through 9/16" diameter hole on lower right side of cabinet and attach quick disconnect nipple to hose end and tighten. If using shop hose directly through inlet hole to gun, the hold may need to be opened to accommodate hose diameter.

WARNING!

Disconnecting hose while Unit is under pressure could cause serious injury or death. Use safety lock pins and safety cables in all coupling connections to help prevent hose couplings from accidental disconnection.

If twist-on type air hose couplings are used, they must be secured by safety lock pins or wires to prevent accidental disconnection while under pressure. Hose disconnection while under pressure could cause serious injury.

CABINET BLASTER SAFETY PROCEDURES

CAUTION: READ THESE SAFETY PROCEDURES IN THEIR ENTIRETY – PARTS OF THE OPERATING INSTRUCTIONS ARE WITHIN THESE WARNINGS.

These procedures are not intended to be exhaustive due to the many variables in the abrasive blasting field. Therefore, we **INSIST** that the hands, ears, mouth, nose and eyes be covered with appropriate safety protection at all times.

ADDITIONAL WARNINGS! CAUTION MUST BE EXERCISED BY USER AT ALL TIMES

- 1. Do not exceed maximum working pressure of 110 PSI. Failure to keep maximum working pressure below 110 PSI can cause the blast machine to burst, causing death or serious injury.**
- 2. Everyone in the blast area including the equipment operator should correctly use and maintain a NIOSH approved air supplied respirator, even after blasting has ceased. Harmful dust can remain suspended in the air for long periods of time after blasting has ceased causing injury or death**
- 3. Before using the cabinet blaster: Put on eye protection, gloves, and NIOSH approved respirator. Always wear these protective items when operating and while servicing your cabinet blaster. A well maintained air supplied blasting respirator must be used by anyone blasting.**
- 4. For safe operation, perform recommended preventive maintenance on blaster cabinet, and accessories. Replace all worn parts before they fail. Immediate replacement of worn components is required. Failure to replace worn components could result in exposing the operator or bystanders to high speed media and compressed air, causing serious injury.**
- 5. Do not use corrosive materials of any type in unit. Use only clean, dry media.**
- 6. Static electricity can be created by the use of this equipment. Do not use within fifty feet of any explosive, potentially explosive substances, or their vapors as an explosion can occur.**
- 7. Do not use this equipment in any area that might be considered hazardous or where flammable gases or liquids are present. Failure to do so may cause an explosion resulting in serious injury.**

OPERATING INSTRUCTIONS

1. Maximum operating pressure is 110 PSI. Air consumption with medium nozzle supplied with cabinet is 15 CFM at 80 PSI.
2. To change abrasive, remove plug at bottom front of cabinet and drain into suitable container. Reinstall plug and pour new abrasive into cabinet.
3. The plug in the right upper side of cabinet is for installation of a shop vac. We strongly recommend the use of a shop vac or the cabinet will leak dust.
4. The 3" hole with louver vent in the upper left rear of the cabinet provides for proper venting of the cabinet during use. Never plug.

AIR COMPRESSOR RECOMMENDATION:

To permit efficient operation of your air compressor, follow these guidelines:

1. Use a smaller size nozzle and air jet to control the demand of air.
2. Do not blast continuously. Stop blasting operation periodically to allow the compressor to cool. No compressor is designed to constantly run at full RPM. Use 70% of the rated output.
3. Use a minimum 1/2" air hose or metal piping from your air compressor to the blaster. If your compressor is creating an excessive amount of moisture, we recommend using a water trap or a moisture separator.
4. The air compressor should be drained at the bottom of the supply tank through a drain valve and should be blown down daily. It is not unusual to drain three or four gallons of water from the supply tank on a high humidity day. An additional supply tank will help.
5. Keep dust and media created by blasting away from the air compressor unit. Observe maximum air pressure requirements for the blaster and either set your compressor to run within these limits or use a pressure regulator valve to reduce the air pressure to the appropriate range.

ABRASIVE (MEDIA) USAGE:

1. If moisture is in the media it will eventually damage the blaster or plug the system. Keep the media and compressor air dry to avoid this problem.
2. If media is moist, screen it and dry it before using.

3. Do not leave media in the tank after blasting because it can absorb moisture and impair blasting performance.
4. Store media in a dry place; keep media off the ground or concrete floors. Put it on a wooden skid.
5. If the humidity is excessively high, it may not be advisable to blast at that time.
6. Consider using different grades or different types of media to prevent nozzle clogging due to high moisture content.
7. Do not use sand.

WARNING!

The threads on the nozzle holder and set screws must be inspected each time the nozzle is secured to the holder. Check the threads for wear, and make sure nozzle set screw securely grips the nozzle. The nozzle washer must also be inspected for wear. Worn nozzle washers cause erosion. A loose-fitting nozzle may eject from the holder under pressure and could cause severe injury

MAINTENANCE

WARNING!

Failure to observe the following before performing any maintenance could cause serious injury or death from the sudden release of compressed air:

- Disconnect power supply.
- Lockout and tagout the compressed air supply.
- Bleed the air supply line to the blast gun.

Immediate replacement of worn components is required. Failure to replace worn components could expose the operator or bystanders to high speed media and compressed air could cause death or serious injury.

Leaks around couplings and nozzle holders indicate worn or loose fitting parts. Nozzle holders and couplings that do not fit tightly on hose and nozzles that do not fit tightly in nozzle holders could disconnect while under pressure. Impact from nozzles, couplings, hoses, or abrasive, and parts disconnected while under pressure could cause severe injury.


MOUNTING INSTRUCTIONS FOR THE ECONOMY LIGHT KIT

1. Using drill dimension sheet, drill 1.467 (1-7/16) hole in left side of cabinet. Drill (2) 0.187 (3/16) holes 1.625 (1-5/8) from center of large hole, one above and one below.
2. Unscrew ceramic lampholder and install base through hole from outside and attach gasket and socket from inside.
3. Attach electrical box to outside of cabinet using 8-32 x 1/2" machine screws and nut. **NOTE:** Attach ground wire (green) to one of the screws that holds the box to the cabinet.
4. Attach neutral wire (white) from power cord to silver screw on socket base.
5. Attach black wire from socket base to one of the screws on the side of the switch.
6. Attach black lead from power cord to the other screw on the side of the switch.
7. Attach switch to box and install cover.
8. Install light bulb (not supplied) maximum 60 watt bulb. Use of larger watt bulb may damage cabinet or create fire hazard.


WARNING

Follow all electrical and safety codes as well as the National Electrical Code (NEC) and OSHA Regulations.

Light Kit Components	
Part No.	Description
11641	Lampholder
11642	Electrical box
11008	Power Cord
11009	Switch
11011	Box Cover
11160	8-32 x ½" Machine Screw (4)
11161	8-32 Nut (4)

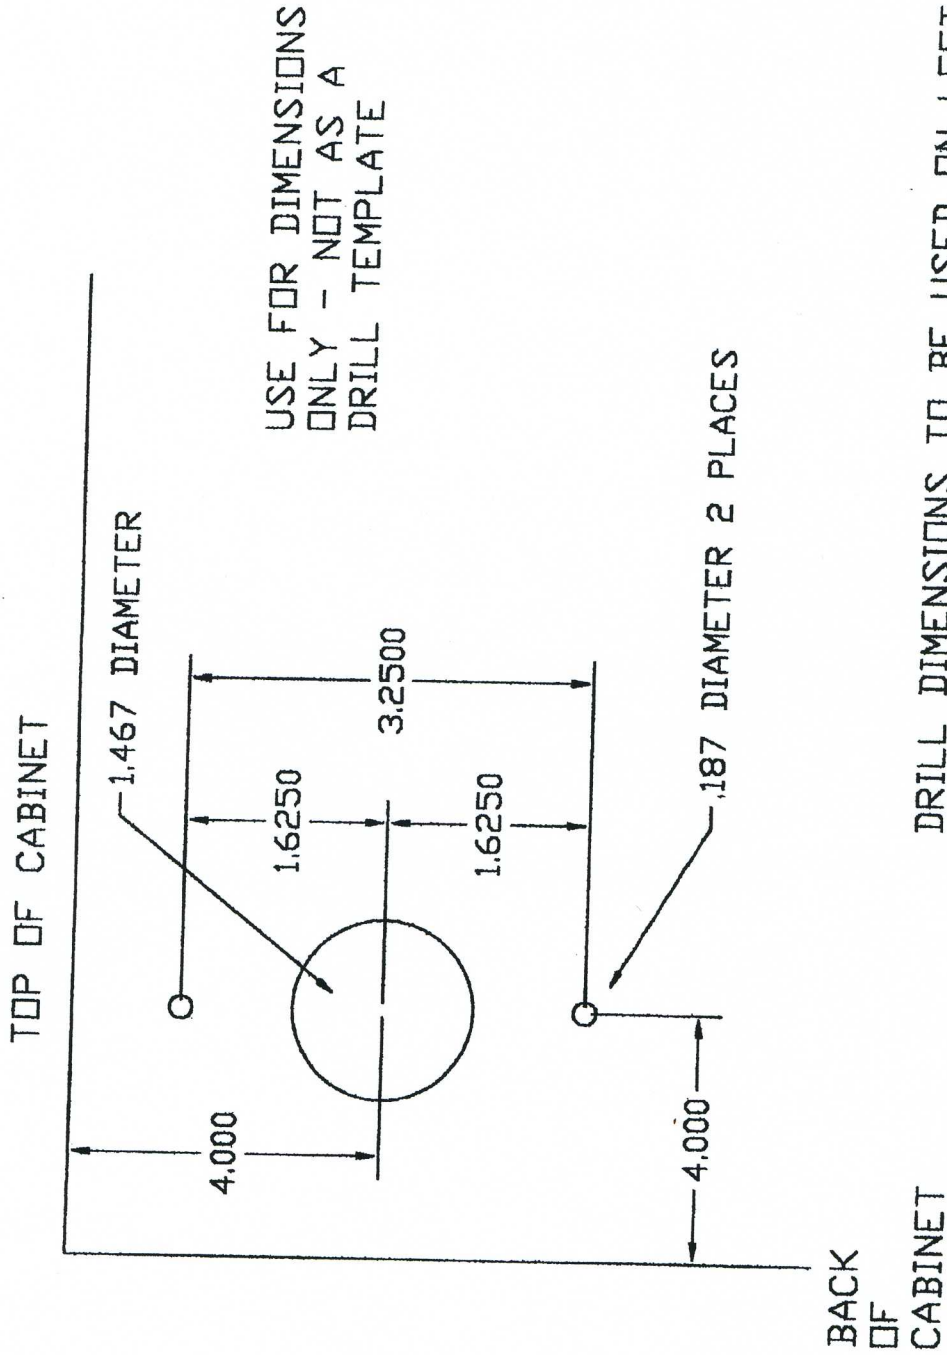

DRILL DIMENSIONS TO BE USED ON LEFT SIDE OF CABINET FOR INSTALLATION OF ECONOMY LIGHT KIT P/N 40338

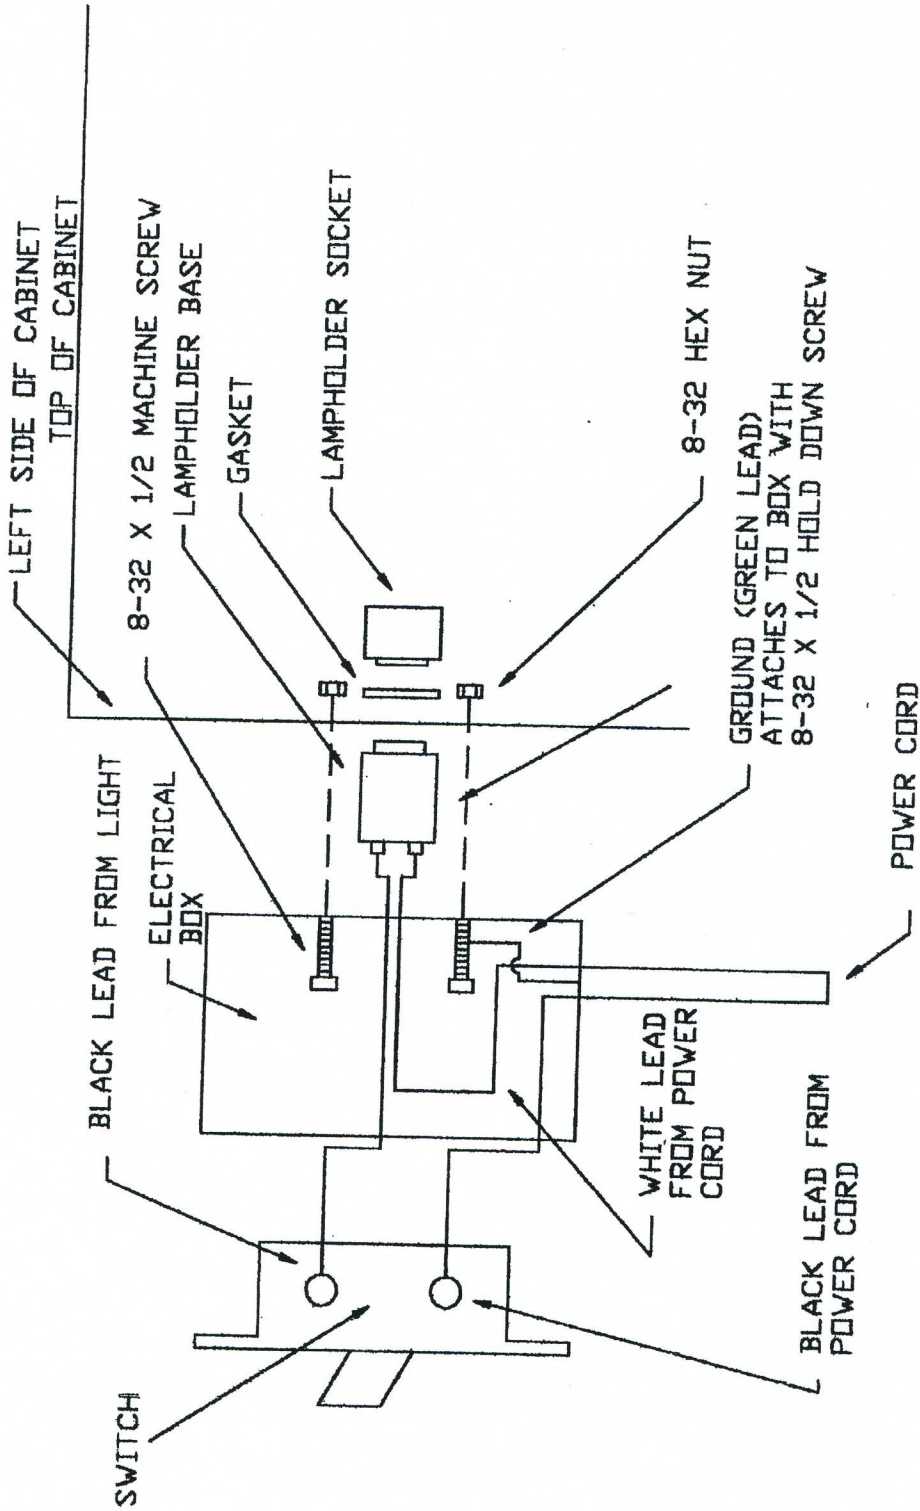

TROUBLESHOOTING TIPS**PROBLEM/CAUSE****POSSIBLE SOLUTION****Surging of blast flow:**

Air pressure too low

Check pressure gauge on air compressor

Excessive media consumption:

Air pressure too low

Check pressure gauge on air compressor

Clogging and plugging of blast flow:

Debris in media

Media size too large

Nozzle plugs

Wet media

Purge and screen

Use smaller grit size

Use larger nozzle and correct

Dry media, drain water from air

Moisture in abrasive media:

Wet media

Water in air

Change or use dry media

Drain water from air lines

Humid weather:

Moderate humidity

Moderate humidity

High humidity

Keep media as dry as possible

Use drier or moisture separator

Avoid that period of use if possible

Overtaxed Compressor:

Compressor too small

Nozzle size too large

Too many leaks in plumbing

Holes in abrasive hose

Air filter on compressor plugged

Restrict time used

Use smaller size

Seal and tighten plumbing

Replace hose

Clean or replace filter

Lack of air pressure:

Compressor too small

Supply valves not on full position

Nozzle size too large

Leaks in plumbing

Holes in abrasive hose

Air filter on compressor plugged

Use smaller nozzle

Open valves

Use smaller size

Seal and tighten plumbing

Replace hose

Clean or replace filter

Lack of abrasive flow:

Blaster empty

Moisture in media

Not enough air pressure

Abrasive hose kinked

Debris in media

Fill cabinet

Dry media

Check system

Straighten hose

Clean or screen media

Black Beauty # S1584

Black Beauty is used when paint and rust has to be removed from steel, such as car bodies, tanks or heavy machinery. Black Beauty is superior to silica because it only has .1% free silica, is faster cutting, can be re-used, is moisture free, and will not pack or absorb moisture. (25 Lb. container)

Steel Grit #1587

Steel grit is extremely fast cutting on rusty metal and hard to remove paint. Steel Grit is popular because it leaves a very smooth finish. It is also comparable in price to most other specialty abrasives. Steel Grit is recommended in reclaim systems or cabinets. (25 Lb. container)

Glass Bead #S1586

Glass Bead is used in creating a satin or matte finish. Glass Bead is recommended in reclaim systems or cabinets. (25 Lb. container)

Aluminum Oxide #S1585

Aluminum Oxide is a high quality abrasive that is sharper than sand (not recommended) and cuts twice as fast as sand. It leaves a smooth textured finish with no pits or burrs. Aluminum Oxide is rougher than glass bead and can be used over and over again. It is one of the most economical abrasives you can use in any reclaim systems or cabinets. (4/25 Lb. container)

Plastic Grit #155686

Primarily used to strip aluminum and fiberglass. Great for stripping paint, light oxidation and surface rust. Recommended for use in blast cabinets because it creates very little dust. Works quickly, last a long time and increases visibility within the cabinet. (10 Lb. container)

Walnut Shells #S1588

Walnut shells are recommended for use on "soft" surfaces such as aluminum, glass, wood, and other areas where no pitting is desired. Leaves a smooth, dull finish. (10 Lb. container)

Disclaimer of Warranties. S & H Industries, Inc. ("Seller") makes no warranties with respect to any goods delivered to Buyer or users except as specifically set forth within this manual. S & H INDUSTRIES, INC. MAKES NO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ANY OF THE GOODS, AND S & H INDUSTRIES, INC. EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES AGAINST INFRINGEMENT. S & H INDUSTRIES, INC. WARRANTIES SHALL NOT APPLY TO ANY DAMAGE OR NON-CONFORMITY RESULTING FROM THE NEGLIGENCE OF IMPROPER ASSEMBLY OR USE OF ANY GOODS BY USERS OR BUYER OR ITS EMPLOYEES OR AGENTS, OR FROM ALTERATION OR ATTEMPTED REPAIR BY ANY PERSON OTHER THAN S & H INDUSTRIES, INC. ALL USED, REPAIRED, MODIFIED OR ALTERED ITEMS ARE PURCHASED AS-IS AND WITH ALL FAULTS.

Indemnification Agreement. Buyer agrees, to the fullest extent permitted by the law, to fully indemnify, hold harmless, and defend Seller, its parent, subsidiary, and affiliated companies, its owners, officers, directors, employees, agents, representatives and insurers (collectively, "Indemnities") from and against any and all claims, demands, suits, damages, judgments of sums of money, losses and expenses, including but limited to attorney's fees and costs (collectively "referred to herein as "Claims") arising out of or resulting from any bodily injury, sickness, disease or death or injury to or destruction of tangible property, arising out of or resulting from the use, sale or distribution of any and all products purchased from Seller by Buyer, regardless of whether or not such claim arises in whole or in part out of Seller's alleged fault, including but not limited to Seller's negligence, strict liability, products liability, breach of warranty or any other act or omission. Buyer expressly waives any and all immunity from suit by Seller, its parent, subsidiary, and affiliated companies, and its owners, officers, directors, employees, agents, representatives and insurers, by operation of any workers' compensation law or statute. **By purchasing from S & H Industries, Inc., Buyer acknowledges and represents that Buyer has read, fully understands and agrees to the Indemnification provisions set forth above.**

LIMITED WARRANTY

S& H Industries Inc. warrants this product to be free from defects in materials or workmanship for two years after the date of original purchase.

If the product should become defective within that warranty period, we will repair or replace it (at our option) free of charge including return transportation to you provided you deliver it prepaid to S & H Industries Inc., 5200 Richmond Road, Bedford Hts., Ohio 44146.

This warranty does not include damage resulting from accident, abuse or misuse of the product. Nor does it apply to parts subject to abrasive wear, i.e., nozzles, air jets, seal blocks, valves, hose connections and hoses.

Implied warranties including those of merchantability and fitness for a particular purpose are excluded to the extent permitted by law, and any and all implied warranties are excluded. This is the exclusive remedy and liability for consequential damages under any and all warranties are excluded to the extent exclusion is permitted by law.