

 
FlowPro®

Oil Filled Radiator Heater

MODEL: 02036

INSTRUCTION MANUAL

READ AND SAVE THIS INSTRUCTION

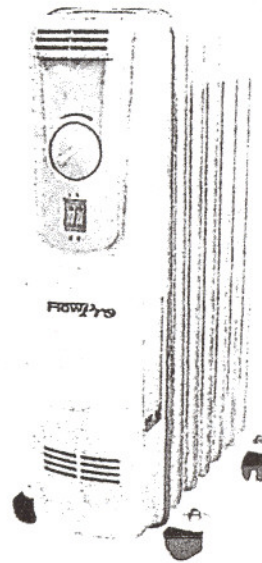

Please read these instructions carefully and keep for future reference.




IMPORTANT INSTRUCTIONS

WARNING! When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, burns and other injury, including the following:

1. Study this instruction manual carefully before using the product.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic, bags).
4. Check the household voltage to ensure it matches the heater's rated specification.
5. Check the power cord and plug carefully before use to make sure that they are not damaged.
6. Before unplugging the power cord, be sure to turn off the power. When touching the unit, be sure your hands are dry to prevent from electric shock.
7. Do not use near or point the heater to furniture, curtains or other inflammable objects, keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
8. Do not block air intakes or exhaust in any manner to prevent a possible fire.
9. Do not use or leave the heater unattended when children, old or disabled people are present.
10. Always unplug heater when not in use.
11. Prevent water from getting into the housing of the heater during operation or in storage. Always store in dry area with no moisture.
12. Do not use in places where there are gas, paint or other inflammable goods and objects.
13. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
14. Do not run the cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
15. Do not use on soft surfaces, like a bed, where openings may become blocked.
16. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
17. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
18. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, use handles when moving this heater.



19. Use this heater only as described in this manual. Any other uses not recommended by the manufacturer may cause fire, electric shock, or injury to persons and may void warranty.
20. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord must be No.14 AWG minimum size and rated not less than 1875 watts.
21. Do not use outdoors.
22. This product uses a three grounded (3 blade) plug. **CAUTION:** The grounded plug must be used with a grounded outlet. Do not use an adaptor in a 2-slot wall outlet unless the ground lug of the adaptor is properly connected to a known building ground. Failure to use heater with properly grounded outlet or adaptor could result in an electric shock hazard.

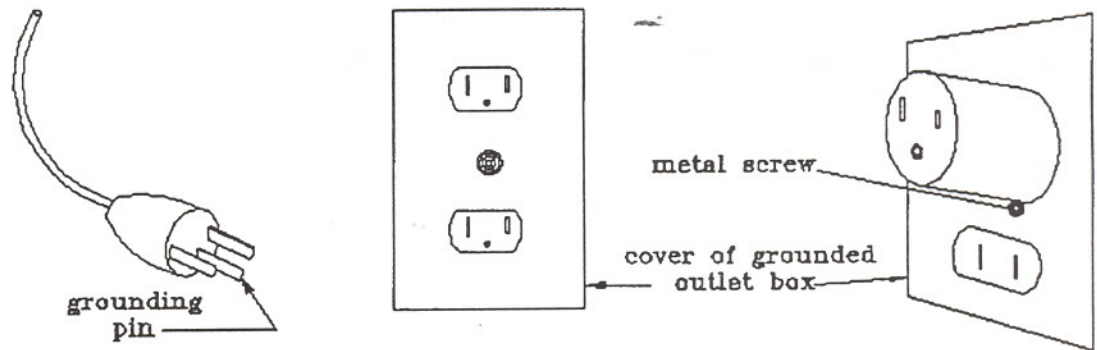

SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.

ELECTRIACAL RATINGS


This product is rated 12.5AMPS (1500W) at 120V, 60Hz

ASSEMBLY


DO NOT OPERATE THE HATER WITHOUT THE WHEEL BASE ASSEMBLIES IN PLACE.THE HEATER MUST ALWAYS BE USED IN AN UPRIGHT POSITION.

1. Make sure heater is unplugged from wall outlet.
2. Insert the "U" shape screw into hole of supporting plate.
Install multidirectional rolling wheels to each end between the first and the second groups of the radiating flanges.
3. Let the "U" shape screw surrounding the dome of the radiating flanges, then insert it into another hole of the supporting plate.

4. Insert the butterfly nuts and screw them tightly counter clockwise.

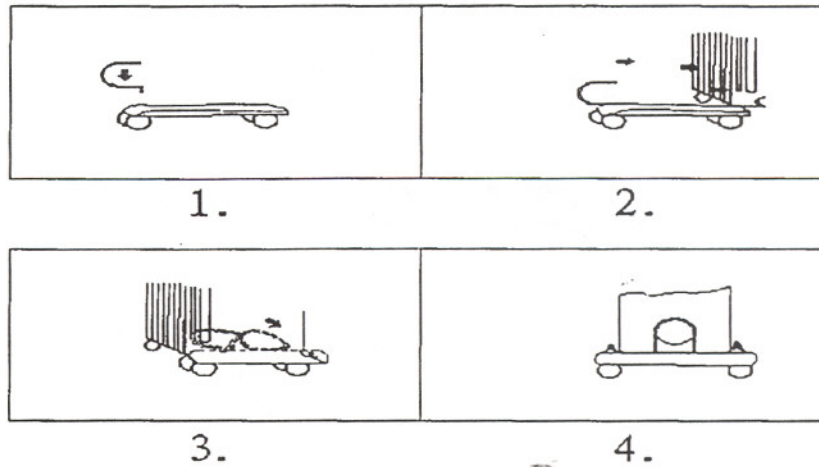

OPERATION

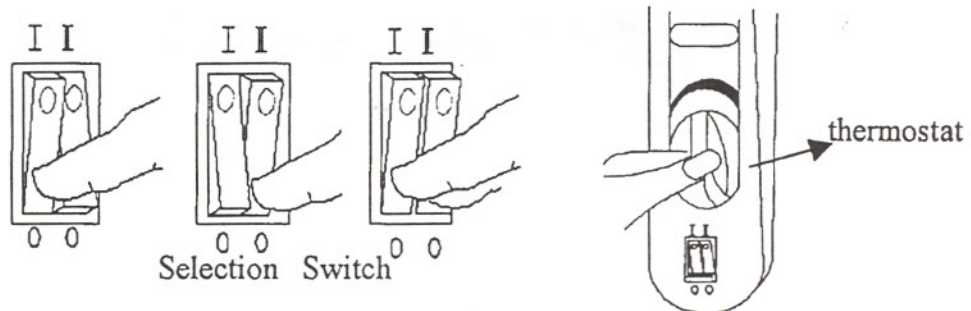

- Place the heater on a firm, level floor free from obstructions, and at least 3ft. (0.9m) away from any wall or combustible material.
 - With the selection switch in the OFF position, plug the heater into a 120V, minimum 15A grounded AC wall outlet. This heater is not intended for use with an extension cord.
 - The heater has three power settings for your comfort, pushing the switch I only will give 600 watts of the heat. Pushing the switch II only will give 900 watts of the heat. Pushing both switches simultaneously will give you 1500 watts of the heat.
 - Before setting the thermostat, allow the heater to operate and warm up the room. You need to set the thermostat on HIGH setting to start the heater.
 - When the desired temperature/comfort level is reached, lower the thermostat setting until the heater stops operating. The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.
 - It is normal for the heater to cycle ON and OFF as it maintains the present temperature. To prevent the unit from cycling, you need to change the thermostat setting.
 - Turn the selection switch to OFF and unplug the heater when you finished using it.
- Note: The symbols on the thermostat are for reference purposes only.**

NOTE: THIS RADIATOR HEATER IS OIL FILLED AND WILL COOL DOWN SLOWLY AFTER THE POWER IS SHUT OFF.

ALLOW THE RADIATOR HEATER TO COOL PRIOR TO ANY MOVEMENT.PLEASE USE THE BUILT-IN CARRYING HANDLES FOR SAFE PORTABILITY.

IF YOUR HEATER FAILS TO OPERATE:

- Be sure it is plugged in and that the electrical outlet is working.
- Check for any obstruction. If you find an obstruction, turn the heater OFF. Unplug the heater and wait for it to cool. Carefully remove the obstruction. Plug the heater back in and restart it as described under OPERATION.
- If you still notice the same defect above mentioned, remove the plug from the socket and have the appliances serviced by authorized service personnel only.
- Check that the thermostat is not set too low. With the selection switch set to a heat setting, turn the thermostat up (clockwise) until the heater restarts.

CLEANIGN AND STORAGE

We recommend that the heater be cleaned at least once a month and before off season storage.

- Turn the heater OFF and unplug it .Allow it to cool.
- Use a dry cloth to clean the external surfaces of the heater.

DO NOT USE WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.

- Clean your heater using the above mentioned steps, then pack the heater in its original container and store it in a cool dry place.

SPECIFICATIONS

Model No.	02036(SMF-7-150B)
Voltage	120V
Frequency	60HZ
Output Power (W)	1500W
Electric Current (A)	12.5 A
Dimensions	387(L)×155(W)×630(H)(mm)
Net Weight	10.5KG

If you should have any operation questions, contact us
toll-free at 1-800-295-4448.