

Professional 15 Gallon Fuel Station™

Tools Required:
11/32" drill bit
Adjustable wrench
Pliers




Contents:

- 1 - Metal fuel nozzle (A)
- 1 - 1/2" Brass nipple
- 1 - 1/2" Brass ball valve, female to female (B)
- 1 - 90° Brass elbow, male to female (C)
- 1 - Vented Cap
- 1 - Roll Teflon tape
- 1 - 6' fuel hose
- 4 - 1 1/2" x 5/16" bolts
- 4 - nuts
- 4 - locking washers
- 8 - flat washers

Assembly instructions

1. Use Teflon tape for all threaded male connections. Wrap each thread at least 3 times for optimum sealing.
2. Thread brass elbow into tank and tighten until parallel with tank (Drawing A)
3. Insert 1/2" brass nipple into elbow and tighten. (Drawing B)
4. Attach brass valve onto end of assembly and tighten with wrench. **IMPORTANT:** In order for valve to properly operate, the valve handle should not touch the mounting surface or the tank. When in the proper tightened position, the handle will be perpendicular to the valve (Drawing C and D)
5. Attach smaller male end of clear fuel hose to brass valve. (Drawing E)
6. Attach fuel nozzle to opposite end with the large male threads of fuel hose. (Drawing F)

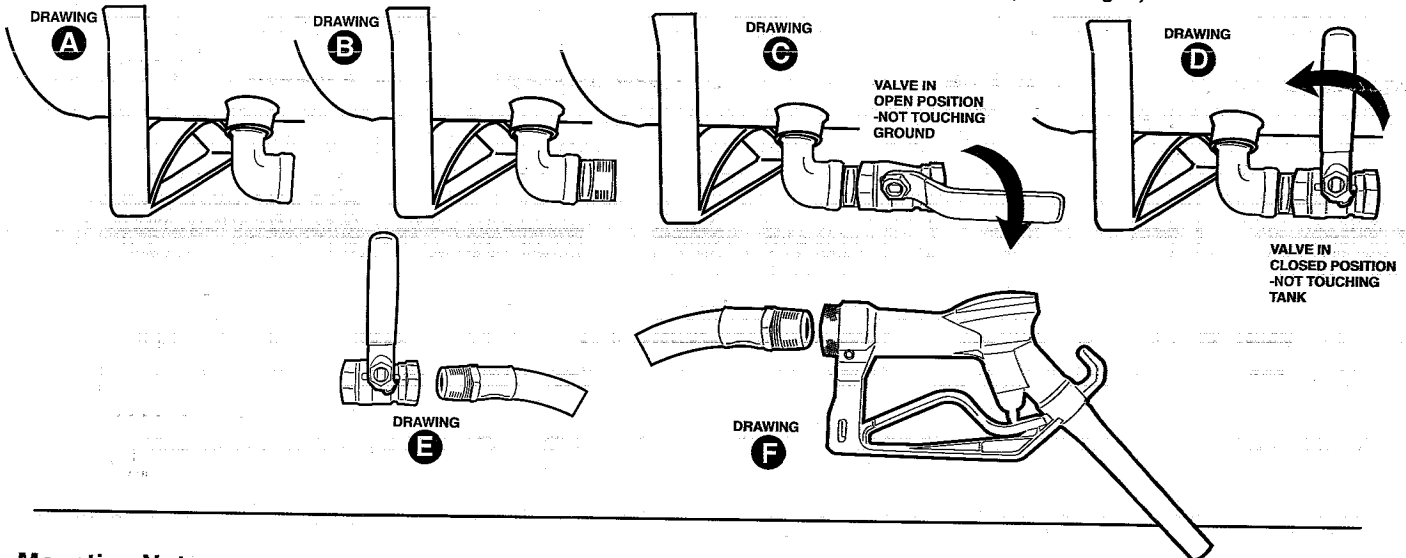

Mounting Notes:

- Tank **MUST** be mounted and grounded for safe use and transportation to avoid potential static electricity charge. This unit is not designed to be used as a portable fuel container.
- Recommended mounting is to a metal frame. If not securing to a metal surface, use a ground wire to avoid potential static danger.
- To achieve proper gravity flow, unit must be mounted higher than the receptacle being fueled. Mount on flat surface.

Mounting Instructions

1. Using 11/32" drill bit, drill holes through mounting surface to align with pre-drilled holes in unit.
2. Place bolt through flat washer, tank leg, and flat surface on which unit is being mounted.
3. Lace a second flat washer through bolt on underside.
4. Lace locking washer over flat washer on underside.
5. Tighten nut down with wrench until firmly fixed in place.
6. Repeat on remaining three holes in tank.

Filling Instructions

1. Remove vented cap from top of tank and fill normally.
2. Do not exceed 14.3 gallons (95% capacity) when filling to allow for gasoline expansion.

Usage Instructions

1. Open brass valve to open position by pulling handle parallel to valve assembly.
2. Insert nozzle into fuel receptacle and squeeze trigger to initiate flow.
3. Release trigger on nozzle to stop fuel flow.
4. **Close brass valve to off position NOTE: Leave enough room in receptacle to hold remaining fuel in hose after valve had been closed.**
5. Drain remaining fuel in hose into receptacle to eliminate any fuel remaining in hose.

If you have any questions regarding the proper installation or use of this product, please call Blitz USA at 877-922-5489 for assistance