

To change the hydraulic fluid, please follow below steps.

1. Lower the platform to the lowest position, loosen the screw (part 13), remove the chain (part 33), loosen the U shape bolt (part 16) and bolt (part 7), remove the whole outer oil cylinder (part 46).
2. Loosen screw (part 48), put the piston rod (part 44) out, inverted the outer oil cylinder (part 46) and put it in about 760ml container, in this way the oil will flow out.
3. Put the outer oil cylinder (part 46) back, add the 32# oil from the cylinder cover (part 39), then put the piston rod (part 44) back, push it to the bottom. Tighten the screw (part 48).
4. Put the whole outer oil cylinder (part 46) back, tighten the U shape bolt (part 16) and bolt (part 7), add the chain (part 33), tighten the screw (part 13).