



"Transfer/Auxiliary" Fuel Tanks

Transfer/Auxiliary Tanks have a Reinforced 2" Coupling for Installation of a Hand or Electric Fuel Pump. (*Transfer Tanks provided with a Withdrawal Coupling can also be used for Auxiliary Fueling.*)