


PARTS LIST

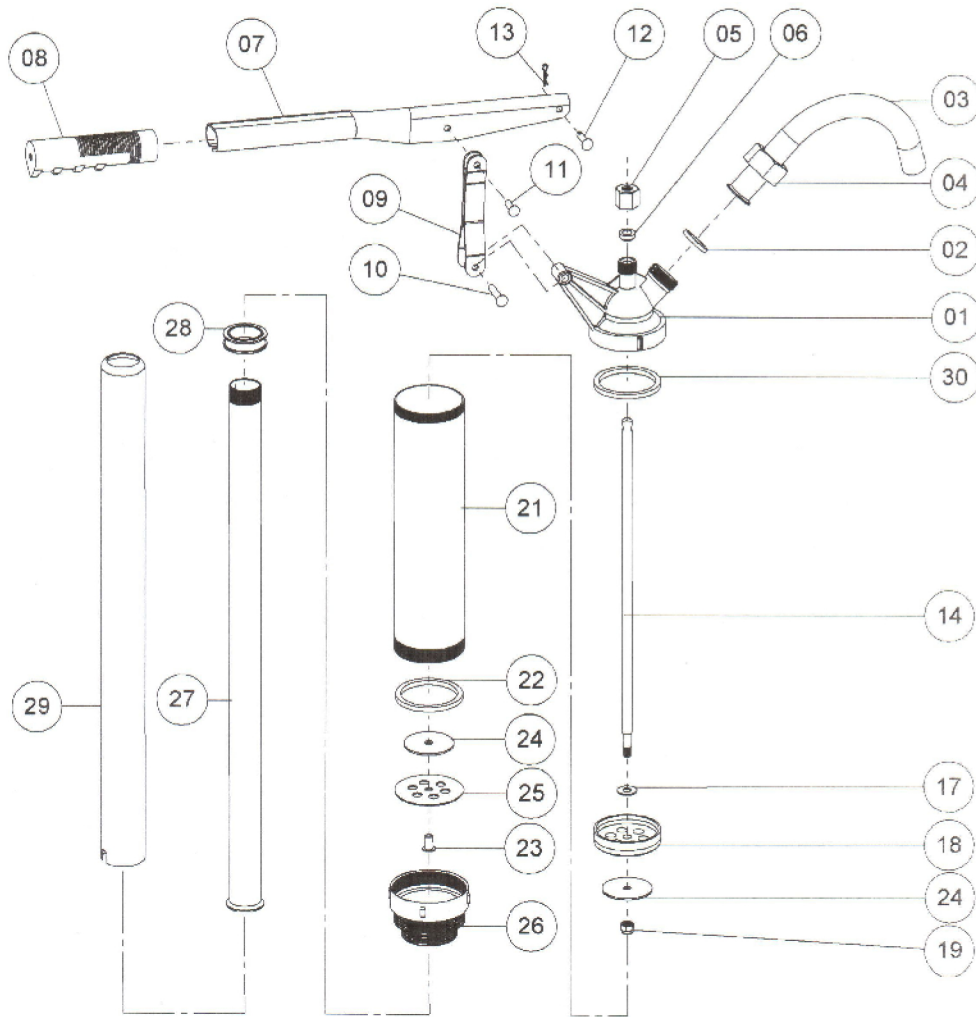

REF NO.	DESCRIPTION	Q'TY
1	Cylinder Cap	1
2	Spout Seal	1
3	Discharge Spout	1
4	Coupling Nut	1
5	Piston Rod Nut	1
6	Piston Rod Seal	1
7	Handle	1
8	Coated Vinyl Grip	1
9	Handle Lever	1
10	Lever Rivet	1
11	Lever Rivet	1
12	Handle Rivet	1
13	Split Pin	1
14	Piston Rod	1
17	Washer	1
18	Upper Piston	1
19	Valve Nut	1
21	Cylinder Body	1
22	Seal	1
23	Rivet	1
24	Piston Washer	2
25	Piston	1
26	Bung Adaptor	1
27	Suction Tube	1
28	Tube Seal	1
29	Extension Tube	1
30	Seal	1