


INSTRUCTIONS FOR LEVER TYPE BARREL PUMP

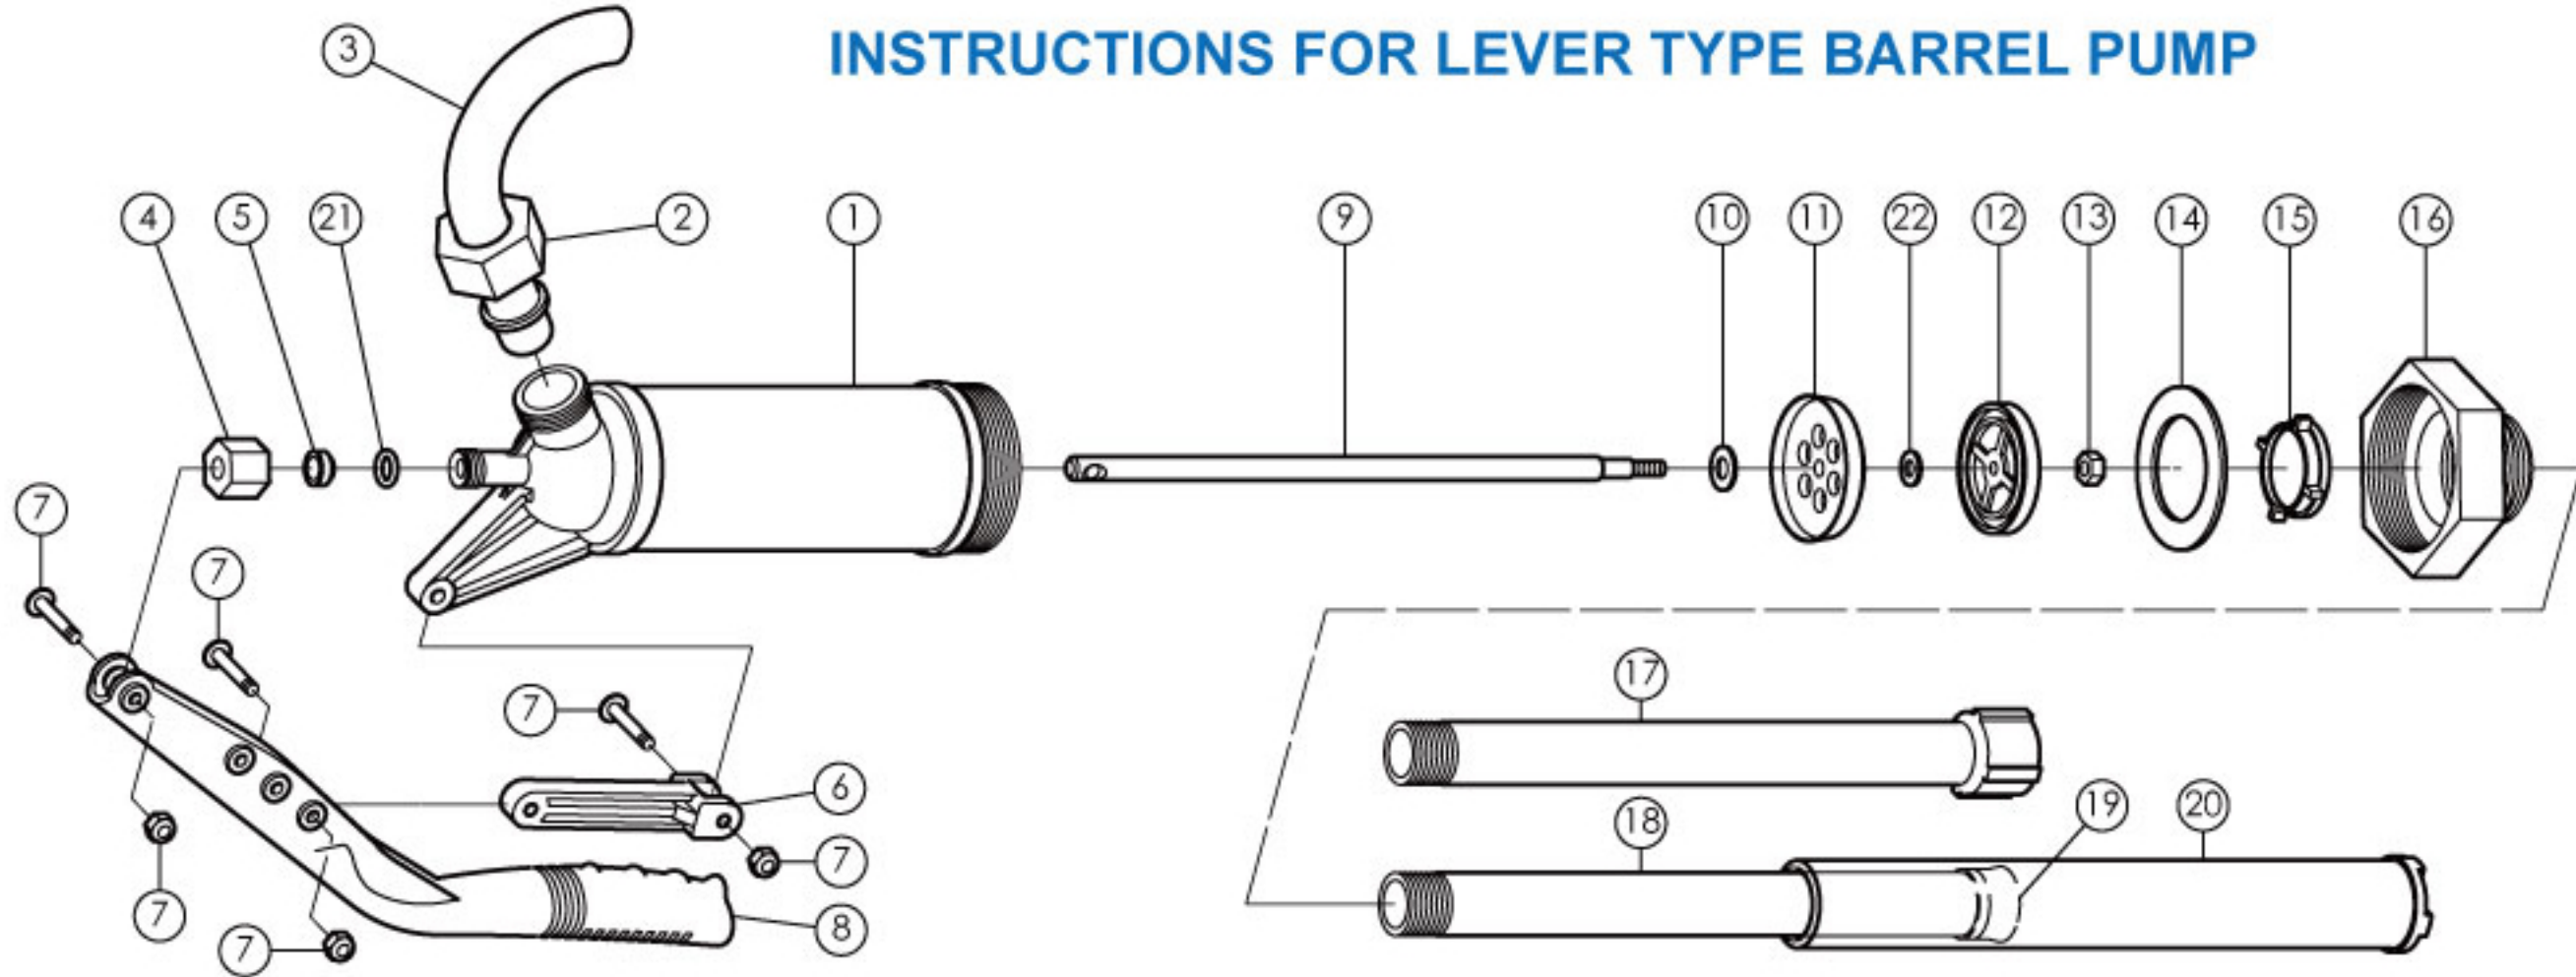

PART LIST

PART NO	DESCRIPTION	QUANTITY
1	Pump Body	1
2	Coupling Nut	1
3	Spout	1
4	Piston Rod Nut	1
5	Piston Rod Seal	1
6	Handle Lever	1
7	Nut & Screw	3 & 3
8	Handle	1
9	Piston Rod	1
10	Valve Plate	1
11	Valve Base	1
12	Rod Plate	1
13	Valve Nut	1
14	Foot Valve Seal	1
15	Base Plate	1
16	Base	1
17	Tube	1
18	Upper Telescopic Tube	1
19	Telescopic Tube Seal	1
20	Bottom Telescopic Tube	1
21	O Ring	1
22	Valve	1