



8GAL STEEL OIL DRAIN

OWNER'S MANUAL



WARNING:

Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item # 41464

Thank you very much for choosing a Roughneck product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This product is designed for certain applications only. The manufacturer cannot be responsible for issues arising from modification. We strongly recommend this product not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the product until you have first contacted us to determine if it can or should be performed on the product.

For technical questions, please call **1-800-222-5381**

Intended Use

Works great for low-profile applications.

TECHNICAL SPECIFICATIONS

Item	Description
Capacity	8 gallons
Dimensions:	30.6in.L x 15.75in.W x 7.85in.H
Includes:	3in. front swivel caster, 3in. rear wheel and T-bar handle

GENERAL SAFETY RULES



WARNING: Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.



CAUTION: Do not allow persons to operate or assemble this 8gal steel oil drain until they have read this manual and have developed a thorough understanding of how the 8gal steel oil drain works.



WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

SAVE THESE INSTRUCTIONS

WORK AREA

- **Keep work area clean**, free of clutter and well lit. Cluttered and dark work areas can cause accidents.
- **Keep children and bystanders** away while operating a 8gal steel oil drain. Distractions can cause you to lose control, so visitors should remain at a safe distance from the work area.
- **Be alert of your surroundings.** Using a 8gal steel oil drain in confined work areas may put you dangerously close to cutting tools and rotating parts.

PERSONAL SAFETY

- **Stay alert**, watch what you are doing and use common sense when using a 8gal steel oil drain. Do not use a 8gal steel oil drain while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating the 8gal steel oil drain may result in serious personal injury.
- **Dress properly.** Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- **Use safety apparel and equipment.** Use safety goggles or safety glasses with side shields which comply with current national standards, or when needed, a face shield. Use a dust mask if working in dusty work conditions. This applies to all persons in the work area. Also use non-skid safety shoes, hardhat, gloves, dust collection systems, and hearing protection when appropriate.

Important Safety Considerations

8GAL STEEL OIL DRAIN USE AND CARE

- **Do not modify the 8gal steel oil drain in any way.** Unauthorized modification may impair the function and/or safety and could affect the life of the equipment. There are specific applications for which the 8gal steel oil drain was designed.
- **Always check for damaged or worn out parts before using the 8gal steel oil drain.** Broken parts will affect the 8gal steel oil drain operation. Replace or repair damaged or worn parts immediately.
- **Store 8gal steel oil drain.** When 8gal steel oil drain is not in use, store it in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.

ASSEMBLY

See parts diagram for reference during assembly

1. Install the Reservoir (#2) on the Wheel (#12) with Spring Washer (#10), Bolt (#11) and Locking Nut (#13).
2. Attach the Caster (#8) to the bracket at the front of the reservoir (#2); secure with Spring Washer (#10) and Nut (#9).
3. Install the Handle (#4) on the Reservoir (#2) with Bolt (#7) , Lock Nut (#6).
4. Tighten the Ball Valve (#5) onto the Reservoir (#2).
5. Put the Filter Screen (#1) onto the Reservoir (#2).

OPERATION




WARNING: Follow all safety precautions outlined in this manual and the vehicle manual.

1. Move the Oil Drain under the vehicle, making sure the Opening of Reservoir is positioned directly below the oil drain plug of the engine.
2. Remove the oil drain plug of the engine, and allow the old oil to completely drain from the engine into the Reservoir.
3. Once the old engine oil is completely drained, replace the oil drain plug of the engine and refill, if needed.
4. When emptying the old oil from the Reservoir of the Oil Drain, make sure to follow guidelines for engine oil disposal. If necessary, contact your local solid/liquid waste authority for information on recycling and/or disposal. Open the Ball Valve (#5), drain the wasted oil into the specific collecting container area.

MAINTENANCE

- **Maintain your 8gal steel oil drain.** It is recommended that the general condition of any 8gal steel oil drain be examined before it is used. Keep your 8gal steel oil drain in good repair by adopting a program of conscientious repair and maintenance. If any abnormal vibrations or noise occurs, have the problem corrected before further use. Have necessary repairs made by qualified service personnel. Before each use, inspect the general condition of the Oil Drain. Check for broken or bent parts, loose or missing parts, and any condition that may affect the proper operation of the product. If a problem occurs, have the problem corrected before further use. **Do not use damaged equipment.**
- When cleaning, use a clean cloth with detergent or mild solvent. Then, store the Oil Drain in a safe and dry location.

DIAGRAM & PARTS LIST

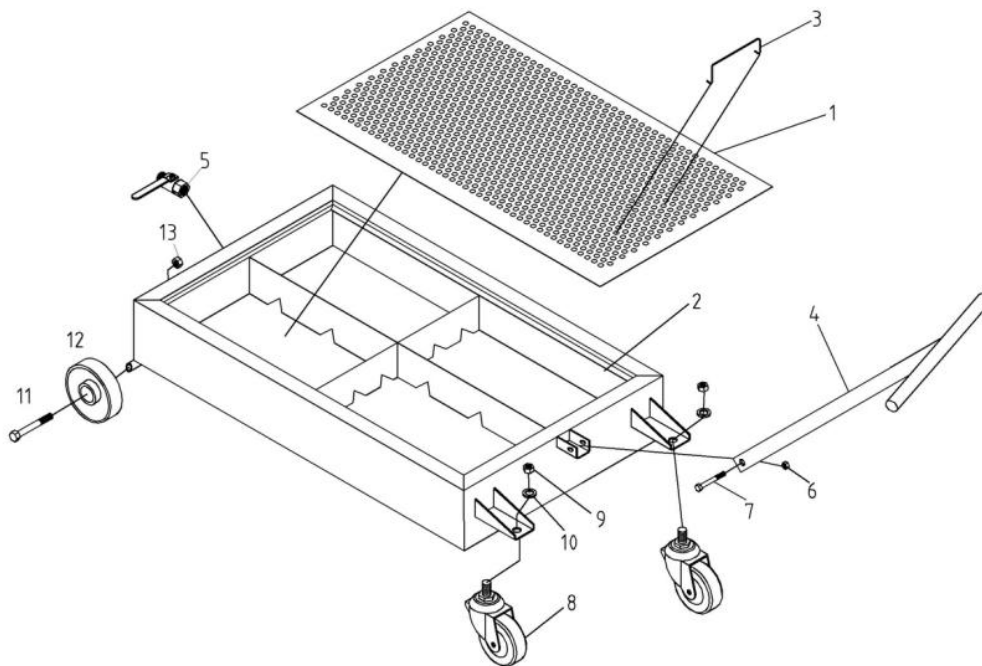

Ref #	Description	Qty	Ref #	Description	Qty
1	Filter Board	1	8	Caster Ass'y	2
2	Reservoir	1	9	Nut M12	2
3	Handle	1	10	Spring Washer 12	2
4	Handle Ass'y	1	11	Bolt	2
5	Ball Valve	1	12	Wheel	2
6	Lock nut M8	1	13	Locking Nut	2
7	Bolt M8*40	1			

For replacement parts and/or technical questions, please call **1-800-222-5381**.

WARRANTY: One-year Limited Parts Warranty



Distributed by
Northern Tool + Equipment Co., Inc.
Burnsville, Minnesota 55306-6936
Made in China