



**HIGH VELOCITY AIR CIRCULATOR**

**MODEL: HVW-18M**

**HVW-14M**

**UL #E144918**

**OWNER'S MANUAL**



**Indoor/Outdoor Fan**

**READ & SAVE THESE INSTRUCTIONS**

# HIGH VELOCITY WALL MOUNT FAN

## OPERATION INSTRUCTIONS

### **CAUTION:**

Read and follow all instructions before operating fan. Do not use if any part is damaged or missing.

### **WARNING:**

To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit the outlet, contact a qualified electrician. Do not attempt to bypass this procedure.

### **RULES FOR SAFE OPERATION:**

- Do not insert finger or any objects through the grill guard when fan is in operation.
- Disconnect fan when moving from one location to another.
- Disconnect the fan when removing guards for cleaning
- Do not use fan in window. Rain and moisture may create an electrical hazard.
- Make sure fan is on a stable, flat surface when in operation.

### **OPERATION INSTRUCTIONS:**

**TO ADJUST AIRFLOW UPWARD OR DOWNWARD:** Tilt the head of the fan to the desired angle.

**SPEED CONTROL:** Pull gently on chain to change the setting on the speed control to the desired setting—low, medium or high.

**FOR PERMANENT FAN MOUNTING ONLY:** Install fan onto solid vertical surface with appropriate 3/8" hardware through the large mounting hole in bracket.

### **CLEANING**

**WARNING:** Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed.

Use soft damp cloth then wipe with dry cloth .Do not use harmful cleaners. Do not bend the blades.

If you should have any operation question, contact us toll free at 800-998-2398.

PRINTED IN CHINA

JDVW