

Instructions: Deluxe Class C RV Cover

⚠WARNING:

Installation is best done with two people. **Never install on a windy day or when the roof is slippery. Please take care when you are on a ladder or the roof.**

CAUTION

Installation and removal is safer and easier when done by two people. **Please consult your RV owners manual.**


Tools Needed:

Scissors
Matches or lighter (optional)
Screwdriver (usually Phillips head)
for roof antennas

Installation

Note: Your cover has been packed so that when unrolled on the roof it is in the proper position for installation.

1. Cover or tape any sharp edges on your RV that could wear against your RV cover. Be sure to lower any roof antennas.
2. Carefully climb up on the roof and take your cover out of its storage bag. Place the rolled-up cover at the front center of the roof and unroll down the center of the RV.
3. Starting at the front, unfold your cover from the center outwards.

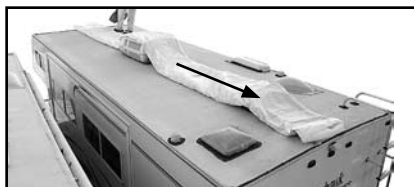

Continue unfolding the cover as you work toward the back, letting it fall over the sides of your RV. Make sure the corners of the cover are at the corners of your RV.

4. Climb down the rear ladder and locate the ladder cap. (The cap helps



keep the top of the ladder from stressing the cover). Fit it over the



ladder top and attach it to the rungs with the hook and loop straps. Now pull the back end of the cover down the back of your RV.

5. Your cover is equipped with triple zippers on the front side panels. These zippers allow the cover to fit RVs with mirrors that do not fold against the RV. Zip all three zippers down to the mirror height, then zip the bottom zipper to the bottom of the cover. Create an opening at the mirror height by zipping the top zipper up slightly and the center zipper down slightly. Slip the opening over the mirror and close the top and bottom zippers around the mirror post. Finish by zipping all the panels closed on your cover then pull the elasticized corners down over both bumpers of your RV.

6. Tie an end of one of the supplied pre-cut ropes onto one of the D-rings along the bottom hem. Put a small rock in the provided toss bag, close the top and tie the free end of the rope to the bag D-ring. Now toss the bag and rope under your RV to the D-ring on the opposite side.



Take the rope off the bag and tie it to the D-ring. Repeat with the remaining D-rings.

7. Adjust the strap length on the white tension panels across the front and back to fit your RV. Don't over tighten—the straps should be snug, not drum tight. To attach the straps into the side-release buckles just insert the clip into the buckle. To release the buckle press the buttons on both sides and pull the clip out of the buckle.

Use and Storage

The sides of your cover can be unzipped for access to the front, entrance side and rear. The panels can be rolled up and held in place with the hook and loop straps toward the top of each panel.

A handy storage bag is provided. To fit it in the bag fold your cover and roll the cover tightly rather than stuffing it. Never store a wet cover in the storage bag or confined area as the cover can be damaged by mildew.

Care

Spot clean with water, a mild soap and a sponge. Don't use abrasive cleaners or brushes.

Three Year Limited Warranty

If this cover fails due to a defect in workmanship and materials within three years from the date of purchase Classic Accessories will repair or replace it free of charge.

Trailing or towing your RV with your RV Cover on will invalidate the warranty.

This warranty gives you specific rights and you may also have other rights which vary from state to state.



Classic Accessories, Inc.
Kent, WA, USA 98032
www.classicaccessories.com