



Owner's Manual

12 Volt Truck & SUV Air Inflator



Model: i7000

Under license from Goodyear manufactured by:

BONAIRE[®]

873 E. Citation Court
Boise, Idaho 83716 USA
800-874-5771

ba@bon-aireindustries.com

GOODYEAR (and winged foot design) is a trademark of The Goodyear Tire & Rubber Company,
Akron, Ohio USA used under license by Bon-Aire Industries, Inc.

This Manual contains information regarding the safety and operation of this product. Before you use, read and understand all instructions, cautions, and warnings. Failure to do so can result in serious injury or property damage.

TABLE OF CONTENTS

General Safety Rules	2
Safety Symbols, Words and Labels	2
Specifications	3
Important Safety Information	3
Parts Diagram	4
Operating Instructions	5
Warranty Information	6

WARRANTY INFORMATION

LIMITED ONE YEAR WARRANTY POLICY

Every product is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from date of original purchase. Should any trouble develop during this one year period, please contact our Customer Service Center at 1-800-874-5771 between 8:00 a.m. and 5:00 p.m. Mountain Standard Time, Monday through Friday. **This warranty does not apply to the following: Where repairs have been made or attempted by others; where repairs are required because of normal wear and tear; if the product has been abused, misused, or improperly maintained; any alterations have been made to the product. IN NO EVENT SHALL BON-AIRE INDUSTRIES, INC. BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state in the United States. Some states do not allow the exclusion or limitation of incidental or consequential damages, and/or some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

PÓLIZA DE GARANTÍA LIMITADA DE UN AÑO

Cada uno de nuestros productos ha sido cuidadosamente inspeccionado y probado antes de salir de la fábrica. Le garantizamos que va a estar libre de defectos en su mano de obra y materiales durante un período de UN AÑO, contado a partir de la fecha de compra original. En el caso en que surja algún problema durante este período de un año, póngase en contacto por favor con nuestro Centro de Servicio al Cliente, llamando al 1-800-874-5771 (Válido para llamadas gratis en los E.U.A.) de lunes a viernes de 8:00 a.m. a 5:00 p.m. (Horario estándar de las montañas). **Esta garantía no es aplicable en los siguientes casos: en casos en los que se haya hecho o intentado hacer una reparación por partes ajenas; en caso en que sea necesaria una reparación por causa del uso y desgaste normales de la unidad; si el producto hubiera sido objeto de abuso uso indebido, o sujeto a un mantenimiento inadecuado; que se hubiera hecho algún tipo de modificación en el producto. EN NINGÚN CASO BON-AIRE INDUSTRIES, INC. SERÁ RESPONSABLE DE ALGÚN TIPO DE DAÑO, SEA INDIRECTO, INCIDENTAL O CONSECUCIONAL, PRODUCIDOS POR CAUSA DE LA VENTA O EL USO DE ESTE PRODUCTO. ESTA EXENCIÓN DE RESPONSABILIDAD ES APLICABLE DURANTE Y DESPUÉS DEL PERÍODO DE VALIDEZ DE ESTA GARANTÍA.** Esta garantía le otorga derechos legales específicos; es posible que a usted le asistan otros derechos legales de acuerdo con las leyes de cada estado de los Estados Unidos. Algunos estados no permiten limitaciones en el tiempo de duración de una garantía implícita ni la exclusión o limitación de daños fortuitos o consecuentes, por lo que las limitaciones o exclusiones mencionadas en esta garantía pueden no ser aplicables en su caso. **Esta garantía en México es reemplazada por la del importador.**

OPERATING INSTRUCTIONS

CAUTION

DO NOT OVER-INFLATE ITEM BEING INFLATED.

To inflate vehicle tire:

1. Remove the inflator from two compartment carrying bag and place evenly on the ground.
2. Connect the 16 ft. PVC coil air hose to the inflator by pulling back on the quick connect coupler and inserting this to valve located to the end of the 1 ft. rubber air hose which is coming off of the inflator. Push in firmly and pull the quick connect coupler back until you hear a click to lock the PVC coil air hose in place.
3. Connect the 12 Volt 10 ft. power cord into DC 12 Volt power outlet.
4. Connect the screw-on valve connector to tire air valve, twisting the rubber protector clockwise until it is securely attached to the tire air valve.
5. Move the On/Off switch to "On" position and the Inflator will begin to operate. Monitor the PSI on the gauge to fill your item to desired pressure. Once you've reached the desired air pressure, move the On/Off switch to the "Off" position.
6. To remove the PVC coil air hose from your vehicle tire, twist the rubber proctor on the screw-on valve connector counter clockwise.
7. To remove the PVC coil air hose from the inflator by pulling back on the quick connect coupler and pulling the PVC coil air hose away from coupler.
8. Remove the 12 Volt power cord from the DC 12 Volt power outlet.
9. Store your inflator and parts in the two compartment carrying bag so you don't loose any parts.

To inflate sports ball, air mattress, rubber raft, etc.:

1. Remove the inflator from two compartment carrying bag and place evenly on the ground.
2. Connect the 16 ft. PVC coil air hose to the inflator by pulling back on the quick connect coupler and inserting this to valve located to the end of the 1 ft. rubber hose which is coming off of the inflator. Push in firmly and pull the quick connect coupler back until you hear a click to lock the PVC coil air hose in place.
3. Connect the 12 Volt 10 ft. power cord into DC 12 Volt power outlet.
4. Select the appropriate inflation accessory and screw onto end of the screw-on valve.
5. Insert the inflation accessory into appropriate item you are inflating.
6. Move the On/Off switch to "On" position and the Inflator will begin to operate. Inflate your desired item to the correct pressure and move the On/Off switch to the "Off" position.
7. To remove the PVC coil air hose from the inflator by pulling back on the quick connect coupler and pulling the PVC coil air hose away from coupler.
8. Remove the 12 Volt power cord from the DC 12 Volt power outlet.
9. Store your inflator and parts in the two compartment carrying bag so you don't loose any parts.



GENERAL SAFETY RULES

WARNING

Read and understand all instructions. Failure to follow instructions can result in electric shock, fire and/or serious personal injury. **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

SAFETY SYMBOLS, WORDS AND LABELS

The safety instructions provided in this manual are not intended to cover all possible conditions that may occur during product operation. Always use common sense and pay attention to all **WARNING** and **CAUTION** statements in this manual.

 WARNING	WARNING indicates a potentially hazardous situation. Failure to avoid may result in serious injury or death.
 CAUTION	CAUTION indicates a potentially hazardous situation. Failure to avoid may result in minor personal injury.

INTENDED USE

This product is intended for consumer use only.

SPECIFICATIONS

⚠ CAUTION

THIS INFLATOR OPERATES ONLY ON DC 12 VOLT. DO NOT ATTEMPT TO OPERATE THIS INFLATOR WITH ANY OTHER SOURCE OR VOLTAGE. DO NOT REWIRE OR RECONFIGURE INFLATOR FROM ITS ORIGINAL DESIGN OR PERSONAL INJURY OR BODILY HARM MAY OCCUR.

Voltage	DC 12 V
Power Requirement	DC 12V – For use with 12 Volt DC Power Outlet Only

Note: **This unit is equipped with fuse protection.** If at some point your Inflator fails to operate, check the fuse in the end of the 12 Volt plug. To replace the fuse, simply unscrew the 12 Volt power plug tip, remove existing fuse, install new fuse and reassemble power plug tip. Use only an AGC - 15 amp replacement fuse.

IMPORTANT SAFETY INFORMATION

⚠ WARNING

1. Use 12 Volt DC only. Make sure that your vehicle 12 Volt power outlet is free of any ash residue or debris. A dirty 12 Volt power outlet can cause the inflator and power cord to overheat. Overheating can cause damage to your inflator/vehicle and could cause bodily harm or injury (Disconnect power when not in use).
2. This inflator is designed to inflate car tires, bike tires, ATV tires, sports equipment, air mattresses, beach toys and other inflatables. Do not use for any purpose other than inflating. If you do so, bodily harm or personal injury can occur.
3. Caution, allow inflator to cool down 10 minutes after each 12 minutes of continuous operation.
4. After using, turn off power.
5. The inflator is not a toy. Keep away from children at all times.
6. Do not carry inflator by the air hose or power cord or damage may occur.
7. Do not leave the inflator unattended while in operation.
8. Do not over inflate. Please follow the manufacturer's instructions for the item you are inflating
9. Keep the inflator away from flammable areas/liquids at all times.
10. Do not operate the inflator in wet or damp areas.
11. Operate the inflator only with the accessories that are included.
12. **USE SAFETY GLASSES.** Also use face or dust mask if operation is dusty.
13. It is recommended that your vehicle's 12 Volt battery be fully charged to get best performance from your air inflator. If your vehicle battery is weak, the inflator will not work at its maximum output level.
14. For best results and more efficient power, it is recommended that you operate your air inflator with your **VEHICLE'S ENGINE RUNNING**, making absolutely sure you are outside or in an open, well-ventilated area and **NOT INSIDE A CONFINED AREA, SUCH AS A GARAGE** or bodily injury or asphyxiation resulting in death could occur. **ALWAYS ALLOW FOR PROPER VENTILATION.** Most vehicle 12 Volt power outlets will operate with vehicle ignition off; however, some vehicles require that the ignition be turned on.

PARTS DIAGRAM



Item #	Name
1	1 ft. Rubber Air Hose ... Connects to 16 ft. PVC Coil Air Hose
2	Analog Pressure Gauge
3	Two Compartment Carrying Bag
4	Two 15 AMP Replacement Fuses
5	Four Inflation Accessories
6	12 Volt 10 ft. Power Cord with 15 AMP Fuse
7	Quick Connect Coupler
8	Rubber Protector Over Brass Screw-On Valve
9	16 ft. PVC Coil Air Hose ... Connects to 1 ft. Rubber Air Hose
10	Built-In LED Light