

# QUICK-SET™ CABIN

Item # 14628



112 TOTAL SQUARE FEET - 82" CENTER HEIGHT - HUB-TO-HUB -  
96" x 168" - WEIGHT 50 LBS



THIS  
END  
DOWN

# QUICK-SET®

BY **CLAM**®

## CONGRATULATIONS ON YOUR NEW QUICK-SET!



**BEFORE YOU GET STARTED,  
PLEASE READ CAREFULLY.**

When you first open the bag on your new Quick-Set shelter, it may appear inside out. It is not inside out, but is designed to fold into a compact bag.



# IMPORTANT! PLEASE READ.

## Designed Use of Quick-Set Shelters

The Quick-Set line of shelters are made for short-term, occasional use. By design, they are made to be set up quickly when actively being used and taken down quickly when they are not. They are not designed to withstand strong winds or severe weather events, so it is advised to take the shelter down prior to those events occurring. The shelters are a temporary structure and are not meant to be used as a permanent or semi-permanent shelter. Additionally, they are designed to be staked down externally to the metal I-bolt in the center of the wall with the provided tie down ropes and stakes to properly secure the shelter. Any use outside the previously stated scenarios is not how the product was designed, which would not be covered under the warranty policy.

### Below are examples of proper uses of Quick-Set shelters:

- Proper – A weekend camping trip where the shelter is being actively used.
- Proper – An escape from the bugs for an evening, with the shelter taken down at the end of the night.
- Proper – A day at the park where the shelter is set up at the beginning of the day, is being actively used, and taken down at the end of the day.

### Use Outside of the Product's Intended Design

If a shelter is used outside of the manufacturing design of the product, Clam Outdoors is not liable for damage or wear of the product. Damage/wear incurred to the shelter due to use outside of the manufacturer's design, is not covered under warranty. Use outside of the products intended design as stated by Clam Outdoors, the manufacturer, is not advised.

### Below are examples of improper uses of Quick-Set shelters:

- Improper – Leaving the shelter set up for weeks or months at a time.
- Improper – Using the shelter as a storage unit to house items that cannot get wet.
- Improper – Leaving the shelter set up next to sleeping quarters overnight where it is not being actively used.
- Improper – Using the shelter to take cover from or leave standing during strong wind or severe weather.

## UV Degradation

UV Degradation is the cracking, thinning, or tearing of materials due to exposure to ultraviolet radiation. This can also be seen in the form of color fading from material as the UV light erodes the surface layer of material. Just like any product exposed to the sun's UV rays, Quick-Set shelters are subject to UV Degradation. This is common in outdoor furniture and gear that sees a lot of continued use. It is especially common in areas exposed to more sunlight and in places such as the southern US which are closer to the equator, where sunlight is more direct. UV Degradation is NOT a manufacturing defect, and Quick-Set shelters that have experienced cracking, fading, thinning, or tearing of materials due to UV Degradation will not be replaced under the manufacturing warranty.

### Tips for Preventing UV Degradation to Your Quick-Set Shelter

Quick-Set shelters are treated with a 50+ UV Protectant, but we recommend applying a UV Protectant spray such as Nikwax every few months to help combat UV Degradation. This will help slow the process of UV Degradation to the tent's material. Another option would be adding a rain fly accessory over the roof of the shelter, which can be a susceptible location for UV Degradation, for model shelters where a fly is offered. Additionally, using the shelter within the product's intended design will help protect the shelter and increase the product's lifespan.

## Injury to Users

Clam Outdoors is not liable for injuries suffered during the use of any Quick-Set products, regardless of weather conditions or any use of the shelter, including injury due to the shelter's roof or walls collapsing, or the unit being displaced. We do not recommend using the shelter in windy or severe weather conditions where the chance of injury is much greater.

# WARRANTY INFORMATION

For any quality issues please submit a warranty claim form or email customer service directly at the information found below. Warranties cannot be processed over the phone.

ONCE USED THIS PRODUCT CANNOT BE RETURNED TO STORE.

**\*\*Warranty cannot be honored without an original, dated receipt \*\***

## IMPORTANT - PLEASE READ

This product is warranted to the original retail purchaser (not transferable) to be free from manufacturing defects for one (1) year from the date of the original purchase. Warranty does not cover screen or tent tears, ripped internal grommet tabs, UV degradation to material or broken poles due to high wind, weather conditions or unattended use. The item will be repaired, if applicable, or replaced (manufacturer's option) if found defective within the one (1) year warranty time frame.

**USE OF QUICK-SET SHELTERS:** The Quick-Set line of shelters are designed for short-term, occasional use. By design, they are made to be set up and taken down quickly. These shelters are not to be used as a permanent or semi-permanent shelter, or left up at all times. Damage incurred to the shelter due to use outside of the manufacturer's design, including UV degradation, is not covered under warranty. The warranty will also be void if the product has been subject to neglect, misuse, improper installation, misapplication, unattended use, alteration or accidents.

To submit a warranty claim request, please use one of the following methods:

Warranty Form: <http://clamoutdoors.com/pages/warranty-form>

Email: [customerservice@clamcorp.com](mailto:customerservice@clamcorp.com)

In a request made by email, please include your full name, address, phone number, a copy of your receipt, a brief description of the problem, and pictures to clearly show the area(s) of concern. Our Warranty Department will review your request, and a Clam representative will contact you regarding your claim status. Shipping charges to and from Clam Outdoors are the responsibility of the customer.

## LIMITATION OF LIABILITY

It is expressly understood that Clam Outdoors Inc., liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product as stated above. Clam is not liable for any injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Clam products. Clam reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. Clam shall not be obligated to make such alterations or modifications to products already in service.

---

## SET-UP INSTRUCTIONS

**Step 1:** Unzip the storage bag completely and remove the shelter. Use care not to misplace the instructions. The stake and rope pouch is located inside the shelter carry bag. It is advised to store your stakes, ropes and pouch in the carry bag until they're needed.



**Step 2:** Pick the tent up directly from the carry bag and stand it on the center roof hub assembly.



**Step 3:** With the screen tent standing up on the black center hub hold one corner of the material and let the screen fall open until you see the roof lying flat with the Clam logo facing up. If it does not fall open naturally, unfold the tent until you can see the roof panel lying flat. **At this point the poles should be on the inside of the tent with the roof facing up.**

# SET-UP INSTRUCTIONS CONTINUED



**Step 4:** With the poles on the inside and the roof of the shelter flat, reach for the handle at the center of one wall and pull until the section pops out. Hold the roof line with the opposite hand. It does not matter which wall is popped first.

**Step 5:** Continue around the shelter repeating the previous step until all wall panels are erect.



**Step 6:** Enter through the door and push up on the center roof hub until the ceiling pops up.



**Step 7:** (optional): Insert the vertical rods on either side of the screen tent's door. Remove the Velcro retaining loop securing the pole to the adjacent wall. Once freed, install one end of the rod into the other's end to make it one long rod. Place the bottom of the rod in the pocket located at the bottom of the panel directly below where the rods are mounted. Secure the rod with the Velcro loop. Repeat on the other side. It is recommended to use these if any wind is present and to provide support to the door.



**Step 8:** The recommended means of staking the shelter down is using the external tie down ropes. Secure the tent by tying one end of the provided tie-down ropes to the metal I-bolt loops and stake the opposite ends. The I-bolt is located in the center of each wall.

**NOTE:** Since the shelter is held up by tension, maintaining adequate tension throughout the shelter is necessary. It's recommended to keep the external tie down ropes approximately 12"-18" from the skirt of the shelter.

# TAKE DOWN INSTRUCTIONS

**Step 1:** Remove all stakes and tie down ropes securing the shelter.



**Step 2:** If used, remove the vertical door support rods from pockets at the bottom of the panel, pull apart, and refasten them with the Velcro straps located diagonally on the panels next to each side of the door.



**Step 3:** Push in on the walls from the outside of the tent to collapse the wall panels. Do this to all wall panels until the tent is collapsed.



**Step 4:** Push down on one of the roof poles until the roof is collapsed.



**Step 5:** Once the shelter is completely collapsed grab one corner of the tent and fold it in half on itself. Once in half, you can now condense the shelter to fit into the carry bag.

**Step 6:** Carefully lift and insert into the carry bag. Pay close attention not to twist or distort the hubs or fabric while inserting into bag. Place stakes and tie down ropes into their bag and place the stake bag into the carry bag.

# SAFETY INSTRUCTIONS:

Please fully understand and follow all safety and assembly instructions outlined in this booklet. Failure to do so could result in severe injury.

- Do not use open flame heaters in your shelter. Utilize vents for cross ventilation.
  - Shelters are not fireproof and will burn with exposure to open flame.
  - Keep all flame and excessive heat sources away from tent fabric.
- Never leave shelters set up unattended or in severe weather conditions.



- This tent is made of a flame-resistant fabric. It is NOT fireproof. The fabric will burn if left in contact with a flame or heat source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
  - Heat sources burn oxygen and emit carbon monoxide. Use caution with heaters and vent properly.
    - Do not use candles, matches or open flames of any kind in or near a tent.
    - Do not cook inside a tent.
- Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or retiring for the night.
- Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible.
  - Do not use refuel lamps, heaters, or stoves inside a tent.
  - Extinguish or turn off all lanterns before going to sleep.
    - Do not smoke in a tent.
    - Do not store flammable liquids inside a tent.
- Take down the tent when not in use to avoid unnecessary damage and fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
  - Never put the tent away wet. Always put away dry to avoid mold, mildew, and other problems.
- This shelter is designed for portability. Do not leave the shelter set-up outdoors when not in use. Damage from weather conditions is not covered under your warranty.
  - Never Allow children to play in this product unattended.
    - Sleeping in tent is at your own risk.

## WARNING!

In some Climatic conditions (E.G., severe storms, high winds, or heavy snow cover) stakes and cords may not be sufficient to anchor a tent securely, which could result in the tent being picked up, blown away or walls or ceiling collapsing, causing possible death, serious injury or permanent disability to you or others.

## WARNING!

Stoves, heaters, lanterns, candles, and other fuel devices that burn propane, natural gas, charcoal, or other fuels produce a toxic carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless a dangerous level of carbon monoxide can accumulate in a tent which cannot be detected by sight, smell, or taste. When inhaled in even small quantities, carbon monoxide is absorbed into the bloodstream replacing and reducing the oxygen in the bloodstream and causing carbon monoxide poisoning and suffocation, which may cause death, serious injury, or permanent disability. Exposure to high concentrations of carbon monoxide for even a few minutes may cause death, serious injury, or permanent disability.

# PARTS LIST

For replacement parts, frequently asked questions, shelter information and videos visit our web site at [www.clamoutdoors.com](http://www.clamoutdoors.com).

Item	Qty.	Part #	Description
1	7	109077	Hub & Pole Kit (4 Poles/1 Hub)
2	2	104104	Door Support Pole
3	1	104671	Carry Bag
4	5	104173	Stake, Screen Hub
5	5	104042	Tie Down Strap
6	1	106357	Removeable Floor
7	1		Rain Fly

# SCREEN SHELTER FAQ'S

**Q: How do I set up my screen tent?**

**A:** Please review the set up and take down instructions in your owner's manual or go to <https://quicksetshelters.com/pages/setup-instructions> to watch an instructional video on the proper and simplest way to set up and take down a screen tent.

**Q. Can I leave my shelter up all the time?**

**A:** The Quick-Set line of shelters are designed for short-term, occasional use. By design, they are made to be set up and taken down quickly. These shelters are not to be used as a permanent or semi-permanent shelter. Damage incurred to the shelter due to use outside of the manufacturer's design, including UV degradation, is not covered under warranty.

**Q: Is there anything that can be put on the outside of the shelter to increase the water resistance?**

**A:** Our screen tents are water resistant, not waterproof. You can use a waterproofing spray such as "Camp Dry", which is sold in most sporting goods stores, to add an extra layer of protection. Waterproofing tape is also used on the shelters, but if looking for additional protection you can apply "Seam Grip" to the seams. Please be advised that applying additional products to the shelter may alter the fire-retardant properties.

**Q: Can I use anything to increase the UV protection?**

**A:** Our screen tents are treated with a UV protectant coating when they are manufactured. If you wish to add additional protection you may use any product intended for use on a traditional tent. NOTE: Please keep in mind these shelters are NOT intended to be permanent or semi-permanent structures and it's best to take them down when not in use.

**Q: Would it be best to completely dry my screen tent before storing if it gets wet?**

**A:** It is recommended to dry your tent completely before storing. If it's not thoroughly dried moisture may cause damage to the tent.

**Q: How do I wash my screen tent?**

**A:** We recommend using a gentle laundry soap that's been diluted with warm water and a washcloth to spot clean any areas that need it. If needed, you can use a bleach and water solution (10 parts water to 1 part bleach) to get rid of any mildew smell.

**Q: Do you offer any accessories for Quick-Set Screen Tents?**

**A:** Yes, we offer wind panel accessories that are designed to keep the wind and sun away. There also is a floor and rain fly accessory that can be added to most Escape and Pavilion-model shelters. Additionally, we carry fan/light combos, quick pack tables, LED hub lights and more! These accessories as well as replacement parts are available at [www.QuickSetShelters.com](http://www.QuickSetShelters.com).

**Q. I've tangled/twisted my screen shelter and it won't set-up properly – how do I get it straightened out?**

**A:** If your shelter has become tangled, please email our Customer Service department and we can send a video and written instructions on how to correct the shelter.

For additional questions, comments or concerns please email Clam Customer Service at [customerservice@clamcorp.com](mailto:customerservice@clamcorp.com) or call 763-231-4120.

Due to Clam's continued product development, Clam reserves the right to change specifications without notice. For complete details, see the assembly and/or operating instructions provided with the purchased product.

Clam Contact Information  
Customer Service Hours: 8 am to 5 pm, Monday –  
Friday Central Standard  
Clam Outdoors  
Attn://Customer Service  
12135 Brockton Lane  
Rogers, MN 55369