


# BATTERY POWERED LIQUID TRANSFER PUMP

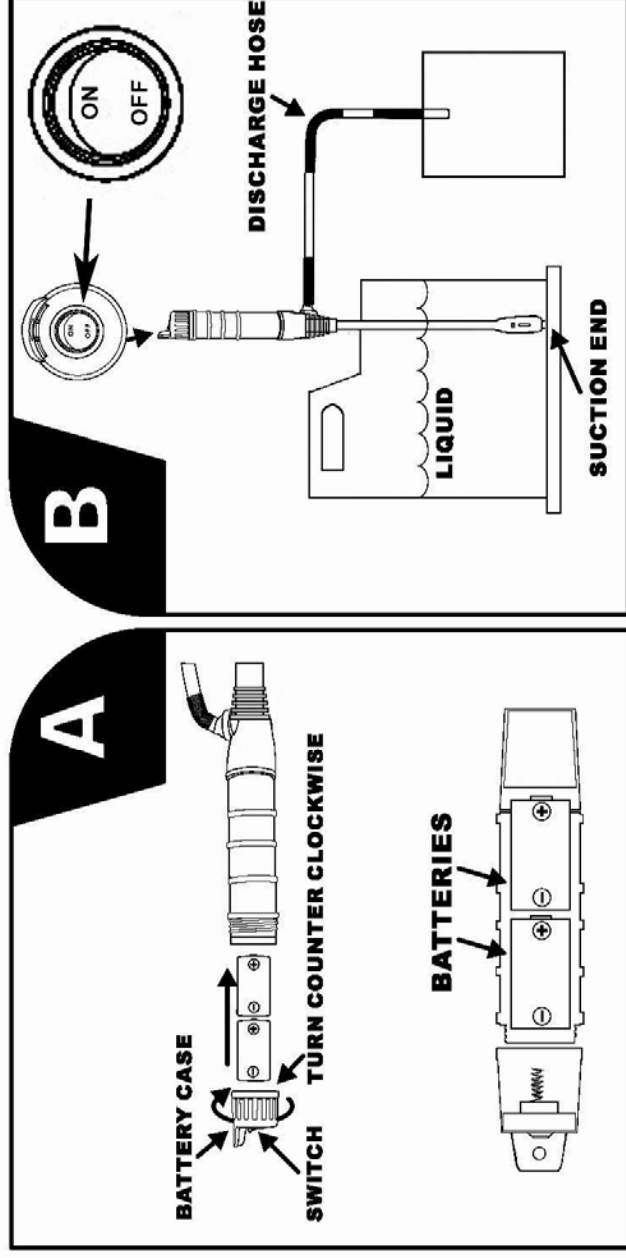

## OPERATING INSTRUCTIONS:

1. Insert 2 "D" size batteries (not included) as shown in Diagram A.  
**As shown in Diagram B:**
  1. Immerse the suction end of the pump into the liquid.
  2. Insert the discharge hose into a container to receive the liquid.
  3. Turn the switch to the on position to begin pumping. Be careful not to fill the container too much.

## BATTERY CAUTIONS:

1. Non-rechargeable batteries are not to be recharged.
2. All batteries used must be of the same brand and type
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. Do not mix old and new batteries.
5. Remove old batteries.
6. Remove batteries when not in use.

## CAUTIONS:

1. Do not run dry. Only switch the pump on after submerging the suction end of the pump in liquid.
2. Do not turn the pump upside down after use.
3. Do not place the pumping container higher than the pump's batteries housing.
4. Rinse with water after use.
5. Store or use when the unit is thoroughly dry.

## NOTE:

In case any liquid backs up in the hose, it will drain from the bottom of the "Overflow Outlet". Keep hands away from these points.

Do not use this pump near an open flame while pumping gasoline.