

# Instructions: PolyPro III™ Deluxe Class A RV Cover

## ⚠ WARNING!

Installation is best done with two people and on most RVs requires working from the roof of the RV. **Never install on a windy day or when the RV roof is slippery. Please take care when you are on a ladder or the roof.**

## CAUTION

Installation and removal is safer and easier when done by two people. **Please consult your RV owners manual.**

## Tools Needed:

Scissors

Matches or lighter (optional)

Screwdriver (usually Phillips head)  
for roof antennas

## Installation

**1.** Cover or tape any sharp edges on your RV that could wear against your RV cover. Be sure to lower any roof antennas.

**2.** On smaller RVs your cover can be installed with ladders but on most RVs it's easiest to install your cover from the roof. Carefully climb up on the roof and have a friend hand you the cover in its storage bag. At the front of your RV carefully remove your cover from its storage bag. With the Classic logo to the front of your RV (The cover should be packed so that the front is at the outside of the roll) unroll the cover down the length of the roof. Drop the front of your cover over the front of your RV then carefully and slowly move toward the back or your RV spreading out your cover and letting the sides fall down the sides of your RV.

Climb down the rear ladder and locate the ladder cap. (The cap helps keep the top of the ladder from stressing the cover). Fit it over the ladder top and attach it to the rungs with the hook and loop straps. Now pull the back end of the cover down the back of your RV.



**3.** Zip all the panels closed on your cover then pull the elasticized corners down over both bumpers of your RV.

**4.** Tie an end of the supplied rope onto one of the D-rings along the bottom hem. Put a small rock in the provided toss bag, close the top and tie the free end of the rope to the bag D-ring. Toss the bag and rope under your RV to the D-ring on the opposite side. Take the rope off the bag and, allowing enough to make a knot, cut it off and tie it to the D-ring. Repeat with the remaining D-rings.

To keep the rope ends from fraying you can carefully melt the ends with a match or lighter.

**5.** Adjust the strap length on the white tension panels across the front and back to fit your RV. Don't over tighten—the straps should be snug, not drum tight. To attach the straps into the side-release buckles just insert the clip into the buckle. To release the buckle press the buttons on both sides and pull the clip out of the buckle.

## Use and Storage

The sides of your cover can be unzipped for access to the doors, engine or storage areas. The panels can be rolled up and held in place with the hook and loop straps toward the top of each panel.

A handy storage bag is provided. To fit it in the bag fold your cover and roll the cover tightly rather than stuffing it. Never store a wet cover in the storage bag or confined area as the cover can be damaged by mildew.

## Care

Spot clean with water, a mild soap and a sponge. Don't use abrasive cleaners or brushes.

## Three Year Limited Warranty

If this cover fails due to a defect in workmanship and materials within three years from the date of purchase Classic Accessories will repair or replace it free of charge.

Trailering or towing your RV with your RV Cover on will invalidate the warranty.

This warranty gives you specific rights and you may also have other rights which vary from state to state.



Classic Accessories, Inc.  
Kent, WA, USA 98032  
[www.classicaccessories.com](http://www.classicaccessories.com)