

# OPERATOR'S MANUAL

INCLUDING: OPERATION, INSTALLATION & MAINTENANCE

# 66605X-X

RELEASED: 4-15-87

REVISED: 8-7-15

(REV. AT)

## 1/2" DIAPHRAGM PUMP 1:1 RATIO (NON-METALLIC)



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,  
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

### SERVICE KITS


Refer to Model Description Chart to match the pump material options.  
637140-XX for fluid section repair (see page 4).  
637141 for air section repair (see page 6).

### PUMP DATA

|                                        |                   |                                            |
|----------------------------------------|-------------------|--------------------------------------------|
| <b>Models</b>                          | .....             | see Model Description Chart for "-XXX".    |
| <b>Pump Type</b>                       | .....             | Non-Metallic Air Operated Double Diaphragm |
| <b>Material</b>                        | .....             | see Model Description Chart.               |
| <b>Weight</b>                          | Polypropylene     | 7.2 (3.3 kgs)                              |
|                                        | Groundable Acetal | 8.8 (4.0 kgs)                              |
|                                        | Kynar® PVDF       | 9.5 (4.3 kgs)                              |
| <b>Maximum Air Inlet Pressure</b>      | .....             | 100 psig (6.9 bar)                         |
| <b>Maximum Material Inlet Pressure</b> | .....             | 10 psig (0.69 bar)                         |
| <b>Maximum Outlet Pressure</b>         | .....             | 100 psig (6.9 bar)                         |
| <b>Air Consumption</b>                 | .....             | 1 c.f.m. / gallon (approx.)                |
| <b>Maximum Flow Rate</b>               | (Ball)            | 13 gpm (49.2 lpm)                          |
|                                        | (Duckbill)        | 10 gpm (37.9 lpm)                          |
| <b>Maximum Particle Size</b>           | (Ball)            | 3/32" dia. (2.4 mm)                        |
|                                        | (Duckbill)        | Fibers                                     |
| <b>Maximum Temperature Limits</b>      |                   |                                            |
|                                        | E.P.R.            | -60° to 280° F (-51° to 138° C)            |
|                                        | Groundable Acetal | 10° to 180° F (-12° to 82° C)              |
|                                        | Hytrel®           | -20° to 180° F (-29° to 82° C)             |
|                                        | Neoprene          | 0° to 200° F (-18° to 93° C)               |
|                                        | Nitrile           | 10° to 180° F (-12° to 82° C)              |
|                                        | Polypropylene     | 35° to 175° F (2° to 79° C)                |
|                                        | Polyurethane      | 10° to 150° F (-12° to 66° C)              |
|                                        | Kynar PVDF        | 10° to 200° F (-12° to 93° C)              |
|                                        | Santoprene®       | -40° to 225° F (-40° to 107° C)            |
|                                        | PTFE              | 40° to 225° F (4° to 107° C)               |
|                                        | Viton®            | -40° to 350° F (-40° to 177° C)            |
| <b>Groundable</b>                      | .....             | 666056-X and 66605H-X models only          |
| <b>Dimensional Data</b>                | .....             | see page 8                                 |
| <b>Noise Level @ 70 psig, 60 cpm.</b>  | .....             | 71.1 dB(A)                                 |

\* The pump sound pressure levels published here have been updated to an Equivalent Continuous Sound Level ( $L_{Aeq}$ ) to meet the intent of ANSI S1.13-1971, CAGI-PNEU-ROP S5.1 using four microphone locations.

**NOTICE: All possible options are shown in the chart however certain combinations may not be recommended, consult a representative or the factory if you have questions concerning availability.**

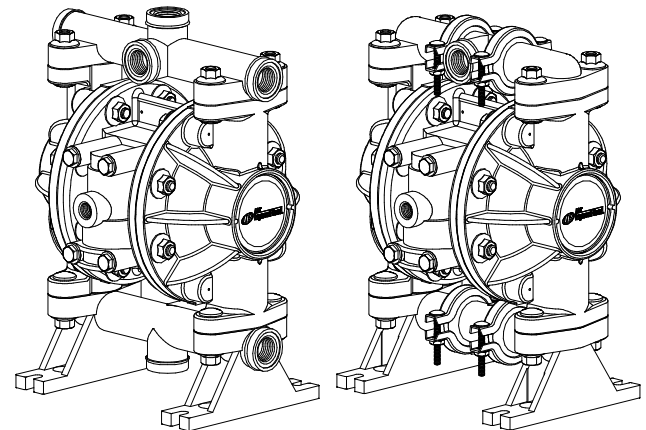

66605J-XXX  
66605H-XXX  
66605K-XXX

666053-XXX  
666056-XXX  
666057-XXX

Figure 1

### MODEL DESCRIPTION CHART

|                                            |                                               |
|--------------------------------------------|-----------------------------------------------|
| <b>66605 X - X X X - 04</b>                |                                               |
| <b>Fluid Caps &amp; Manifold Material</b>  |                                               |
| 3 - Piece Manifold                         | Single Piece Manifold                         |
| 3 - Polypropylene                          | J - Polypropylene                             |
| 6 - Groundable Acetal                      | H - Groundable Acetal                         |
| 7 - Pure Kynar                             | K - Pure Kynar                                |
| <b>Seat Material</b>                       |                                               |
| 0 - (Duck Bill)                            | 4 - Kynar PVDF                                |
| 2 - Stainless Steel                        | 6 - Acetal                                    |
| 3 - Polypropylene                          |                                               |
| <b>Ball Material</b>                       |                                               |
| 1 - Neoprene                               | (*) Duckbill models                           |
| 2 - Nitrile                                | 8 - Polyurethane                              |
| 3 - Viton                                  | A - Stainless Steel                           |
| 4 - PTFE                                   | C - Neoprene (*)                              |
| 5 - E.P.R.                                 | D - Nitrile (*)                               |
|                                            | E - Santoprene                                |
| <b>Diaphragm Material</b>                  |                                               |
| 1 - Neoprene                               | 5 - E.P.R.                                    |
| 2 - Nitrile                                | 8 - Polyurethane                              |
| 3 - Viton                                  | 9 - Hytrel                                    |
| 4 - PTFE / Santoprene                      | B - Santoprene                                |
| <b>Cone Check Flow</b>                     |                                               |
| 04 - Top Discharge                         |                                               |
| <b>FLUID SECTION SERVICE KIT SELECTION</b> |                                               |
| 66605X - X X X                             |                                               |
| EXAMPLE: MODEL # 666053-321                |                                               |
| Fluid Section Service Kit # 637140-21      |                                               |
| Ball <input type="checkbox"/>              | Diaphragm <input checked="" type="checkbox"/> |

INGERSOLL RAND COMPANY LTD  
209 NORTH MAIN STREET - BRYAN, OHIO 43506

☎ (800) 495-0276 • FAX(800) 892-6276  
aerozone.com

© 2015

CCN 99449712

# ARO

**IR** Ingersoll Rand

## OPERATING AND SAFETY PRECAUTIONS

READ, UNDERSTAND AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.



EXCESSIVE AIR PRESSURE  
STATIC SPARK



HAZARDOUS MATERIALS  
HAZARDOUS PRESSURE

**⚠ WARNING** EXCESSIVE AIR PRESSURE. Can cause personal injury, pump damage or property damage.

- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.

**⚠ WARNING** STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground pump and pumping system.

- Sparks can ignite flammable material and vapors.
- The pumping system and object being sprayed must be grounded when it is pumping, flushing, recirculating or spraying flammable materials such as paints, solvents, lacquers, etc. or used in a location where surrounding atmosphere is conducive to spontaneous combustion. Ground the dispensing valve or device, containers, hoses and any object to which material is being pumped.
- 666056-XXX and 66605H-XXX Groundable Acetal pumps: Use the pump grounding screw provided. Connect a 12 ga. (minimum) wire (kit is included) to a good earth ground source.
- Secure pump, connections and all contact points to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to ensure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerge the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire.
- Use proper ventilation.
- Keep inflammables away from heat, open flames and sparks.
- Keep containers closed when not in use.

**⚠ WARNING** Pump exhaust may contain contaminants. Can cause severe injury. Pipe exhaust away from work area and personnel.

- In the event of a diaphragm rupture material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 3/8" minimum i.d. hose between the pump and the muffler.

**⚠ WARNING** HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.

- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.

**⚠ WARNING** HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.

- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.

**⚠ CAUTION** Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.

**⚠ CAUTION** Maximum temperatures are based on mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperature. Consult the chemical manufacturer for chemical compatibility and temperature limits. Refer to Pump Data on page 1 of this manual.

**⚠ CAUTION** Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.

**⚠ CAUTION** Do not use the pump for the structural support of the piping system. Be certain the system components are properly supported to prevent stress on the pump parts.

- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.

**⚠ CAUTION** Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods of time.

- Disconnect air line from pump when system sits idle for long periods of time.

**⚠ CAUTION** Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.

**NOTICE** Install the pump in the vertical position. The pump may not prime properly if the balls do not check by gravity upon start-up.

**NOTICE** Re-torque all fasteners before operation. Creep of housing and gasket materials may cause fasteners to loosen. Re-torque all fasteners to ensure against fluid or air leakage.

**NOTICE** Replacement warning labels are available upon request: "Static Spark" pn \93616-1, "Diaphragm Rupture" pn \93122.

**⚠ WARNING** = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

**⚠ CAUTION** = Hazards or unsafe practices which could result in minor personal injury, product or property damage.

**NOTICE** = Important installation, operation or maintenance information.

---

## GENERAL DESCRIPTION

---

The ARO diaphragm pump offers high volume delivery even at low air pressure and a broad range of material compatibility options available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and positive fluid pressure in the fluid chambers. Ball checks ensure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and it will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

Models 666056-X and 66605H-X: The Acetal material used in these pumps contains stainless steel fibers. It's conductivity allows it to be connected to a suitable ground. A ground screw and ground wire kit is provided for this.

---

## AIR AND LUBE REQUIREMENTS

---

**⚠ WARNING** **EXCESSIVE AIR PRESSURE. Can cause pump damage, personal injury or property damage.**

- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the "O" rings and seals in the air motor section of the pump.

---

## OPERATING INSTRUCTIONS

---

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a "Check Valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to ensure against damage by vibration.

---

## MAINTENANCE

---

Refer to the part views and descriptions as provided on page 4 through 7 for parts identification and Service Kit information.

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Service kits are available to service two separate diaphragm pump functions: 1. AIR SECTION, 2. FLUID SECTION. The Fluid Section is divided further to match typical active MATERIAL OPTIONS.
- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include pump in preventive maintenance program.

---

## DUCKBILL CHECK VALVES (OPTIONAL)

---

Pump models with the suffix (-0CX or -0DX) come equipped with duckbill type checks. Standard duckbill pumps are shipped with the material inlet in the top and the material outlet on the bottom manifold. To change the direction of flow, disassemble the pump as instructed in the FLUID SECTION and reassemble as described below. A pump that was factory built with balls and seats can be retro-fitted with duckbill type check valves by purchasing the necessary parts and installing them as shown.

### Reassembly:

The duckbills may be installed in either direction to produce flow from top to bottom of the pump or from bottom to top of the pump. In either case, **all of the (42) duckbills must point in the same direction.**

### Flow from Top to Bottom: (see page 5)

1. With (15) fluid caps installed, stand the pump upside down.
2. Place (21) insert into (42) duckbill and slide (41) sleeve over (42) duckbill.
3. Slide the complete check assembly into the fluid cap bore with the (21) insert end first. [Duckbills (42) point up.]
4. Position (19) "O" ring over (41) sleeve.
5. Attach (35) manifold feet / (36) swivel assembly to the fluid caps.
6. Turn pump over to right side up position.
7. Assemble duckbill check as in step #1.
8. Slide the complete check assembly into the fluid cap bore with the (41) sleeve end first. [Duckbill is pointing down toward fluid cap cavity.]
9. Position (19) "O" ring around (21) insert.
10. Attach (34) manifold / (36) swivel assembly to fluid cap.

### Flow from Bottom to Top: (Inlet Bottom - Outlet Top)

To reverse flow direction, slide check valve assemblies into the (15) fluid caps backwards from what is indicated in steps #2 and #7. In step #2, the (42) duckbills will be pointing down and in step #7, they will be pointing up.

# PARTS LIST / 66605X-X FLUID SECTION

☆ 637140-XX Fluid Section Service Kits include: Balls (see “BALL OPTIONS”, refer to -XX in chart below), Diaphragms (see “DIAPHRAGM OPTIONS”, refer to -XX in chart below), plus “O” ring items: 2, 19, 20, 33 and 93706-1 Key-Lube grease (page 6).

| SEAT OPTIONS |          |     |       | BALL OPTIONS                            |         |     |       |                      |         |     |       |
|--------------|----------|-----|-------|-----------------------------------------|---------|-----|-------|----------------------|---------|-----|-------|
| ITEM “21”    |          |     |       | ITEM “22” (3/4” dia.) (Service Kit -XX) |         |     |       |                      |         |     |       |
| -XXX         | Seat     | Qty | [Mtl] | -XXX                                    | Ball    | Qty | [Mtl] | -XXX                 | Ball    | Qty | [Mtl] |
| -2XX         | 93409-1  | (4) | [SS]  | -X1X                                    | 93100-1 | (4) | [N]   | -XAX                 | 93410-1 | (4) | [SS]  |
| -3XX         | 93098-1  | (4) | [P]   | -X2X                                    | 93100-2 | (4) | [B]   | -XEX                 | 93100-E | (4) | [Sp]  |
| -34X / -3AX  | 93098-10 | (4) | [P]   | -X3X                                    | 93100-3 | (4) | [V]   | ITEM “42” (Duckbill) |         |     |       |
| -4XX         | 93098-4  | (4) | [PK]  | -X4X                                    | 93100-4 | (4) | [T]   | -0XX                 |         |     |       |
| -6XX         | 93098-3  | (4) | [D]   | -X5X                                    | 93100-5 | (4) | [E]   | -0CX                 | 93114-1 | (4) | [N]   |
| -0XX         | 93115-1  | (4) | [P]   | -X8X                                    | 93100-8 | (4) | [U]   | -0DX                 | 93114-2 | (4) | [B]   |

## MATERIAL CODE

|       |   |                    |
|-------|---|--------------------|
| [B]   | = | Nitrile            |
| [D]   | = | Acetal             |
| [E]   | = | E.P.R.             |
| [F]   | = | Fluoraz            |
| [GA]  | = | Groundable Acetal  |
| [GFN] | = | Glass Filled Nylon |
| [H]   | = | Hytre              |
| [N]   | = | Neoprene           |
| [P]   | = | Polypropylene      |
| [PK]  | = | Pure Kynar         |
| [Sp]  | = | Santoprene         |
| [SS]  | = | Stainless Steel    |
| [T]   | = | PTFE               |
| [U]   | = | Polyurethane       |
| [V]   | = | Viton              |

## DIAPHRAGM OPTIONS

| 66605X-XXX         | ☆ Service Kits<br>-XX = (Ball or Duckbill)<br>-XX = (Diaphragm) | “7” / “8”<br>Diaphragm (2) | [Mtl]  | “19”<br>“O” Ring (4)<br>1-5/16” o.d. | “20”<br>“O” Ring (2)<br>1-1/8” o.d. | “33” ☆<br>“O” Ring (4)<br>1-3/16” o.d. | [Mtl] |
|--------------------|-----------------------------------------------------------------|----------------------------|--------|--------------------------------------|-------------------------------------|----------------------------------------|-------|
| -XX1               | 637140-X1                                                       | 93113                      | [N]    | Y325-122                             | Y325-119                            | Y325-120                               | [B]   |
| -XX2               | 637140-X2                                                       | 93582-2                    | [B]    | Y325-122                             | Y325-119                            | Y325-120                               | [B]   |
| -XX3               | 637140-X3                                                       | 93581-3                    | [V]    | Y327-122                             | Y327-119                            | Y327-120                               | [V]   |
| 66605J, 66605J-XX4 | 637140-X4                                                       | 93111 / 93465              | [T/Sp] | 93265                                | Y328-119                            | 94749                                  | [T]   |
| 66605G, 66605H-XX4 | 637140-X4                                                       | 93111 / 93465              | [T/Sp] | 93764                                | 93933                               | 95129                                  | [F]   |
| 66605Z, 66605K-XX4 | 637140-X4                                                       | 93111 / 93465              | [T/Sp] | 93265                                | Y328-119                            | 94749                                  | [T]   |
| -XX5               | 637140-X5                                                       | 93760                      | [E]    | 93763                                | 93761                               | 93762                                  | [E]   |
| -XX8               | 637140-X8                                                       | 93112                      | [U]    | 93119                                | 93117                               | 93118                                  | [U]   |
| -XX9               | 637140-X9                                                       | 93465-9                    | [H]    | Y325-122                             | Y325-119                            | Y325-120                               | [B]   |
| -XXB               | 637140-XB                                                       | 93465                      | [Sp]   | 93763                                | 93761                               | 93762                                  | [E]   |
| -0X1               | 637140-C1, D1                                                   | 93113                      | [N]    | Y325-122                             | Not Req'd                           | Y325-120                               | [B]   |
| -0X2               | 637140-C2, D2                                                   | 93582-2                    | [B]    | Y325-122                             | Not Req'd                           | Y325-120                               | [B]   |
| -0X4               | 637140-C4, D4                                                   | 93111 / 93465              | [T/Sp] | Y325-122                             | Not Req'd                           | 94749                                  | [T]   |
| -0X8               | 637140-C8, D8                                                   | 93112                      | [U]    | 93119                                | Not Req'd                           | 93118                                  | [U]   |
| -0XB               | 637140-CB, DB                                                   | 93465                      | [Sp]   | Y325-122                             | Not Req'd                           | Y325-120                               | [B]   |

■ Not shown

⚡ Quantity = 22

★ Item “33” “O” rings are not used on models 66605H-XXX, 66605J-XXX and 66605K-XXX.

## WETTED COMMON PARTS

|      |                               |      | Polypropylene |       |            |       | Groundable Acetal |       |            |       | Pure Kynar |       |            |       |
|------|-------------------------------|------|---------------|-------|------------|-------|-------------------|-------|------------|-------|------------|-------|------------|-------|
|      |                               |      | 66605J-XXX    |       | 66605J-XXX |       | 66605G-XXX        |       | 66605H-XXX |       | 66605Z-XXX |       | 66605K-XXX |       |
| Item | Description (size)            | Qty  | Part No.      | Mtl   | Part No.   | Mtl   | Part No.          | Mtl   | Part No.   | Mtl   | Part No.   | Mtl   | Part No.   | Mtl   |
| □ 1  | Rod                           | (1)  | 93084         | [SS]  | 93084      | [SS]  | 93084             | [SS]  | 93084      | [SS]  | 93084      | [SS]  | 93084      | [SS]  |
| 2    | “O” Ring (3/32” x 5/8” o.d.)  | (1)  | Y325-111      | [B]   | Y325-111   | [B]   | Y325-111          | [B]   | Y325-111   | [B]   | Y325-111   | [B]   | Y325-111   | [B]   |
| 5    | Washer (2” o.d.)              | (2)  | 94645         | [GFN] | 94645      | [GFN] | 94645             | [GFN] | 94645      | [GFN] | 94645      | [GFN] | 94645      | [GFN] |
| □ 6  | Diaphragm Nut (5/16” - 18)    | (2)  | 93103-1       | [P]   | 93103-1    | [P]   | 93103-3           | [D]   | 93103-3    | [D]   | 93103-4    | [PK]  | 93103-4    | [PK]  |
| 15   | Fluid Cap (includes 26 & 124) | (2)  | 93105-1       | [P]   | 93105-1    | [P]   | 93105-11          | [GA]  | 93105-11   | [GA]  | 93105-9    | [PK]  | 93105-9    | [PK]  |
| 26   | Bolt (5/16” - 18 x 1-1/2”)    | (8)  | 93109         | [SS]  | 93109      | [SS]  | 93109             | [SS]  | 93109      | [SS]  | 93109      | [SS]  | 93109      | [SS]  |
| 29   | Nut (5/16” - 18)              | (2)  | -----         | ---   | -----      | ---   | Y12-5-S           | [SS]  | Y12-5-S    | [SS]  | -----      | ---   | -----      | ---   |
| 34   | Manifold, Outlet (top)        | (2)  | 93102-1       | [P]   | -----      | ---   | 93102-6           | [GA]  | -----      | ---   | 93102-4    | [PK]  | -----      | ---   |
| □ 35 | Manifold, Foot (bottom)       | (2)  | 93106-1       | [P]   | -----      | ---   | 93106-6           | [GA]  | -----      | ---   | 93106-4    | [PK]  | -----      | ---   |
| □ 36 | Swivel                        | (2)  | 93101-1       | [P]   | -----      | ---   | 93101-6           | [GA]  | -----      | ---   | 93101-4    | [PK]  | -----      | ---   |
| □ 37 | Clamp                         | (8)  | 93099         | [SS]  | -----      | ---   | 93099             | [SS]  | -----      | ---   | 93099      | [SS]  | -----      | ---   |
| 38   | Bolt (#10 - 24 x 1-1/2”)      | (8)  | Y84-303-T     | [SS]  | -----      | ---   | Y84-303-T         | [SS]  | -----      | ---   | Y84-303-T  | [SS]  | -----      | ---   |
| 39   | Nut (#10 - 24)                | (8)  | Y22-10-S      | [SS]  | -----      | ---   | Y22-10-S          | [SS]  | -----      | ---   | Y22-10-S   | [SS]  | -----      | ---   |
| 41a  | Ball Cage                     | (4)  | 93097-1       | [P]   | 93097-1    | [P]   | 93097-3           | [D]   | 93097-3    | [D]   | 93097-4    | [PK]  | 93097-4    | [PK]  |
| 41b  | Sleeve (models 66605X-0XX)    | (4)  | 93120-1       | [P]   | 93120-1    | [P]   | -----             | ---   | -----      | ---   | -----      | ---   | -----      | ---   |
| 43   | Ground Strap                  | (1)  | -----         | ---   | -----      | ---   | 92956-1           | [SS]  | 92956-1    | [SS]  | -----      | ---   | -----      | ---   |
| ■ 57 | Ground Kit Assembly           | (1)  | -----         | ---   | -----      | ---   | 66885-1           | ---   | 66885-1    | ---   | -----      | ---   | -----      | ---   |
| 60   | Manifold, Inlet (bottom)      | (1)  | -----         | ---   | 93802-1    | [P]   | -----             | ---   | 93802-2    | [GA]  | -----      | ---   | 93802-3    | [PK]  |
| 61   | Manifold, Outlet (top)        | (1)  | -----         | ---   | 93801-1    | [P]   | -----             | ---   | 93801-2    | [GA]  | -----      | ---   | 93801-3    | [PK]  |
| 62   | Flange Nut (5/16” - 18)       | (24) | 93886         | [SS]  | 93886      | [SS]  | 93886 (⚡)         | [SS]  | 93886 (⚡)  | [SS]  | 93886      | [SS]  | 93886      | [SS]  |
| 63   | Plug (1/2 - 14 NPT)           | (6)  | -----         | ---   | 93897-1    | [P]   | -----             | ---   | 93897-2    | [D]   | -----      | ---   | 93897-3    | [PK]  |


□ “Smart Parts”, keep these items on hand in addition to the service kits for fast repair and reduction of down time.

# PARTS LIST / 66605X-X FLUID SECTION

## COLOR CODE

| Material     | Diaphragm Color | Ball Color |
|--------------|-----------------|------------|
| Acetal       | N/A             | Orange     |
| Nitrile      | Red (-)         | Red (+)    |
| E.P.R.       | Blue (-)        | Blue (+)   |
| Hytrel       | Cream           | N/A        |
| Neoprene     | Green (-)       | Green (+)  |
| Santoprene   | Tan             | Tan        |
| PTFE         | White           | White      |
| Polyurethane | Clear           | Red        |
| Viton        | Yellow (-)      | Yellow (+) |
|              | (-) Stripe      | (+) Dot    |

FOR THE  
AIR MOTOR SECTION  
SEE PAGES 6 & 7

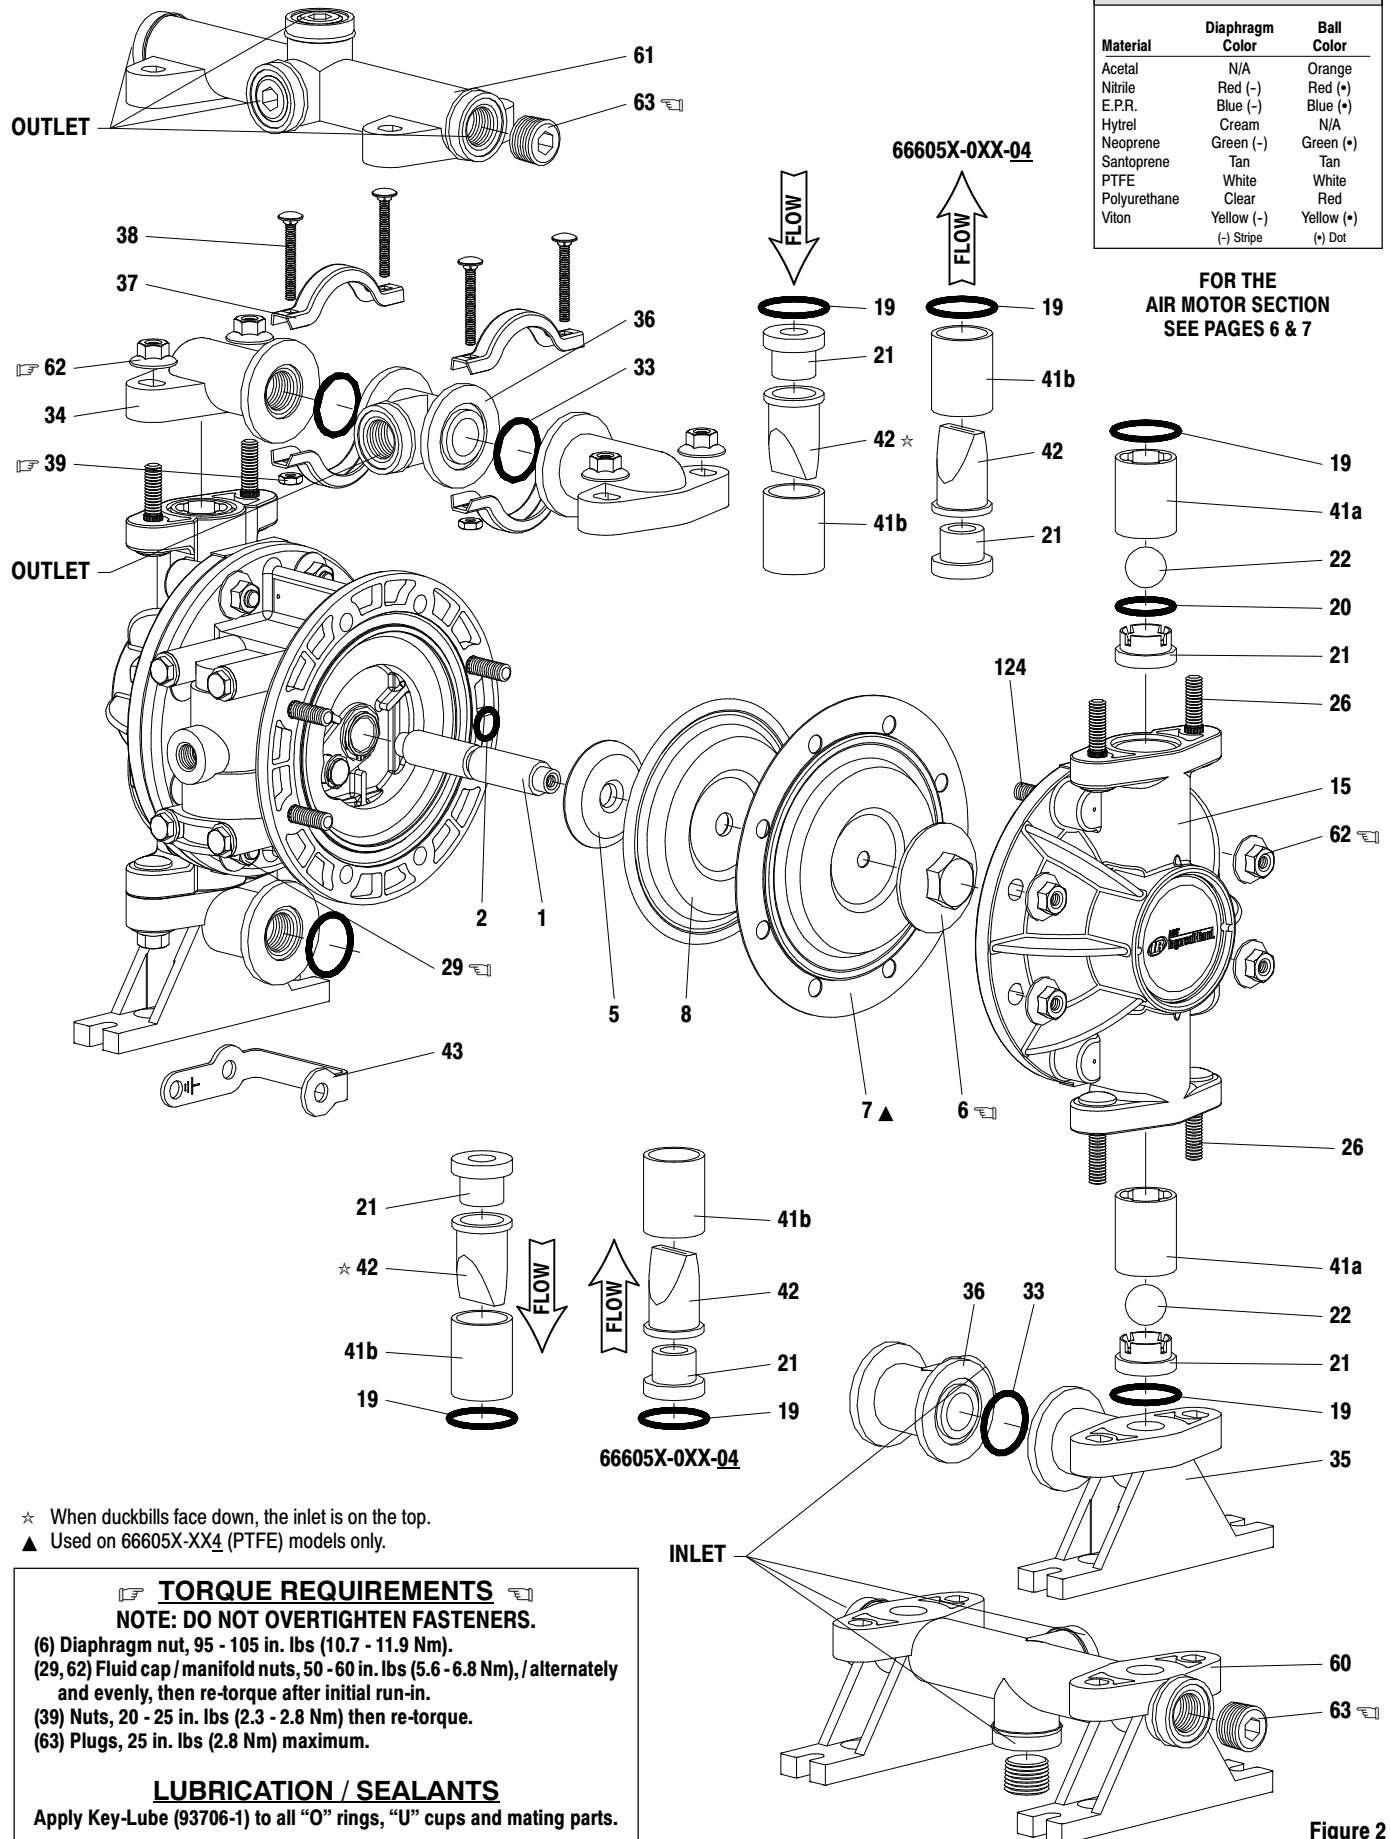

- ★ When duckbills face down, the inlet is on the top.
- ▲ Used on 66605X-XX4 (PTFE) models only.

## TORQUE REQUIREMENTS

NOTE: DO NOT OVERTIGHTEN FASTENERS.

- (6) Diaphragm nut, 95 - 105 in. lbs (10.7 - 11.9 Nm).
- (29, 62) Fluid cap / manifold nuts, 50 - 60 in. lbs (5.6 - 6.8 Nm), / alternately and evenly, then re-torque after initial run-in.
- (39) Nuts, 20 - 25 in. lbs (2.3 - 2.8 Nm) then re-torque.
- (63) Plugs, 25 in. lbs (2.8 Nm) maximum.

## LUBRICATION / SEALANTS

Apply Key-Lube (93706-1) to all "O" rings, "U" cups and mating parts.

Figure 2

## PARTS LIST / 66605X-X AIR MOTOR SECTION

✓ Indicates parts included in 637141 Air Section Repair Kit.

### AIR SECTION PARTS

| Item  | Description (size)                        | Qty | Part No. | [Mtl] |
|-------|-------------------------------------------|-----|----------|-------|
| 101   | Motor Body                                | (1) | 93091    | [P]   |
| ✓ 102 | "O" Ring (3/32" x 1" o.d.)                | (2) | Y325-117 | [B]   |
| □ 103 | Sleeve                                    | (1) | 93087    | [Bz]  |
| □ 104 | Snap Ring (13/16")                        | (2) | 37285    | [C]   |
| 111   | Spool                                     | (1) | 93085    | [D]   |
| 118   | Pilot Rod                                 | (1) | 93088    | [C]   |
| ✓ 119 | "O" Ring (1/8" x 3/4" o.d.)               | (4) | 93075    | [U]   |
| □ 120 | Spacer                                    | (3) | 115959   | [Z]   |
| ✓ 122 | Snap Ring (1/2")                          | (2) | 77802    | [C]   |
| 124   | Stud (5/16" - 18 x 1-17/32") (see page 5) | (8) | 93249    | [SS]  |
| 129   | Muffler Assembly                          | (1) | 66972    | [P]   |
| 129☆  | Exhaust Cover (see note 2)                |     | 93092    | [PS]  |
| ✓ 130 | Gasket                                    | (1) | 93107    | [SY]  |
| 131   | Bolt (5/16" - 18 x 1-1/4")                | (8) | 93095    | [SS]  |
| ✓ 132 | Gasket (see note 1)                       | (1) | 93339-1  | [B]   |

| Item  | Description (size)                    | Qty | Part No. | [Mtl] |
|-------|---------------------------------------|-----|----------|-------|
| 133   | Washer (9/32" i.d.)                   | (4) | 93096    | [SS]  |
| 134   | Bolt (1/4" - 20 x 5")                 | (4) | Y6-419-T | [SS]  |
| 135   | Valve Block                           | (1) | 93090    | [P]   |
| 136   | Plug                                  | (1) | 93086    | [D]   |
| ✓ 137 | "O" Ring (3/32" x 1-1/2" o.d.)        | (1) | Y325-125 | [B]   |
| ✓ 138 | Packing, "U" Cup (1/8" x 1" o.d.)     | (1) | 94395    | [U]   |
| ✓ 139 | Packing, "U" Cup (1/8" x 1.427" o.d.) | (1) | 96383    | [U]   |
| ✓ 140 | Valve Insert                          | (1) | 93276    | [CK]  |
| ✓ 141 | Valve Plate                           | (1) | 93275    | [CK]  |
| 142   | Washer                                | (2) | 116038   | [Z]   |
| 143   | Plate                                 | (2) | 93089    | [SS]  |
| 201   | Muffler (see note 2)                  |     | 93110    | [C]   |
|       |                                       |     |          |       |
| ✓     | Key-Lube "O" Ring Lubricant           |     | 93706-1  |       |
|       | 10 Pack of Key-Lube                   |     | 637175   |       |

### DIAPHRAGM PUMP SERVICE

#### GENERAL SERVICE NOTES:

- Inspect and replace old parts with new parts as necessary. Look for deep scratches on metallic surfaces, and nicks or cuts in "O" rings.
  - 7/16" wrench, 1/2" wrench, 7/16" socket, 1/2" socket, torque wrench (measuring inch pounds), "O" ring pick.

### FLUID SECTION DISASSEMBLY

- Remove (34) top manifold / (36) swivel assembly.  
Note: Manifold options involve single piece manifolds (60 / 61) or three piece swivel type manifolds with clamps.
- Remove (41) ball cages, (22) balls, (19 and 20) "O" rings and (21) seats. Note: If cages are difficult to remove at this step, it may be helpful to proceed through step 5 and remove them once they are accessible from the inside of the fluid cap.
- Remove (35) bottom manifolds / (36) swivel assembly.
- Remove (19) "O" rings, (21) seats and (22) balls.
- Remove (15) fluid caps.
- Remove (6) diaphragm nut, (8) [(7) PTFE models only] diaphragm(s) and (5) diaphragm washer from (1) diaphragm connecting rod.
- Remove (1) connecting rod from air motor.
- Carefully remove remaining (6) diaphragm nut, (8) [(7) PTFE models] diaphragm and (5) diaphragm washer from (1) connecting rod. Do not mar surface of connecting rod.
- Remove (2) "O" ring from connecting rod.
- Remove (37) clamps from top and bottom manifold / swivel assemblies.
- Remove (33) "O" rings from (36) swivels.

Note 1: Part no. 93339-1 one-piece gasket replaces the following parts (not shown) in models manufactured prior to October 1988, Y325-10 (4), Y325-12, 93093, 93094, Y325-8.

Note 2: The (129☆) exhaust cover and (201) muffler were standard until 9/92. They are available separately for service or piped exhaust applications.

Note 3: A major valve service assembly is available separately which includes items: 111, 132, 135 - 141. Order part no. 66362.

#### MATERIAL CODE

|                    |                        |                    |
|--------------------|------------------------|--------------------|
| [B] = Nitrile      | [D] = Acetal           | [SY] = Syn-Seal    |
| [Bz] = Bronze      | [P] = Polypropylene    | [U] = Polyurethane |
| [C] = Carbon Steel | [PS] = Polyester       | [Z] = Zinc         |
| [CK] = Ceramic     | [SS] = Stainless Steel |                    |

### FLUID SECTION REASSEMBLY

- Reassemble in reverse order.
- Lubricate (1) connecting rod and (2) "O" ring with Key-Lube or equivalent "O" ring lubricant.
- Install (5) diaphragm washers with i.d. chamfer toward diaphragm.
- When replacing PTFE diaphragms, install the 93465 Santoprene diaphragm behind the PTFE diaphragm.
- When installing (41) cage, ball guides must line up with notches in (21) seat to prevent damage.
- Before installing (35), (34) manifolds, (19) "O" ring should be properly seated on the o.d. of (41) ball cage.
- Before tightening (39) nut and (38) carriage bolts on (36) swivels, attach the manifold / swivel assembly to the fluid caps. Rotate (36) swivel to desired position and tighten each of the nuts approximately 8 - 9 turns, then finish tightening (29) nuts.

## TORQUE REQUIREMENTS

**NOTE: DO NOT OVERTIGHTEN FASTENERS.**

(134) Torque to 15 - 20 in. lbs (1.7 - 2.3 Nm), wait 10 minutes, then re-torque to 15 - 20 in. lbs (1.7 - 2.3 Nm).

## LUBRICATION / SEALANTS

Apply Key-Lube (93706-1) to all "O" rings, "U" cups and mating parts.

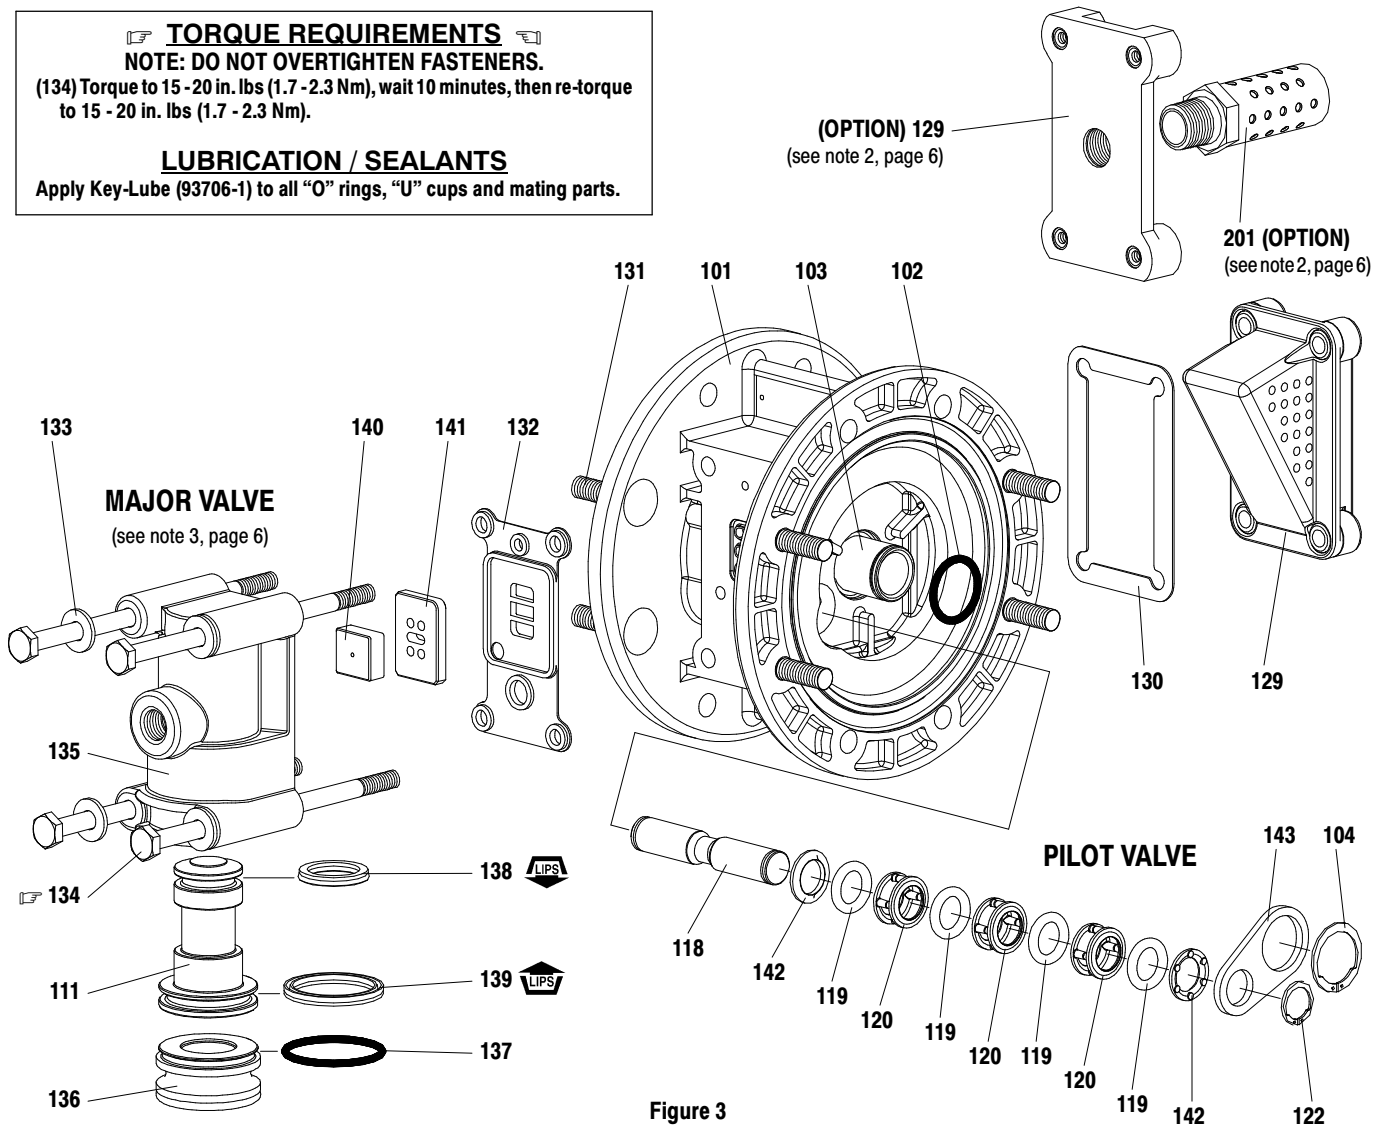


Figure 3

## AIR MOTOR SECTION SERVICE

**Service is divided into two parts - 1. Pilot Valve, 2. Major Valve.**

- Air Motor Section Service is continued from Fluid Section repair.

## PILOT VALVE DISASSEMBLY

1. Remove (122) and (104) snap rings.
2. Remove (143) plates.
3. Remove (103) sleeve and (102) "O" rings.
4. Remove (118) piston, (142) washers, (119) "O" rings and (120) spacers from (101) center body.

## PILOT VALVE REASSEMBLY

1. Assemble (119) "O" rings, (120) spacers and (142) washers on (118) pilot rod.
2. Insert the stack into the (101) body. Sleeve (103) may be used to assist pressing stack into body.
3. Install (103) sleeve and (102) "O" rings into (101) body.
4. Install (143) plates and (122) and (104) snap rings.

## MAJOR VALVE DISASSEMBLY

1. Remove (129) exhaust cover and (130) gasket.
2. Pull (135) valve block assembly from (101) body.
3. Remove (134) bolts, (133) washers and (132) gasket from (135) valve block.
4. Remove (141) valve plate and (140) valve insert.
5. Remove (136) plug and (111) spool.

## MAJOR VALVE REASSEMBLY

1. Install new (139) and (138) "U" cups on (111) spool - **LIPS MUST FACE EACH OTHER.**
2. Insert (111) spool into (135) valve block.
3. Install (137) "O" ring on (136) plug, insert plug into (135) valve block.
4. Install (140) valve insert and (141) valve plate into (135) valve block. Note: After 9/92, parts (140, 141) are white (ceramic), the dished side of the (140) valve insert should be against the shiny face of (141) valve plate for best performance.
5. Replace (132) gasket and install valve block assembly on (101) body.

## TROUBLE SHOOTING

### Product discharged from air exhaust.

- Check for diaphragm rupture.
- Check tightness of (6) diaphragm nut.

### Air Bubbles in Product Discharge.

- Check connections of suction plumbing.
- Check band clamps on intake manifold.
- Check "O" rings between intake manifold and fluid caps.
- Check tightness of (6) diaphragm nut.

### Pump blows air out main exhaust when stalled on either stroke.

- Check "U" cups on (111) spool in major valve.
- Check (141) valve plate and (140) insert for wear.
- Check (103) sleeve and (2) "O" ring on diaphragm connecting rod.
- Check (119) "O" rings on (118) piston for wear.

### Low output volume.

- Check air supply.
- Check for plugged outlet hose.
- For the pump to prime itself, it must be mounted in the vertical position so that the balls will check by gravity.
- Check for pump cavitation - suction pipe should be 1/2" min. or larger if high viscosity fluids are being pumped. Suction hose must be non-collapsible type, capable of pulling a high vacuum.
- Check all joints on intake manifolds and suction connections. These must be airtight.
- Check for sticking or improperly seating check valves.
- If pump cycles at a high rate or runs erratically, check (119) piston "O" rings for wear.

## DIMENSIONAL DATA

Dimensions shown are for reference only, they are shown in inches and millimeters (mm).

