


# POULAN<sup>PRO</sup>

## OPERATOR'S MANUAL

MODEL: PR241

24 in. Two Stage Gas Powered Snow Blower

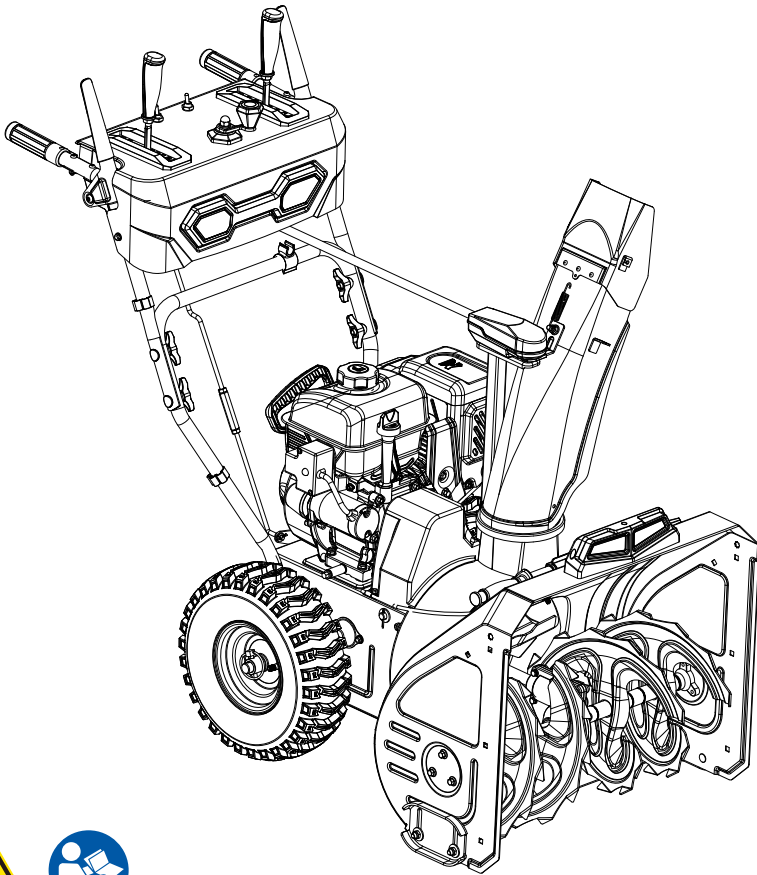

**Have product questions or need technical support?**

**Contact Us:**



Website: [www.poulanpro.com](http://www.poulanpro.com)



Toll free: 1-888-676-7909 Mon-Fri 8-4 CST



Email: [support@poulanpro-power.us](mailto:support@poulanpro-power.us)

Manufactured under license from Husqvarna AB  
Poulan Pro is a registered Trademark of Husqvarna AB  
Imported by Novus Performance Products.  
W225N16708 Cedar Parl Ct. Jackson, WI



Vol. 2025-01

# **CONTENTS**

Specifications .....	3
Introduction / Safety Definitions .....	4
Important Safety instructions .....	5
Know your product .....	9
Assembly .....	10
Operation .....	13
Maintenance .....	19
Storage .....	23
Troubleshooting .....	24
Basic Service Parts List .....	26
Warranty Statement .....	27

## SPECIFICATIONS

### Snow Thrower Specifications

Model	PR241
Stage	Two Stage
Clearing Width (in.)	24
Clearing Height (in.)	21
Tire Diameter (in.)	14
Tire Pressure	138 Kpa (20 psi)
Auger Diameter (in.)	12
Impeller Diameter (in.)	12
Starter	Electric and Recoil
Chute Control	Dash Mounted Quick Rotation, 190 Degrees
Speed	6 Forward / 2 Reverse
Headlight	White Color / 9 W
Length (in.)	54 (1370 mm)
Width (in.)	26 (650 mm)
Height (in.)	44 (1130 mm)
Weight (lbs.)	174 lbs (79 Kg)

### Engine Specifications

Engine Model	W210FSE/P
Displacement	212 cc
Type	4-Stroke, Air Cooled, Overhead Valve (OHV)
Fuel Capacity	0.63 Gallon
Fuel Type	Fresh, clean regular unleaded gasoline with a minimum octane rating of 87 and an ethanol content of no more than 10% by volume
Oil Capacity	20 fl. oz (600 ml)
Oil Type	SAE 5W-30

## INTRODUCTION

Congratulations on your purchase of a PoulanPro® product. This model is the result of PoulanPro's vast experiences in the production of high-quality, cost-effective equipment.


It represents the high degree of reliability and innovation that PoulanPro® has dedicated itself to.

This manual will give you an understanding of the assembly, operation and basic maintenance of this unit. If you have any questions concerning the operation or maintenance, please contact us at support@poulanpro-power.us or 888-676-7909.

We want you to continue to use and be satisfied with your PoulanPro product for years to come, therefore please fully familiarize yourself, and others who plan on operating the product, with the proper safety and operation procedures before each use.

We continually seek advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your product and this manual.

When contacting us about parts and/or service, you will need to supply the complete Product and Serial numbers from your unit.

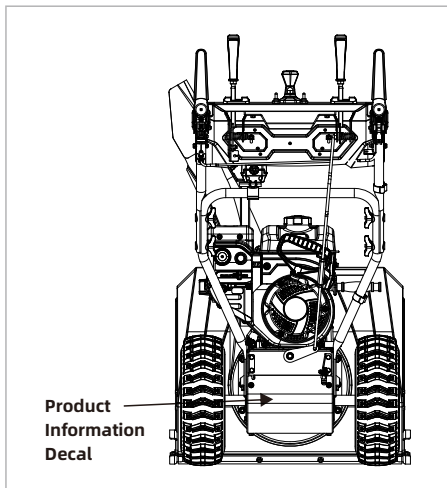

### PRODUCT NUMBER

### SERIAL NUMBER

### DATE OF PURCHASE

## SAFETY DEFINITIONS

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols, and their explanations, deserve your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instructions or warnings they give are not substitutes for proper accident prevention measures.

### ⚠ DANGER

**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### ⚠ WARNING

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### ⚠ CAUTION

**CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

## IMPORTANT SAFETY INSTRUCTIONS

**IMPORTANT:** This snow thrower is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury.

Use the product correctly. Injury or death is a possible result of incorrect use. Only use the product for the tasks found in this manual. Do not use the product for other tasks.

Obey the instructions in this manual. Obey the safety symbols and the safety instructions. If the operator does not obey the instructions and the symbols, injury, damage or death is a possible result.

Do not discard this manual. Use the instructions to assemble, to operate and to keep your product in good condition. Use the instructions for correct installation of attachments and accessories. Only use approved attachments and accessories.

Do not use a damaged product. Obey the maintenance schedule. Only do the maintenance work that you find instructions about in this manual. An approved service center must do all other maintenance work.

This manual cannot include all situations that can occur when you use the product. Be careful and use your common sense. Do not operate the product or do maintenance of the product if you are not sure about the situation. Speak to a product expert, your dealer, service agent or approved service center for information.

Disconnect the spark plug cable before you assemble the product, put the product into storage or do maintenance.

Do not use the product if it is changed from its initial specification. Do not change a part of the product without approval from the manufacturer. Only use parts that are approved by the manufacturer. Injury or death is a possible result of incorrect maintenance.

Do not breathe in the fumes from the engine. Long term inhalation of the engine's exhaust fumes is a health risk.

Do not start the product indoors or near flammable material. The exhaust fumes are hot and can contain a spark which can start a fire. Not sufficient airflow can cause injury or death because of asphyxiation or carbon monoxide.

When you use this product, the engine makes an

electromagnetic field. The electromagnetic field can cause damage to medical implants. Speak to your physician and medical implant manufacturer before you operate the product.

Do not let a child operate the product. Do not let a person, without knowledge of the instructions operate the product.

Make sure that you always monitor a person, with decreased physical capacity or mental capacity, that uses the product. A responsible adult must be there at all times.

Lock the product in an area that children and unapproved persons cannot access.

The product can eject objects and cause injuries. Obey the safety instructions to decrease the risk of injury or death.

Do not go away from the product when the engine is on.

The operator of the product is responsible if an accident occurs.

Before and while you walk rearward, look behind and down for small children, animals or other risks that can cause you to fall.

Make sure that parts are not damaged before you use the product.

Make sure that you are at a minimum 15 m (50 ft) away from other persons or animals before you use the product. Make sure that a person in adjacent area knows that you will use the product.

Refer to national or local laws. They can prevent or decrease the operation of the product in some conditions.

### Training

1. Read, understand and follow all instructions on the machine and in the manual(s) before operating this unit. Be thoroughly familiar with the controls and the proper use of the equipment. Know how to stop the unit and disengage the controls quickly.
2. Never allow children to operate the equipment. Never allow adults to operate the equipment without proper instruction.
3. Keep the area of operation clear of all persons, particularly small children.
4. Exercise caution to avoid slipping or falling, especially when operating the snow thrower in reverse.

## Preparation

1. Thoroughly inspect the area where the equipment is to be used and remove all doormats, sleds, boards, wires, and other foreign objects.
2. Ensure the auger lever is released before starting the engine.
3. Do not operate the equipment without wearing adequate winter garments. Avoid loose fitting clothing that can get caught in moving parts. Wear footwear that will improve footing on slippery surfaces.
4. Handle fuel with care; it is highly flammable.

Use an approved fuel container.

Never add fuel to a running engine or hot engine.

Fill the fuel tank outdoors with extreme care. Never fill fuel tank indoors.

Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground, away from your vehicle, before filling.

When practical, remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment on a trailer with a portable container, rather than from a gasoline dispenser nozzle.

Keep the nozzle in contact with the rim of the fuel tank or container opening at all times, until refueling is complete.

Replace gasoline cap securely and wipe up any spilled fuel.

If fuel is spilled on clothing, change clothing immediately.

5. Use extension cords and receptacles as specified by the manufacturer for all units with electric drive motors or electric starting motors.
6. Never attempt to make any adjustments while the engine (motor) is running (except when specifically recommended by manufacturer).
7. Always wear safety glasses or eye shields during operation or while performing an adjustment or repair to protect eyes from foreign objects that may be thrown from the machine.
8. Use ear protectors to avoid damage to hearing.

## Operation

1. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
2. After striking a foreign object, immediately stop the engine (motor) by removing the key. Thoroughly inspect the snow thrower for any damage. Repair any damage before resuming operation.
3. If the unit should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause. Vibration is generally a warning of trouble.
4. Stop the engine (motor) whenever you leave the operating position, before unclogging the auger housing or discharge chute, and when making any repairs, adjustments or inspections.
5. When cleaning, repairing or inspecting the snow thrower, stop the engine and make certain the auger blades and all moving parts have stopped. Remove key.
6. Do not run the engine indoors, exhaust fumes are dangerous.
7. Exercise extreme caution when operating on slopes.
8. Never operate the snow thrower without proper guards, and other safety protective devices in place and working.
9. Never direct the discharge toward people or areas where property damage can occur. Keep children and others away.
10. Do not overload the machine capacity by attempting to clear snow at too fast a rate.
11. Never operate the machine at high transport speeds on slippery surfaces. Look behind and use care when operating in reverse.
12. Disengage power to the auger blades when the snow thrower is transported or not in use.
13. Use only attachments and accessories approved by the manufacturer of the snow thrower.
14. Never operate the snow thrower without good visibility or light. Always be sure of your footing, and keep a firm hold on the handles. Walk; never run.
15. Never touch a hot engine or muffler.

**Safety devices on the product**

Make sure that you regularly do the maintenance to the product.

The life of the product increases

The risk of accidents decreases.

Let an approved dealer or an approved service center regularly examine the product to do adjustments or repairs

Do not use a product with damaged protective equipment. If the product is damaged, speak to an approved service center.

**Muffler****⚠ CAUTION**

The muffler becomes very hot during and after use and when the engine operates at idle speed. Be careful near flammable materials and/or fumes to prevent fire.

The muffler keeps the noise levels to a minimum and sends the exhaust fumes away from the operator.

Do not use the product if the muffler is missing or defective. A defective muffler increases the noise level and the risk of fire.

Examine the muffler regularly to make sure that it is attached correctly and not damaged.

**Fuel safety****⚠ WARNING**

Read the warning instructions that follow before you use the product.

Do not start the product if there is fuel or engine oil on the product. Remove the unwanted fuel/oil and let the product dry.

If you spill fuel on your clothing, change clothing immediately.

Do not get fuel on your body, it can cause injury. If you get fuel on your body, use soap and water to

remove the fuel.

Do not start the product if the engine has a leak. Examine the engine for leaks regularly.

Be careful with fuel. Fuel is flammable and the fumes are explosive and can cause injuries or death.

Do not breathe in the fuel fumes, it can cause injury. Make sure that there is a sufficient airflow.

Do not smoke near the fuel or the engine.

Do not put warm objects near the fuel or the engine.

Do not add fuel when the engine is on.

Make sure that the engine is cool before you refuel.

Before you refuel, open the fuel tank cap slowly and release the pressure carefully.

Do not add fuel to the engine in an indoor area. Not sufficient airflow can cause injury or death because of asphyxiation or carbon monoxide.

Tighten the fuel tank cap fully. If the fuel tank cap is not tightened, there is a risk of fire.

Move the product to a minimum of 3 m (10 feet) from the position where you filled the tank before a start.

Do not put too much fuel in the fuel tank.

### Safety instructions for maintenance

#### WARNING

Read the warning instructions that follow before you use the product.

The exhaust fumes from the engine contain carbon monoxide, an odorless, poisonous and very dangerous gas. Do not start the engine indoors or in closed spaces.

Before you do the maintenance on the product, stop the engine and remove the ignition cable from the spark plug.

Use protective gloves when you do maintenance on the blades. The blades are very sharp, and cuts can easily occur.

Accessories and changes to the product that are not approved by the manufacturer, can cause serious injury or death. Do not change the product. Always use accessories that are approved by the manufacturer.

If the maintenance is not done correctly and regularly, the risk of injury and damage to the product increases.

Only do the maintenance as given in this operator's manual. All other service must be done by an approved service agent.

Let an approved service agent do servicing on the product regularly.

Replace damaged, worn or broken parts.

### Clearing a Clogged Discharge Chute

#### WARNING

Hand contact with the rotating auger blades inside the discharge chute is the most common cause of injury associated with snow thrower. Never use your hand to clean out the discharge chute.

To clear the chute:

1. **SHUT THE ENGINE OFF!** Remove the ON/OFF key!
2. Wait 10 seconds to be sure the auger blades have stopped rotating.
3. Always use a clearing tool at least 15 inches long.

### Maintenance and Storage

1. Never store the machine with fuel in the fuel tank inside a building where ignition sources are present such as hot water heaters, space heaters, or clothes dryers. Allow the engine to cool before storing in any enclosure.
2. Always refer to operator's manual for important details if the snow blower is to be stored for an extended period.
3. Maintain or replace safety and instruction labels, as necessary.
4. Run the machine a few minutes after throwing snow to prevent freeze-up of the collector/impeller.

### Customer Responsibilities

Read and observe the safety rules.


Follow a regular schedule in maintaining, caring for and using your snow blower.

Follow the instructions under "Maintenance" and "Storage" sections of this manual.

# KNOW YOUR PRODUCT

Read this operator's manual before operating your snow thrower. Familiarize yourself with the location and function of the controls and features.

Save this manual for future reference.

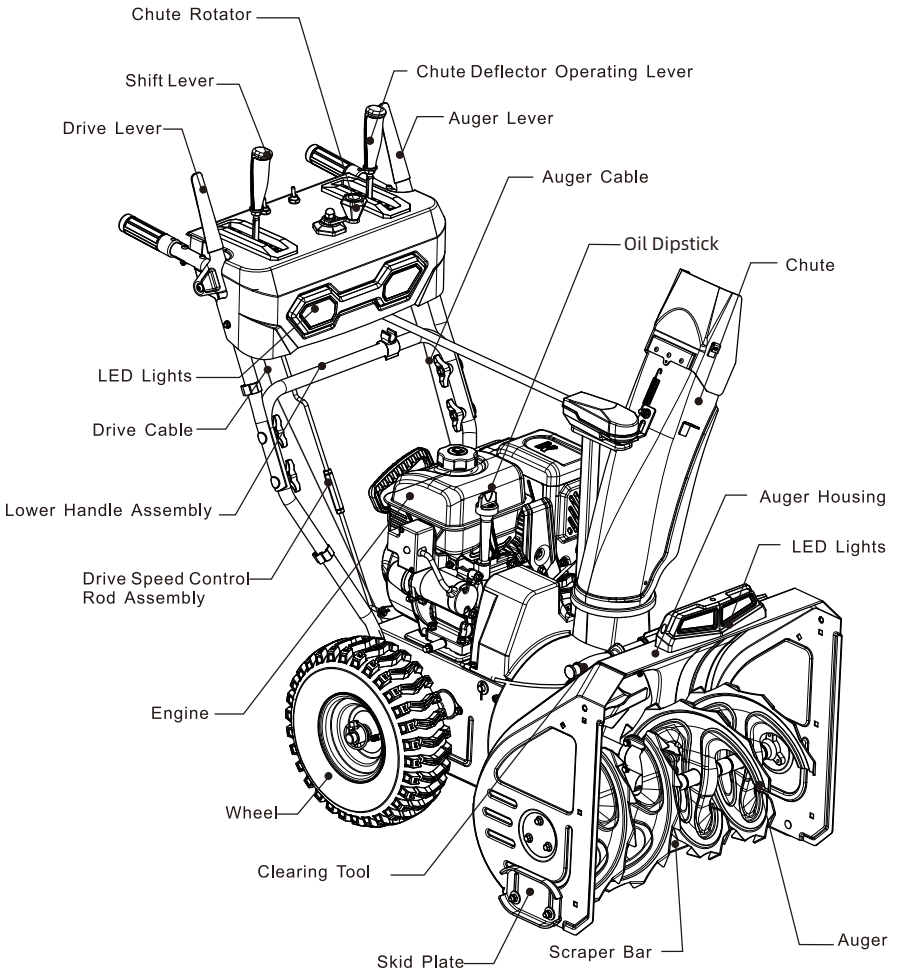







## ASSEMBLY

Your snow blower requires some assembly. This unit ships from our factory without oil. It must be properly serviced with fuel and oil before operation.

If you have any questions regarding the assembly of your snow blower, call our Technical Support Team at 1-888-676-7909. Please have your serial number and model number available.

## UNPACKING

 1. Remove any banding and open carton from top.
2. Remove all loose packed items and packaging inserts.
3. Remove all additional loose items from packaging materials. Do not discard packaging until you have confirmed all components are present.

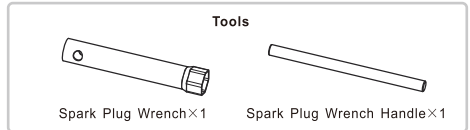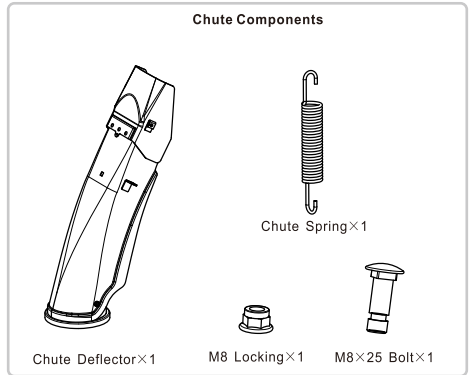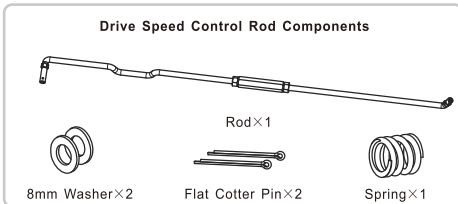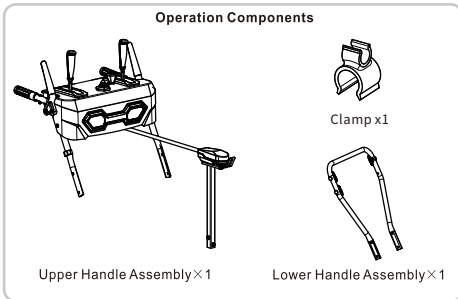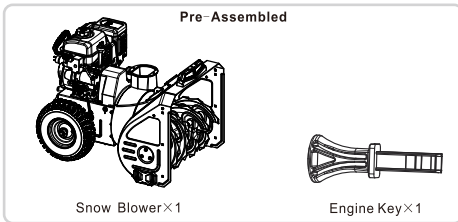


### Tools Kit Content: Tools Required

10mm wrench -Qty 1

13mm wrench -Qty 1

### Install the Lower Handle


1. Remove the 4 M8x25 flange bolts (A) from the case.
2. Use the 4 M8x25 flange bolts (A), the 4 spring washers (B) and the 4 flat washers (C).

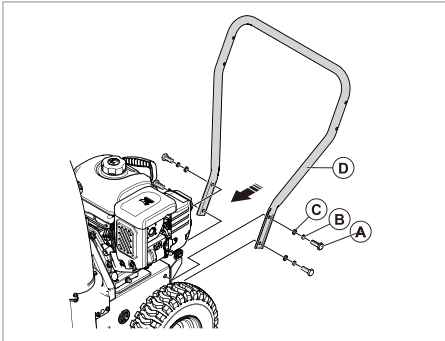


3. Install the lower handle (D) into the 2 holes on each side of the case.

### Install the Upper Handle

1. Insert the cable screw bolts (B) on the top of the auger cable and the drive cable to the holes on the left and the right handles (A).

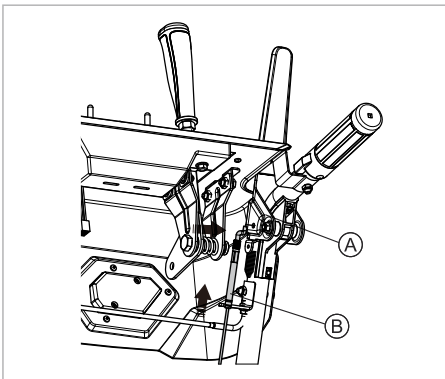


2. Use the four M8x50 handle lock bolts (A), the four spacers (B), the four handle knobs (C).
3. Install the upper handle (D) with the control panel on the lower handle.

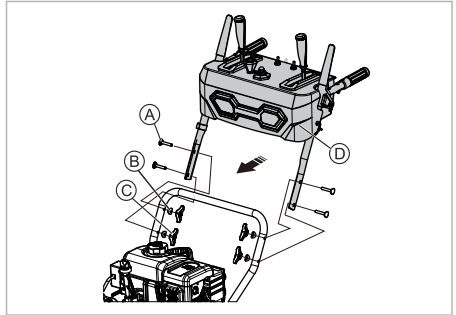


### Assemble the Chute Deflector and Chute Rotator


1. To install supporting bracket (A) fastening by two bolts M8x35 (B).

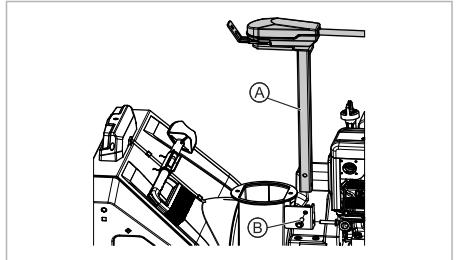


2. To install the deflector (A).
3. To fix the deflector with 1 bolt M8x25 (B) and 1 nut M8 (C).

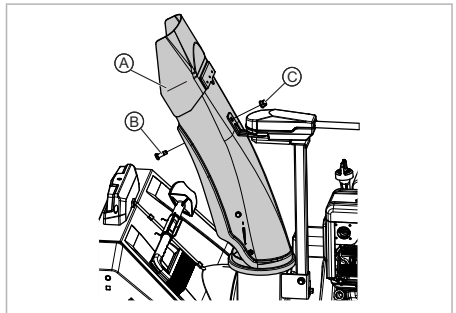

4. Insert the top cylinder (A) of the cable into the hole.
5. Put the cable screw (B) into the slot and tighten the nut M8 (C).
6. Install the long end of the snow outlet extension spring (D) into the upper slot, and the short end into the lower hole.

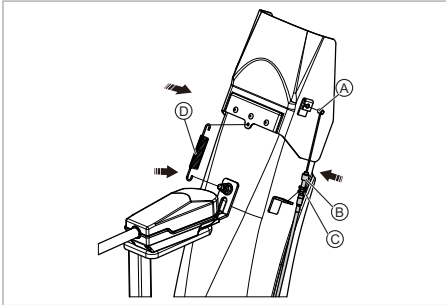


7. Install the clamp (A) to the shown position and fix the cable.

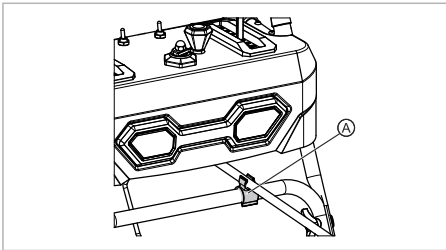


### Assemble the Drive Speed Control Rod

1. Install the long bent end of the drive speed control rod (A) to the control panel, and attach it with one connecting rod spring (B), one flat spacer (C) and one cotter pin (D).

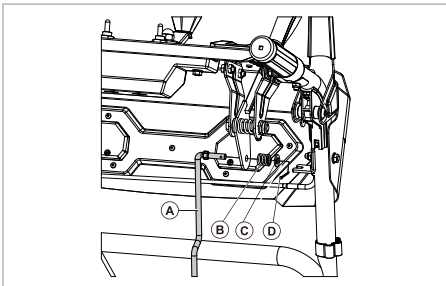


2. Pull up the shift connecting plate (B) and install the short bent end of the drive speed control rod (A) with one flat spacer (C) and one cotter pin (D).

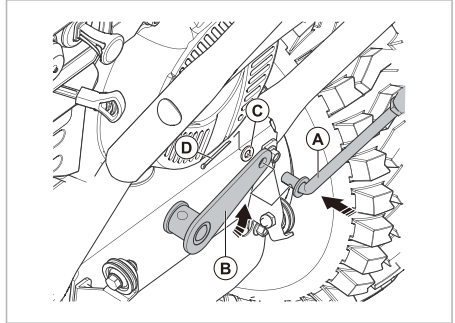


### Assemble the Wire

1. Connect plug A to plug C from the engine and connect plug B to plug D of LED light.

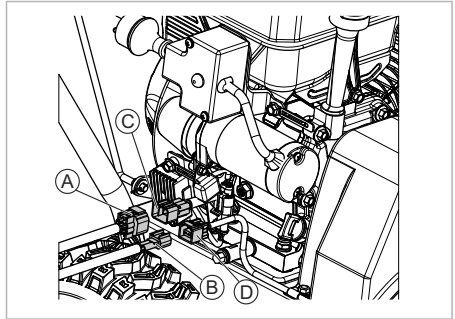

2. Use the hoop (B) to fix the LED light and the heating handle cable to the armrest assembly (A).

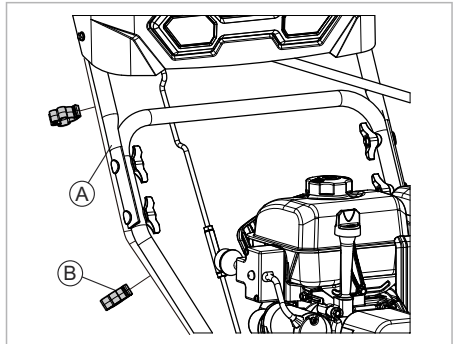

## OPERATION

The operation of any snow blower can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating your snow blower or performing any adjustments or repairs. We recommend standard safety glasses, or a wide vision safety mask worn over spectacles.

### WARNING

Before operating your machine, carefully read and understand all safety, controls and operating instructions in this Operator's Manual.

Failure to follow these instructions can result in serious personal injury.

## Introduction

Read this section before you start the engine. Then, take the time to familiarize yourself with the basic operation of the snow thrower before using it.

## Add Fuel

### DANGER

Gasoline vapors are highly flammable and extremely explosive.

**DO NOT** light or smoke cigarettes. Fire or explosion can cause severe burns or death.

Only fill or drain fuel outdoors in a well-ventilated area. **DO NOT** pump gasoline directly into the engine. Use an approved container to transfer the fuel to the engine.

Never use a gasoline container, gasoline tank, or any other fuel item that is broken, cut, torn or damaged.

**DO NOT** overfill the gasoline tank. Always keep fuel away from sparks, open flames, pilot lights, heat and other sources of ignition.

Use clean, fresh, regular unleaded gasoline with a minimum octane rating of 87 and an ethanol content of 10% or less by volume. **DO NOT** mix oil with gasoline.

1. Remove the fuel tank cap.
2. Slowly add gasoline to the tank. **DO NOT** OVERFILL.

Gasoline can expand after filling. A minimum of ¼ in. (6.4 mm) of space left in the tank is required for gasoline expansion although more than ¼ in. (6.4 mm) is recommended. Gasoline can be forced out of the tank as a result of expansion if overfilled and can affect the stable running condition of the snow thrower.

### CAUTION

**DO NOT** fill the tank when the engine is running or hot.

### DANGER

The engine works well with 10% or less ethanol blended gasoline. When using ethanol-gasoline blends there are some issues worth noting:

Ethanol-gasoline blends can absorb more water than gasoline alone.

These ethanol blends can eventually separate, leaving water or a watery good in the tank, fuel valve and carburetor. The compromised gasoline can be drawn into the carburetor and cause damage to the engine and/or create potential hazards.

If a fuel stabilizer is used, confirm that it is formulated to work with ethanol-gasoline blends.

Any damages or hazards caused by using ethanol blended gasoline higher than 10% by volume, improperly stored gasoline, and/or improperly formulated stabilizers, are not covered by manufacturer's warranty.

It is advisable to always shut off the gasoline supply and run the engine to starvation after each use. See Storage instructions for extended non-use.

## Add Engine Oil

### ⚠ CAUTION

#### This unit ships from our factory without oil.

It must be properly serviced with fuel and oil before operation. DO NOT attempt to crank or start the engine before it has been properly filled with the recommended type and amount of oil.

Damage to the engine as a result of failing to follow these instructions will void your warranty.

### 💬 NOTE


The recommended oil type is SAE 5W-30 automotive oil.

1. Place the snow blower on a flat, level surface.
2. Remove oil fill cap/dipstick to add engine oil.
3. Using a funnel, add up to 20 fl.oz (600 ml) of oil and replace oil fill cap/dipstick. DO NOT OVERFILL.
4. Check the engine oil level and add as needed.
5. Securely screw in the oil filler cap/dipstick.

### 💬 NOTE

Once oil has been added, a visual check should show oil about 1-2 threads from running out of the fill hole.


When using the dipstick to check oil level, DO NOT screw in the dipstick while checking.

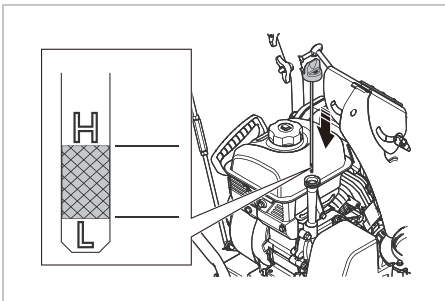



## Adjust the Chute and Chute Deflector

The direction in which snow is to be thrown is controlled by the chute rotator control knob which is installed on the control panel.

1. Rotate the chute rotator control to set the rotating direction of throwing snow.
2. Rotate the chute rotator control clockwise to throw snow rightwards.
3. Rotate the chute rotator to control counter-clockwise to throw snow leftwards.

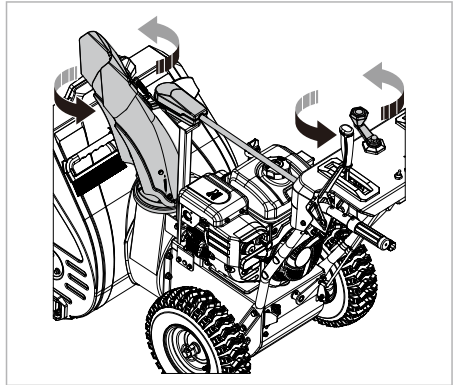


4. Move the angle deflector up or down to adjust the throwing distance of the snow.

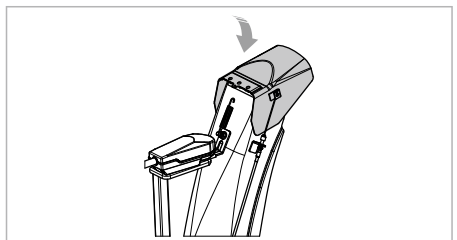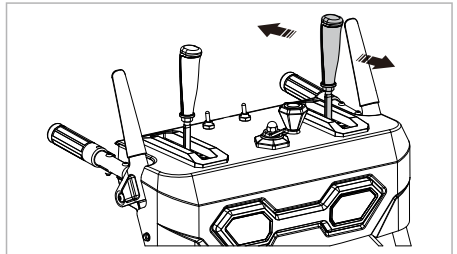


## Starting the Engine


1. Check the oil level and add oil if necessary.
2. Release the drive and auger engagement. Put the drive speed control lever in the first position.
3. Insert the ON/OFF key.

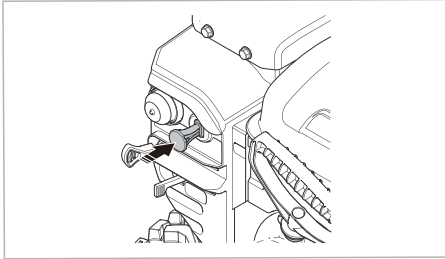


4. Turn the fuel switch to the ON position.

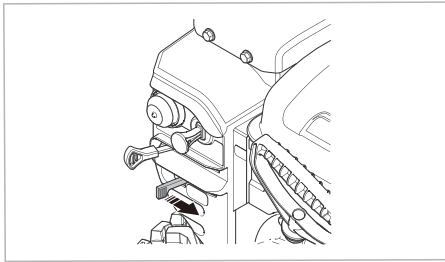

5. Slide the Choke lever to the CLOSED position.

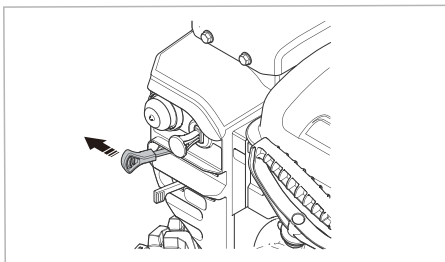

6. Firmly push in the primer 3 times with your thumb, holding the primer in a for a second before releasing it each time.

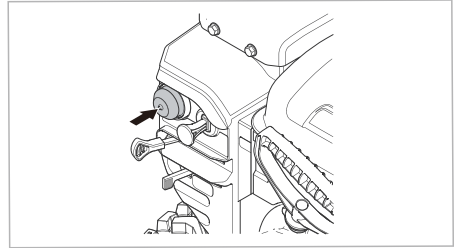


### NOTE


It may not be necessary to use the primer or the choke if the engine has been running and is hot.

Excessive priming may flood the engine and prevent it from starting.

7. Pull the starter handle slowly until resistance felt, then pull rapidly.

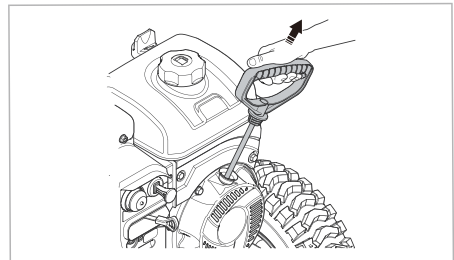

8. Once the engine starts, run the engine 30-40 seconds at idling speed before you start to throw snow.
9. When the engine is warm, slide the choke lever to the ON position.

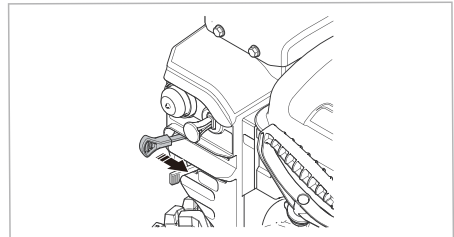

## Starting the Engine with Electric Start

### ⚠ WARNING


The product has a 120 Volt A.C. electric starter. Do not use the electric starter if your house is not a 120 Volt A.C. three-wire grounded system. Serious personal injury or damage to the product could occur. The electric starter has a three-wire power plug and is designed to use 120 Volt A.C. household current. Ensure that your house is a 120 Volt A.C. three-wire grounded system. If you are uncertain, consult a licensed electrician.

### 💡 NOTE


Use an extension cord that is recommended for outdoor use, and that is not longer than 50 feet (15 m).

Do the same steps from 1 to 6 of "Starting the Engine" first.

1. Connect the product to power. Plug a 3-wire extension cord into the electric start adapter on the snow blower. Plug the other end of the power cord into a convenient 120V outlet.

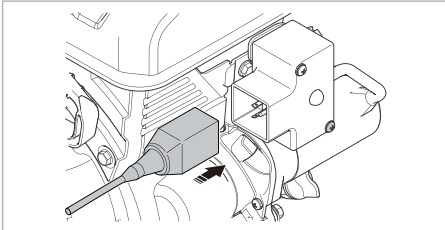

2. Press and hold the start button on the control box for 5 seconds.

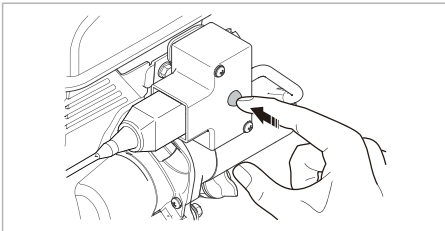

3. If the engine does not start, wait 5 seconds, then push the start button again.


4. Once the engine starts, remove the extension cord from the unit and unplugging it from the outlet, run the engine 30-40 seconds at idling speed before you start to throw snow. After the engine is warm, slide the choke lever to ON position(left side).

## Stopping the Engine and the Snow Blower


### ⚠ CAUTION

To turn the engine off in an emergency, pull out the ON/OFF key.


1. Release the drive engagement to stop the drive wheels.
2. Release the auger engagement to disengage the auger and stop throwing snow.

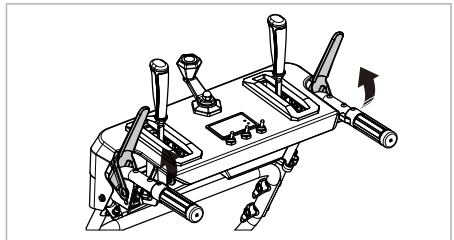

3. Turn the fuel switch to the OFF position.

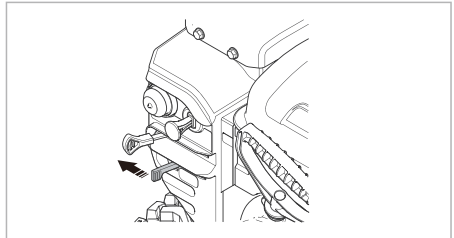


4. Remove the engine ON/OFF key.

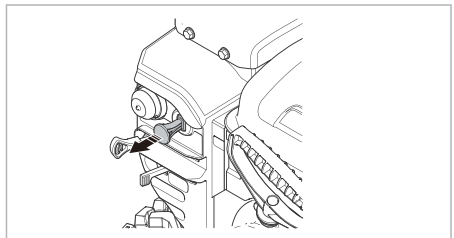


## Operate the Product


1. Squeeze the auger engagement to the handle to engage the auger and throw snow.

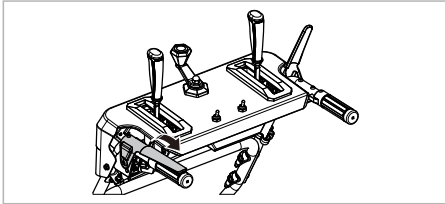


2. Move the drive speed control lever to the forward to operate the product forward. Move the speed control lever to the backward to operate the product backward.
3. The product speeds have 6 forwards and 2 reverse backward.

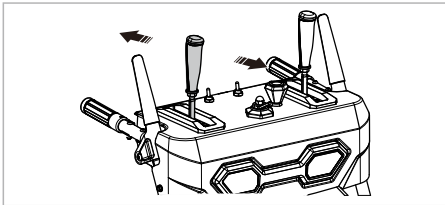

4. Operate the drive engagement with the right handle.
5. Squeeze the drive engagement to the handle to engage the drive wheels. The product moves forward or reverse depending on the location of the drive speed control lever.

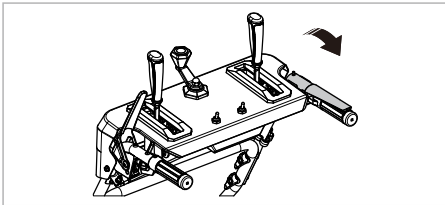


6. After pressing the left and right handles, the machine can walk and clear snow at the same time.

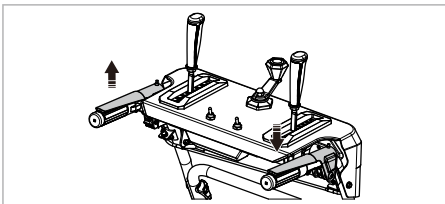



## Operate the Heating Handle

After starting the engine, the handle start to be heated with pushing switch (A) forward, to stop heating with pushing switch (A) backward.

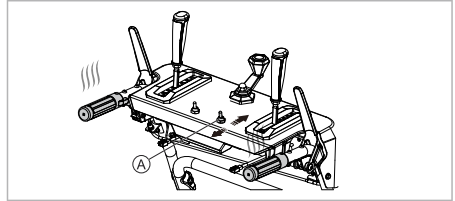

## Operate LED Lights

1. After the engine is started, push the switch (B) forward, the lights is on, and the switch (B) is pushed backwards, the lights is off.

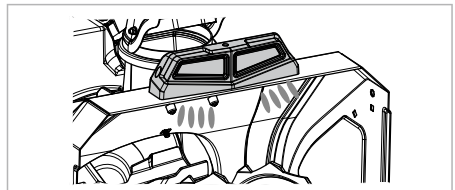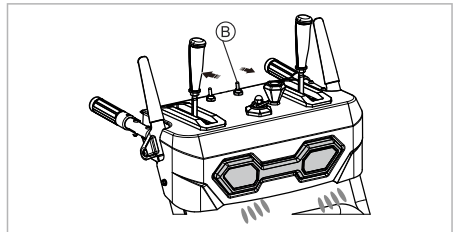

## Engaging the Auger

Squeeze the auger engagement to the handle (left side of upper handle) to engage the auger and throw snow.

## Engaging the Drive

1. Move the drive speed control lever to the front to operate the product forward. Move the drive speed control lever to the backward to operate the product rearward.
2. Operate the drive engagement with the right handle.
3. Squeeze the drive engagement to the handle to engage the drive wheels. The product moves forward or reverse depending on the location of the drive speed control lever.

## Clearing a Clogged Discharge Chute

### DANGER

Hand contact with the rotating auger blades inside the discharge chute is the most common cause of injury associated with snow throwers. Never use your hand to clean out the discharge chute.

To clear the chute:

1. Pull the ON/OFF key out to turn the engine off.
2. Wait 10 seconds to be sure the auger blades have stopped rotating.
3. Always use a clearing tool at least 15 inches long, not your hands.

## Preventing Freeze-up after Use

When snow removal is completed, let the engine run for a few minutes to prevent moving parts from freezing. Stop the engine, wait for all moving parts to stop.

1. Clean off any snow and ice from the base of the chute.
2. Rotate the discharge chute left and right to free it from any ice buildup.
3. Remove the engine key, pull the recoil starter handle several times or connect the electrical cord to a power source and the snow thrower and push the electric start button once to prevent the recoil starter from freezing up.

### NOTE

In snowy and cold conditions, some controls and moving parts may freeze. Do not use excessive force when trying to operate frozen controls. If you have difficulty operating any control or part, start the engine and let it run for a few minutes.

## Operating Tips

1. The best time to remove snow is the early morning. At this time the snow is usually dry and has not been exposed to the direct sun and warming temperatures.
2. Slightly overlap each successive path to ensure all snow will be removed.
3. Throw snow downwind whenever possible.
4. For extremely heavy snow, reduce the width of snow removal by overlapping previous path and moving slowly.
5. Keep the engine clean and clear of snow during use. This will help air flow and extend engine life.
6. After snow-throwing is completed, allow the engine to run for a few minutes to melt snow and ice off the engine.
7. Clean the entire snow thrower thoroughly after each use and wipe dry so it is ready for next use.

### WARNING

The auger blades can throw stones, toys, and other foreign objects and cause serious personal injury to the operator or to bystanders.

Keep the area to be cleared free of all objects that the auger blades could pick up and throw.

Keep all children and pets away from the area of operation.

Do not operate snow thrower if weather conditions impair visibility. Throwing snow during a heavy, windy snowstorm can blind you and be hazardous to the safe operation of the snow thrower.

## MAINTENANCE

Proper maintenance of your unit is important for maximum performance and a long service life.

To help you properly care for your unit, the following section includes a maintenance schedule and simple maintenance procedures. We suggest working with an Authorized Dealer, professional or qualified mechanic for any service which you are unfamiliar with, not mechanically proficient with or possessing the proper tools.

The maintenance schedule provided applies to normal operating conditions. If your unit is operated under more severe conditions such as high-temperatures, sustained high-load or operation in dusty or unusually wet conditions, please inspect and service your unit more frequently.

### DANGER

DO NOT use gasoline or low flash point solvents to clean the engine or any of its components. The possibility exists of fire or explosion which can damage the equipment and cause severe bodily harm or even DEATH.

### WARNING

Some maintenance operations may require a running engine. ALWAYS make sure the maintenance area is well ventilated. Gasoline engine exhaust contains poisonous carbon monoxide gas that can cause headaches, nausea, dizziness, drowsiness, confusion, fainting or death.

### CAUTION

ALWAYS allow the engine to cool before servicing. NEVER attempt to service a hot engine.

### CAUTION

ALWAYS disconnect the spark plug wire from the spark plug and secure it away from the engine before performing maintenance or adjustments.

Failure to follow these instructions can result in serious personal injury or property damage.

### NOTE

Maintenance, replacement, or repair of emission control devices and systems may be performed by any non-road engine repair establishment or individual.

## RECOMMENDED MAINTENANCE SCHEDULE

Recommended Maintenance Schedule		Each Use	First 20 Hours or 1 Month	Every 50 Hours or 3 Months	Every 100 Hours or Every Season	Every 300 Hours	Before Storage
Engine Oil	Check	X					
	Replace		X		X (1)		
Spark Plug	Check		X		X		
	Replace				X	X	
Fuel	Check Level	X					
	Drain						X
Fuel Lines	Check				X		X
	Replace					X	
Hardware-Bolts/Nuts Carburetor	Check		X		X		
	Drain						X
Air Cooling System	Check				X		
Valve Clearance	Check-Adjust					X (2)	
Remove Clogging	Check	X					
Tire Pressure	Clean			X			

1. Service more frequently when used in dusty conditions - Replace if worn or damaged.
2. These items should be maintained and repaired by an authorized dealer, unless the owner has appropriate tools and is proficient with mechanical maintenance.

## Oil Change

### NOTE

Used oil is a hazardous waste product and must be disposed of properly. Check your local regulations for proper disposal/recycling facilities.

Change the engine oil after the first 20 hours of use. Thereafter, change the oil every 100 hours of use or every season. Change the oil more often if used in dusty conditions.

If possible, drain the oil while the engine is warm. Warm oil drains more quickly and completely. Refer to the adding engine oil section for the recommended oil for your operating environment.

1. Place a suitable container below the oil drain plug to catch the used oil.
2. Remove the oil filler cap/dipstick and the drain plug bolt and sealing washer from the engine.
3. Allow the oil to drain completely from the engine.
4. Reinstall and tighten the drain plug bolt with sealing washer.
5. Using a funnel, add up to 20 oz (0.6L) of oil to the engine.
6. Check the oil level using the dipstick. DO NOT screw in when checking.
7. When finished screw in the dipstick / oil fill cap securely.

## Spark Plug Service

Check the spark plug after the first 20 hours and every 100 hours of operation thereafter. Replace the spark plug after 300 hours of operation.

Recommended Spark Plug: Torch E5RTC or NGK BR5HS.

Spark Plug Gap: .028 - .030 in. (0.7-0.8mm)

### CAUTION

Always allow the engine to cool before performing maintenance, adjustments or service.

### NOTE


A loose spark plug can overheat and damage the engine.

1. Remove the spark plug cap and clear away any dirt around the spark plug base.
2. Using a spark plug wrench, remove the spark plug.
3. Visually check the spark plug. Clean with a steel brush. If the insulator is damaged, replace the spark plug.
4. Measure the spark plug gap with a suitable gauge. Adjust the spark plug gap as necessary by carefully bending the ground electrode.
5. To prevent cross threading, thread the spark plug in by hand until it seats, then tighten with a spark plug wrench as follows.

New Spark Plug - Tighten ½ turn after the plug seats to the cylinder head.

Used Spark Plug - Tighten to ¼ turn after the plug seats to the cylinder head.

6. Reconnect the spark plug cap.

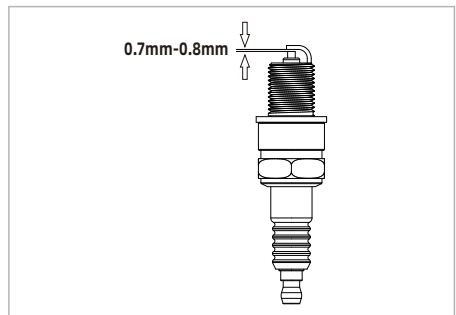

### NOTE

The spark plug must be tightened securely, or it may become very hot and damage the engine.


## Inspect the Augers and the Scraper Bar

1. Before each use, inspect the augers and the scraper bar for wear.
2. If the edges of the augers or the scraper bar are worn, contact Customer Service Center to replace them.

## Adjust the Skid Plates

No adjustment is required for normal installation.


1. When the lock nut (B) is loose or the skid plate (A) is not high enough from the ground, unlock the lock nut (B).
2. On flat surfaces, like asphalt roads, make the clearance 5-6 mm (0.2-0.25 in) higher between the skid plates (A) and the ground with a 13 mm open ended wrench. On uneven surfaces, like gravel roads, raise the scraper bar slightly above the top of the gravel. Make sure that the gravel and stones do not enter into the product. It will cause personal injuries if those foreign objects are ejected at high speed.
3. Fasten the lock nut (B).

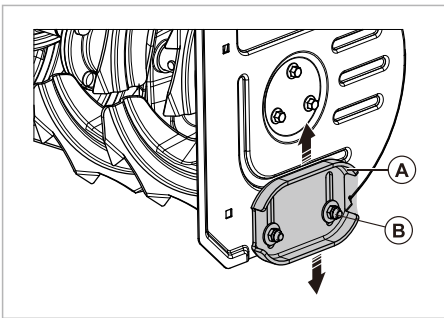

## Replace the Shear Pin

The shear pin protects the product from damage. It breaks if a foreign object enters the moving parts.

1. If the shear pin breaks, stop the engine.
2. Attach a new shear pin (A) and a new clamp spring (B).

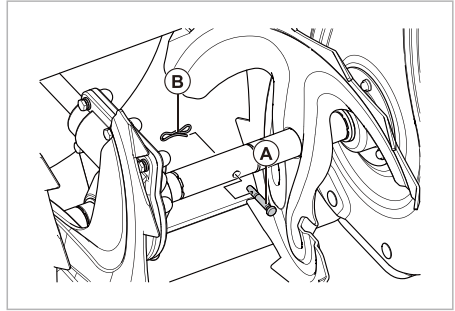

## Examine the Tires

Keep the tires free of fuel, oil and chemicals to prevent damage to the rubber.

Keep the tires away from stumps, stones, ruts, sharp objects and other objects which can cause damage to the tires.

Keep the tire pressure correct, 138Kpa (20 psi).

## Clear a Clogged Chute

### ⚠ WARNING

Do not put your hands into the chute or inside the auger housing.

Do not unclog the chute if it is clogged before the following operations are made.

1. Release the auger engagement and the drive engagement at the same time, Remove the engine key.
2. Wait 10 seconds to make sure that the augers have stopped.
3. Use the included clean-out tool to remove the clog.

Clean the Product.

Clean plastic parts with a clean and dry cloth.

Do not use a high pressure washer to clean the product.

Do not flush water directly on the motor.

Use a brush to remove leaves, grass and dirt.

## STORAGE

Immediately prepare your snow thrower for storage at the end of the season or if the unit will not be used for 30 days or more.

### WARNING

Never store the snow thrower with gasoline in the tank and carburetor inside a building where fumes may reach an open flame, spark or pilot light as on a furnace, water heater, clothes dryer or gas appliance. Allow the engine to cool before storing in any enclosure.

When snow thrower is to be stored for a period of time, clean it thoroughly, remove all dirt, grease, leaves, etc. Store in a clean, dry area.

1. Clean the entire snow thrower after each use.
2. Be sure that all nuts, bolts and screws are securely fastened. Inspect moving parts for damage, breakage and wear. Replace if necessary.

## FUEL SYSTEM

**IMPORTANT:** It is important to prevent gum deposits from forming in essential fuel system parts such as carburetor, fuel hose, or tank during storage. Also, alcohol blended fuels can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage.

Empty the fuel tank by starting the engine and letting it run until the fuel lines and carburetor are empty.

Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

Use fresh fuel next season.

Fuel stabilizers are an acceptable alternative in minimizing the formation of fuel gum deposits during storage.

Add stabilizer to gasoline in fuel tank or storage container. Always follow the mix ratio found on stabilizer container. Run the engine at least 10 minutes after adding stabilizer to allow the stabilizer to reach the carburetor. Do not empty the gas tank and carburetor if using fuel stabilizer.

## ENGINE OIL

Drain oil (with engine warm) and replace with clean engine oil.

## CYLINDER

1. Remove spark plug.
2. Pour approximately one teaspoon of clean engine oil (5 cc) into the spark plug hole.
3. Pull recoil starter handle slowly a few times to distribute oil.

## OTHER

Remove the ON/OFF key; store it in a safe place.

Do not store gasoline from one season to another.

Replace your gasoline can if the can starts to rust. Rust and / or dirt in your gasoline will cause problems.

If possible, cover it to protect it from dust and dirt.

Cover your snow thrower with a suitable protective cover that does not retain moisture. Do not use plastic. Plastic cannot breathe, which allows condensation to form and will cause your snow thrower to rust.

**IMPORTANT:** Never cover snow thrower while engine / exhaust area is still warm.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Does not start	The safety ignition key is not inserted.	Insert the safety ignition key.
	The product is out of fuel.	Fill the fuel tank with fresh, clean gasoline.
	Safety ignition key is not inserted.	Insert safety ignition key.
	The choke is in OFF (CLOSE) position.	Move the choke to ON (FULL, OPEN) position.
	The primer is not depressed.	Press the primer.
	The engine is flooded.	Wait a few minutes before restarting, DO NOT prime. Restart the engine while full throttle and the choke in OFF (CLOSE) position.
	The spark plug wire is not connected.	Connect the wire to the spark plug.
	The spark plug is bad.	Replace the spark plug.
	There is water in the fuel, or the fuel is too old.	Empty the fuel tank and carburetor. Fill the fuel tank with fresh, clean gasoline.
	There is vapor locked in the fuel line.	Make sure that all the fuel line is below the outlet of the fuel tank. The fuel line should run continuously down from the fuel tank to carburetor.
	The fuel switch is in CLOSE (OFF) position.	Turn the fuel switch to OPEN (ON) position.
Decreased power	The spark plug wire is not connected.	Connect the wire to the spark plug.
	The product throws too much snow.	Decrease the speed and the width of the swath.
	The fuel tank cap is covered with ice or snow.	Remove the ice and the snow on and around the fuel tank cap.
	Stale / Old Fuel.	Drain and fill with fresh fuel.
	Improper cable length.	Adjust the cable.
	The muffler is blocked.	Make sure that the engine is cool. Clear the blockage.
	The air intake of the carburetor is blocked.	Make sure that the engine is cool. Clear the blockage.
The engine idles or runs roughly	The choke is in ON (FULL, OPEN) position.	Move the choke to OFF (CLOSE) position.
	The fuel line is blocked.	Clean the fuel line.
	There is water in the fuel, or the fuel is too old.	Empty the fuel tank and carburetor. Fill the fuel tank with fresh, clean gasoline.
	The carburetor needs to be replaced.	Contact customer service center.
	The belt is stretched.	Replace the auger v-belt.
Excessive vibration / Handle movement	Some parts are loose. The augers are damaged.	Tighten all fasteners. Replace the damaged parts. If vibration remains, contact customer service center.
	The handles are not positioned correctly.	Make sure that the handles are locked into position.
	The adjustment lever nuts are loose.	Tighten the nuts until the handle feels safe.
The recoil start handle is hard to pull	The recoil start handle is frozen.	Slowly pull out as much rope out of the starter as possible and release the recoil start handle. If the engine does not start, repeat the procedure or use the electrical starter.
	The rope is interfering with components.	The recoil rope should not touch any wires or hoses.

Problem	Possible Cause	Solution
Loss of traction drive/ slowing of drive speed. Loss of snow discharge or slowing of snow discharge	The belt slips.	Adjust the cable. Adjust the belt.
	The belt is worn.	Check / replace the belt.
	The belt is off the pulley.	Check / replace the belt.
	The chute deflector is clogged.	Clean the chute deflector.
	Foreign objects clog the augers.	Remove the debris or the foreign object from the augers.
	The shear pin is broken.	Replace the broken shear pin.
	Excessive snow and ice buildup in between track components.	Remove snow and ice build up from in between track components.
Failure of auger rotation after the grip is released	The friction drive wheel is worn.	Contact customer service center.
	The drive belt is not aligned.	Adjust the drive belt.
The chute rotator is difficult to move	The discharge deflector is not aligned.	Adjust the discharge deflector.
	There is debris in the chute rotator mechanism.	Clean the internal parts of the chute rotator mechanism.
The product turns to one side	The cables are kinked or damaged.	Make sure that the cables are not kinked. Replace the cables that are damaged.
	The tire pressure is not equal.	Adjust the tire pressure and fill the tire.
	The product drives with only one wheel.	Inspect the tire lock pin.
	Uneven sled adjustment.	Adjust the skid plates and the sledge.
	Uneven skid plates adjustment.	Adjust the skid plates and the sledge.

If engine still doesn't start, contact our Technical Support Team at 1-888-676-7909 Mon-Fri 8-4 CST or Email: [support@poulanpro-power.us](mailto:support@poulanpro-power.us).

**BASIC SERVICE PARTS LIST****Common Service Parts**

Service Part	Part Number
Discharge Chute	2402600005-0001
Chute Deflector	2402700005-0001
Locknut M8	3008000001-0001
Washer 8	3606400005
Bolt M8x25	3403000003-0001
Auger	2714100004-0001
Auger Belt 3LXA827	2126500005-0001
Belt Cover	2601500062-0003
Wheel	2803100008-0005
Auger Cable	3001700040-0001
Rotator Cable 980	3009100032-0001
Rotator Cable 920	3009100028-0001
Scraper	2706100005-0001
Cylinder Head Gasket	1200800103-0001
Crankcase Gasket	1101400004-0001
Oil Dipstick	1101500001-0001
Recoil Starter	2000200074-0001
Engine Switch	2205000006-0001
Carburetor	1807900098-0001
Fuel Tank Cap	1800900044-0001
Fuel Line	1816200008-0001
Breather Pipe	1203500002-0001
Spark Plug	2204700004-0001
Drain Bolt	3602900002
Ignition Coil	2204100067-0001
Fuel Tank	1800100098-0001

## WARRANTY STATEMENT

### 2-Year Limited Warranty Terms and Conditions

PoulanPro® is a registered trademark of Husqvarna AB and is used under license to Novus Performance Products LLC. Novus products are warranted for two (2) years against defects in materials or workmanship when put to ordinary and normal consumer use; ninety (90) days for any other use.

For the purposes of all the above warranties, "ordinary and normal consumer use" refers to non-commercial residential use and does not include misuse, accidents or damage due to inadequate maintenance. Novus Performance Products LLC certifies that Novus Products are fit for ordinary purposes for which a product of this type is used. Novus Performance Products LLC, however, limits the implied warranties of merchantability and fitness in duration to a period of two (2) years in consumer use, ninety (90) days for any other use.

The 2-Year Limited Warranty on Novus Products starts on the purchase date. The 2-Year Limited Warranty is applicable only to the original owner.

The warranty holder is responsible for the performance of the required maintenance as defined by the manufacturer's owner's manuals. The warranty holder is responsible for replacement of normally wearing parts such as the Belt, Shear Pins, Spark Plug and Air Filter. Accessories to the machine are not covered by this warranty.

During the warranty period, the warranty holder is responsible for the machine transportation charges, if required.

During the warranty period, warranty parts will be shipped by standard method at no charge to the warranty holder. Expedited shipping of warranty parts is the responsibility of the warranty holder.

SOME STATES DO NOT ALLOW LIMITATIONS ON THE LENGTH OF IMPLIED WARRANTIES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Novus Performance Products LLC shall not be liable under any circumstances for any incidental or consequential damages or expenses of any kind, including, but not limited to, cost of equipment rentals, loss of profit, or cost of hiring services to perform tasks normally performed by Novus Products.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

#### Technical Support:

Toll free: 1-888-676-7909 Mon-Fri 8-4 CST

Email: [support@poulanpro-power.us](mailto:support@poulanpro-power.us)

## **U.S. FEDERAL EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS**

The United States Environmental Protection Agency and Novus Performance Products LLC (Novus) are pleased to explain the emissions control system warranty on your 2024-2025 small off-road engine/equipment (SORE). In the United States, new equipment that use small off-road engines must be designed, built, and equipped to meet the State's stringent anti-smog standards. Novus must warrant the emissions control system on your small off-road engine/equipment for the periods of time listed below there has been no abuse, neglect or improper maintenance of your small off-road engine or equipment leading to the failure of the emissions control system.

Your emissions control system may include parts such as the carburetor or fuel-injection system, the ignition system, catalytic converter, fuel tanks, fuel lines (for liquid fuel and fuel vapors), fuel caps, valves, canisters, filters, clamps and other associated components. Also included may be hoses, belts, connectors, and other emission-related assemblies.

Where a warrantable condition exists, Novus will repair your small off-road engine/equipment at no cost to you including diagnosis, parts and labor.

### **MANUFACTURER'S WARRANTY COVERAGE:**

This emissions control system on your small off-road engine/equipment is warranted for two years. If any emission-related part on your small off-road engine/equipment is defective, the part will be repaired or replaced by Novus.

### **OWNER'S WARRANTY RESPONSIBILITIES:**

As the small off-road engine/equipment owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Novus recommends that you retain all receipts covering maintenance on your small off-road engine/equipment, but Novus cannot deny warranty coverage solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the small off-road engine/equipment owner, you should however be aware that Novus may deny you warranty coverage if your small off-road engine/equipment or a part has failed due to abuse, neglect, or improper maintenance or unapproved modifications.

You are responsible for presenting your small off-road engine/equipment to a Novus distribution center or service center as soon as the problem exists. The warranty repairs shall be completed in a reasonable amount of time, not to exceed 30 days. If you have any questions regarding your warranty rights and responsibilities, you should contact:

Novus Performance Products LLC  
customer service representative  
1-800-409-7802  
Email: [Support@novuspowerequipment.com](mailto:Support@novuspowerequipment.com)

## DEFECTS WARRANTY REQUIREMENTS

(a) **Applicability.** This section applies to emissions control systems on small off-road engines or equipment that use small off-road engines subject to the emission standards in this Article. The warranty period begins on the date the engine or equipment is delivered to an ultimate purchaser and extends for a period of two years.

(b) **General Emissions Warranty Coverage.** The engine or equipment must be warranted to the ultimate purchaser and any subsequent owner that the emissions control system when installed was:

(1) Designed, built, and equipped so as to conform with all applicable regulations; and

(2) Free from defects in materials and workmanship that causes the failure of a warranted part for a period of two years.

(c) The warranty on emissions-related parts will be interpreted as follows:

(1) Any warranted part that is not scheduled for replacement as required maintenance in the written instructions required by subsection (e) must be warranted for the warranty period defined in subsection (b)(2). If any such part fail during the period of warranty coverage, it must be repaired or replaced by Poulan Pro or it's contracted warranty provider according to subsection (4) below. Any such part repaired or replaced under the warranty must be warranted for a time not less than the remaining warranty period.

(2) Any warranted part that is scheduled only for regular inspection in the written instructions required by subsection (e) must be warranted for the warranty period defined in subsection (b)(2). A statement in such written instructions to the effect of "repair or replace as necessary" shall advise owners of the warranty coverage for emissions related parts. Replacement within the warranty period is covered by the warranty and will not reduce the period of warranty coverage. Any such part repaired or replaced under warranty must be warranted for a time not less than the remaining warranty period.

(3) Any warranted part that is scheduled for replacement as required maintenance in the written instructions required by subsection (e) must be warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part must be repaired or replaced by Poulan Pro according to Subsection (4) below. Any such part repaired or replaced under warranty must be

warranted for a time not less than the remainder of the period prior to the first scheduled replacement point for the part.

(4) Repair or replacement of any warranted part under the warranty provisions of this article must be performed at no charge to the owner at a warranty station.

(5) Notwithstanding the provisions of subsection (4) above, warranty services or repairs must be provided at distribution centers that are franchised to service the subject small off-road engine/equipment.

(6) The small off-road engine/equipment owner must not be charged for diagnostic labor that leads to the determination that a warranted part is in fact defective, provided that such diagnostic work is performed at a warranty station.

(7) Throughout the emissions control system's warranty period set out in subsection (b)(2), Poulan Pro or it's contracted warranty provider must maintain a supply of warranted parts sufficient to meet the expected demand for such parts and must obtain additional parts if that supply is exhausted.

(8) Manufacturer-approved replacement parts that do not increase the exhaust or emissions of the engine or emissions control system must be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of Poulan Pro or it's contracted warranty provider.

(9) The use of add-on or modified parts may be grounds for disallowing a warranty claim made in accordance with this Article. Poulan Pro or it's contracted warranty provider will not be liable under this Article to warrant failures of warranted parts caused by the use of an add-on or modified part.

(10) Poulan Pro shall provide any documents that describe that it's warranty procedures or policies within five working days of request by the Executive Officer.

(d) A list of all emissions warranty parts must be included with each new engine or equipment subject to this Article. The emissions warranty parts list shall include all parts whose failure would increase exhaust and evaporative emissions, and contains the following parts:

**EMISSIONS PARTS LIST****Exhaust Emission**

- (1) Fuel Metering System
    - (A) Carburetor and internal parts (and/or pressure regulator or fuel injection system).
    - (B) Air/fuel ratio feedback and control system.
    - (C) Cold start enrichment system.
  - (2) Air Induction System
    - (A) Controlled hot air intake system.
    - (B) Intake manifold.
    - (C) Air filter.
  - (3) Ignition System
    - (A) Spark Plugs.
    - (B) Magneto or electronic ignition system.
    - (C) Spark advance/retard system.
  - (4) Exhaust Gas Recirculation (EGR) System
    - (A) EGR valve body, and carburetor spacer if applicable.
    - (B) EGR rate feedback and control system.
  - (5) Air injection System
    - (A) Air pump or pulse valve.
    - (B) Valves affecting distribution of flow.
    - (C) Distribution manifold.
  - (6) Catalyst or Thermal Reactor System
    - (A) Catalytic converter.
    - (B) Thermal reactor.
    - (C) Exhaust manifold.
  - (7) Particulate Controls
    - (A) Traps, filters, precipitators, and any other device used to capture particulate emissions.
  - (8) Miscellaneous items Used in Above Systems
    - (A) Vacuum, temperature, and time sensitive valves and switches.
    - (B) Electronic controls.
    - (C) Hoses, belts, connectors, and assemblies.
- Evaporative Emission
- (1) Fuel Tank
  - (2) Fuel Cap
  - (3) Fuel lines(for liquid fuel and fuel vapors)
  - (4) Fuel Line Fittings
  - (5) Clamps
  - (6) Pressure Relief Valves

- (7) Control Valves
- (8) Control Solenoids
- (9) Electronic Controls
- (10) Vacuum Control Diaphragms
- (11) Control Cables
- (12) Control Linkages
- (13) Purge Valves
- (14) Gaskets
- (15) Liquid/Vapor Separator
- (16) Carbon Canister
- (17) Canister Mounting Brackets
- (18) Carburetor Purge Port Connector

Note: As they relate to the emissions control system.

(e)Written instructions for the maintenance and use of the emissions control system by the owner shall be furnished with each new engine or equipment subject to this Article. The instructions must be consistent with this Article and applicable regulations contained herein.

(f)The documents required by subsections (d) and (e) must be submitted with the application for emissions control system certification for approval by the Executive Officer. Approval by the Executive Officer of the documents required by subsections (d) and (e) is a condition of certification. The Executive Officer will approve or disapprove the documents required by subsections (d) and (e) within 90 days of the date such documents are received.

(g)The application for emissions control system certification must also include a statement regarding the maintenance of the emissions control system. The statement must include, but not be limited to, information on emissions control system maintenance, and a maintenance schedule.

(h)Any other warranty statements applicable to engines or equipment units must not imply a limitation on the emissions warranty period or its applicability to subsequent owners after the ultimate purchaser. If the warranty period for any warranty other than the emissions warranty is less than two years, the statement of such warranty must specifically state that it does not limit the emissions warranty period of two years from purchase. If any warranty other than the emissions warranty does not extend to subsequent owners after the ultimate purchaser, the statement of such warranty must specifically state that it does not affect the applicability of the emissions warranty to subsequent owners after the ultimate purchaser.