




Pressure Washer Mister Combination Operations Sheet

Scan here for
instruction video

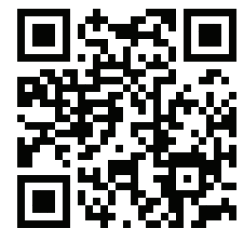

Step 1



Plug unit into 120V outlet.

Step 2



Attach the blue high pressure hose to the outlet of the pump.

Step 3



Attach a small section of garden hose (10-feet or less) to the inlet of the pump.

Step 4



Submerge the other end of the garden hose into a 5-gallon bucket containing disinfectant solution.

Step 5



Purge air from the system, this could take up to 3 minutes:

- Close the misting valve on the pressure washer by turning the small black knob clockwise
- Place the high pressure hose over the 5-gallon bucket
- Turn the pressure washer on
- When there is a steady flow of disinfectant through the hose turn the pressure washer off

Step 6



With the pressure washer off, connect the misting gun to the high pressure hose.

Step 7




Open the misting valve on the pressure washer by turning the small black knob counter-clockwise.

Step 8



Turn the pressure washer on.

Step 9

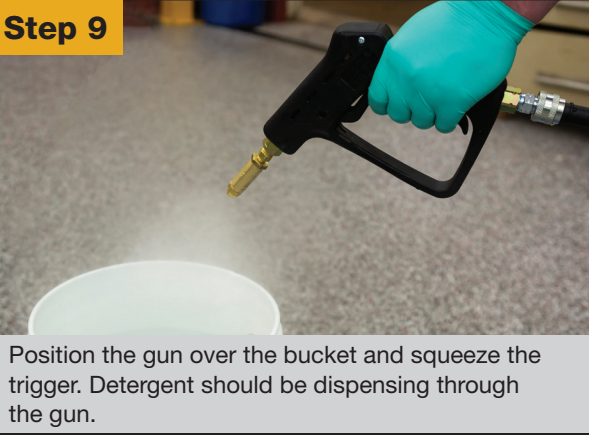

Position the gun over the bucket and squeeze the trigger. Detergent should be dispensing through the gun.

Step 10



The mister is ready to operate. Mister droplet size – 20-30-micron at 2-inches from tip at 350-PSI.

Accessory



Dual gun application available, AW-3100-0001
Includes: dual gun adapter, trigger gun with misting nozzle and 75-foot non-marking high pressure hose



CM-1400-1MEH-M
Hand Carry



CM-1400-0MEC-M
Portable

Units Include:

- 2-piece, 36-inch lance and trigger gun
- 1 misting gun with misting nozzle
- 75-foot x 1/4-inch blue high pressure hose with quick connects
- Quick connect nozzles - 15°, 25°, detergent and misting

WARNING: Refer to chemical label. Follow all instructions. Use required personal protective equipment.

WARNING: Cancer and Reproductive Harm - www.P65warnings.ca.gov.