



# SERVICE PARTS LIST

**BULLETIN NO.**  
**54-40-2635**

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
<b>M18 Brushless 7-1/4" Circular Saw</b>			Aug. 2024
CATALOG NO.	<b>2631-20</b>	STARTING SERIAL NO.	<b>J74A</b>
		WIRING INSTRUCTION <b>SEE PAGE 2</b>	


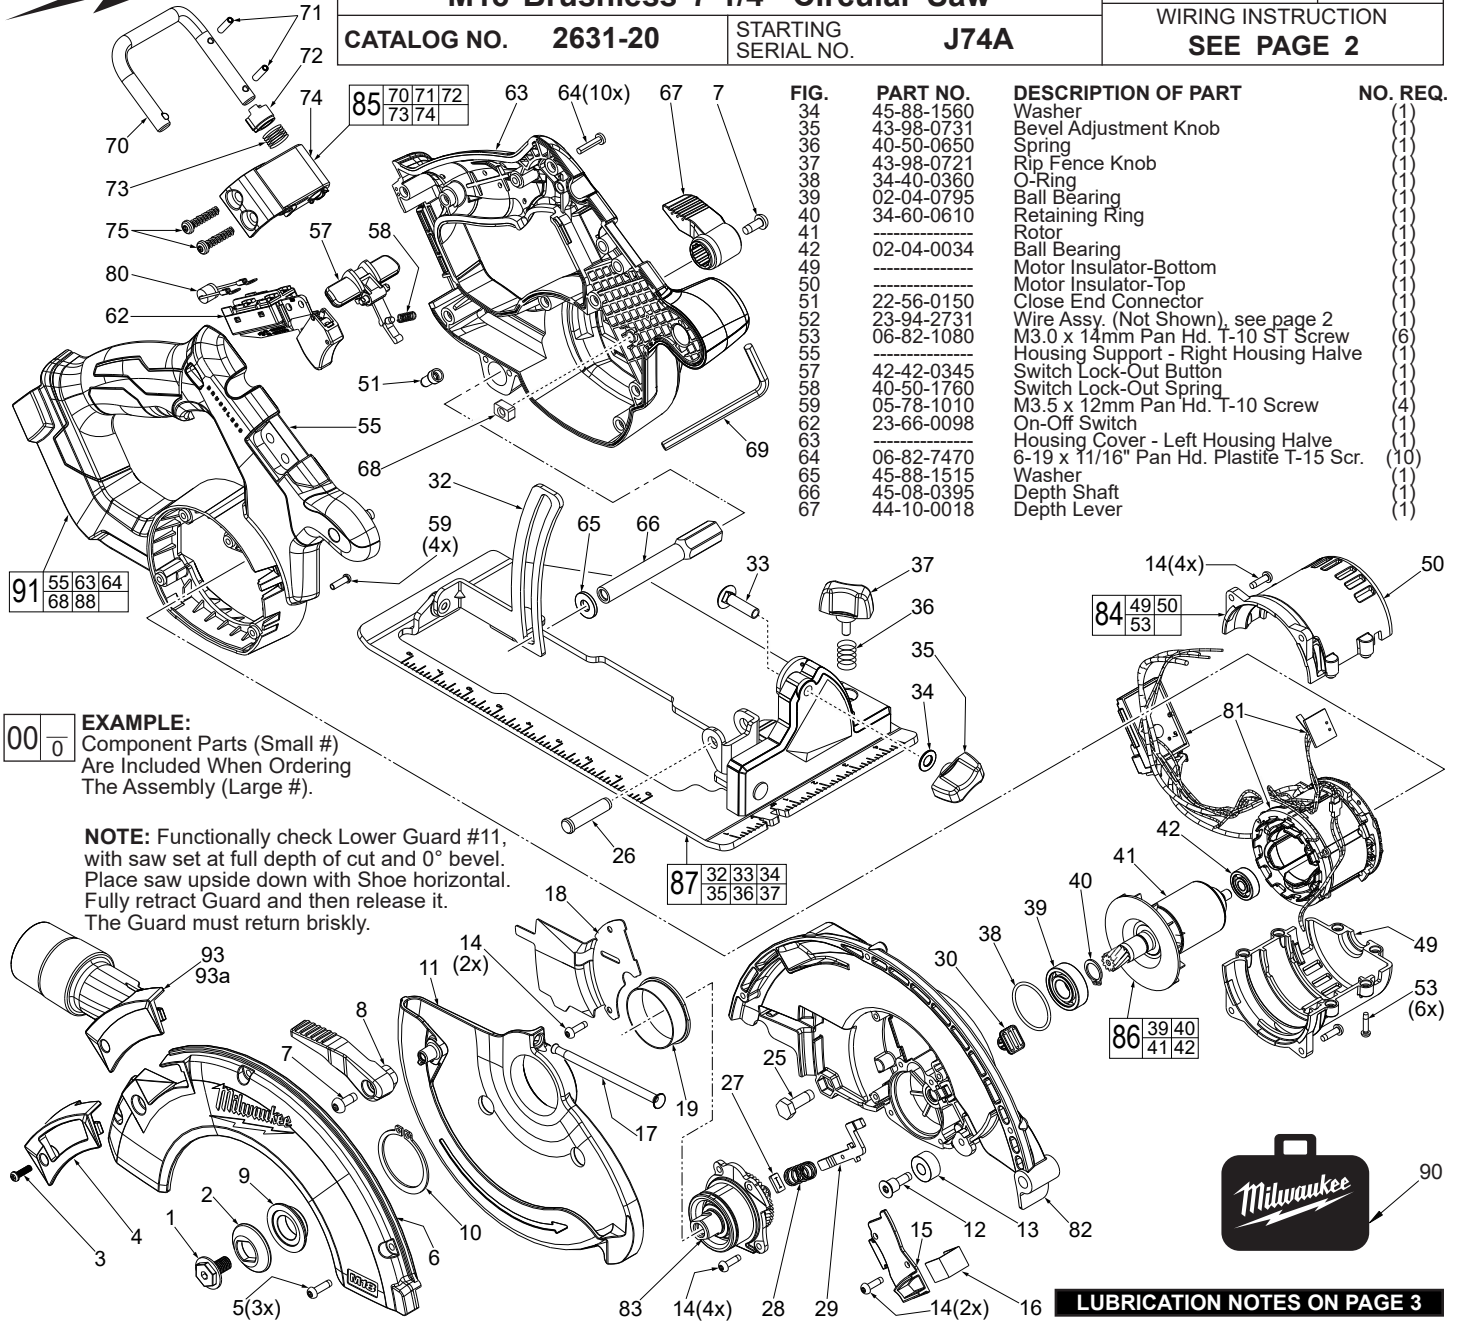


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	06-75-1012	Left Hand Blade Screw	(1)	68	22-90-0025	Retention Rubber	(1)
2	43-34-0795	Outer Blade Flange	(1)	69	49-96-0600	3/16" Hex Key	(1)
3	05-78-1005	M3.5 x 12mm Pan Hd. Phillips Screw	(1)	70		Saw Hook Bar	(1)
4	49-90-4001	Dust Chute	(1)	71	44-60-0585	Coiled Spring Pin	(1)
5	05-78-5316	M4 x 14mm Pan Hd. Tapt. T-20 Screw	(3)	72	45-22-1005	Detent Sleeve	(2)
6	28-20-2001	Upper Guard Cover	(1)	73	40-50-0985	Saw Hook Spring	(1)
7	06-82-5314	10-24 x 1/2" Pan Hd. Tapt. T-25 Screw	(2)	74		Saw Hook Housing	(1)
8	44-10-1008	Lower Guard Lever	(1)	75	06-82-0052	M6 x 32mm Pan Hd. T-25 PT Screw	(2)
9	43-34-0790	Inner Blade Flange	(1)	80	23-38-2840	Diode Assembly	(1)
10	34-60-0860	Retaining Ring	(1)	81	14-20-5001	Electronic Assembly	(1)
11	28-41-0023	Lower Guard	(1)	82	28-14-9005	Upper Guard Gear Case Assy. w/ Bushing	(1)
12	45-04-0485	10-32 x 13/16" Bumper Screw	(1)	83	38-50-0160	Output Shaft Assembly	(1)
13	42-38-0224	Rubber Bumper	(1)	84	23-16-9001	Motor Insulator Assembly	(1)
14	06-82-5285	6-32 x 1/2" Pan Hd. Taptite T-15 Screw	(12)	85	14-36-0001	Saw Hook Assembly	(1)
15	31-15-0265	Spindle/LED Cover	(1)	86	23-40-6001	Rotor Assembly	(1)
16	22-06-2732	LED Assembly	(1)	87	14-74-1001	Shoe Assembly	(1)
17	40-50-0045	Lower Guard Spring	(1)	88	12-20-8450	Service Nameplate (Not Shown)	(1)
18	44-66-0398	Retaining Plate	(1)	89	49-22-2731	Rip Fence (Not Shown)	(1)
19	45-14-0015	Plastic Sleeve	(1)	90	50-55-3550	Contractors Bag	(1)
25	06-75-5860	1/4-20 x 3/4" Hex Hd. Screw	(1)	91	14-38-3001	Housing Assembly	(1)
26	44-60-0741	Pivot Pin	(1)	92	10-20-0359	Warning Label (Not Shown)	(1)
27	45-06-0720	Felt Seal	(1)	93	49-90-3001	Dust Adaptor (Optional)	(1)
28	40-50-8046	Spindle Lock Spring	(1)	93a	49-90-3002	Dust Adaptor (Optional)	(1)
29	44-20-0653	Spindle Lock Plate	(1)				
30	42-42-1030	Spindle Lock Button	(1)				
32	-----	Shoe	(1)				
33	06-10-4001	M6 x 28mm Carriage Bolt	(1)				



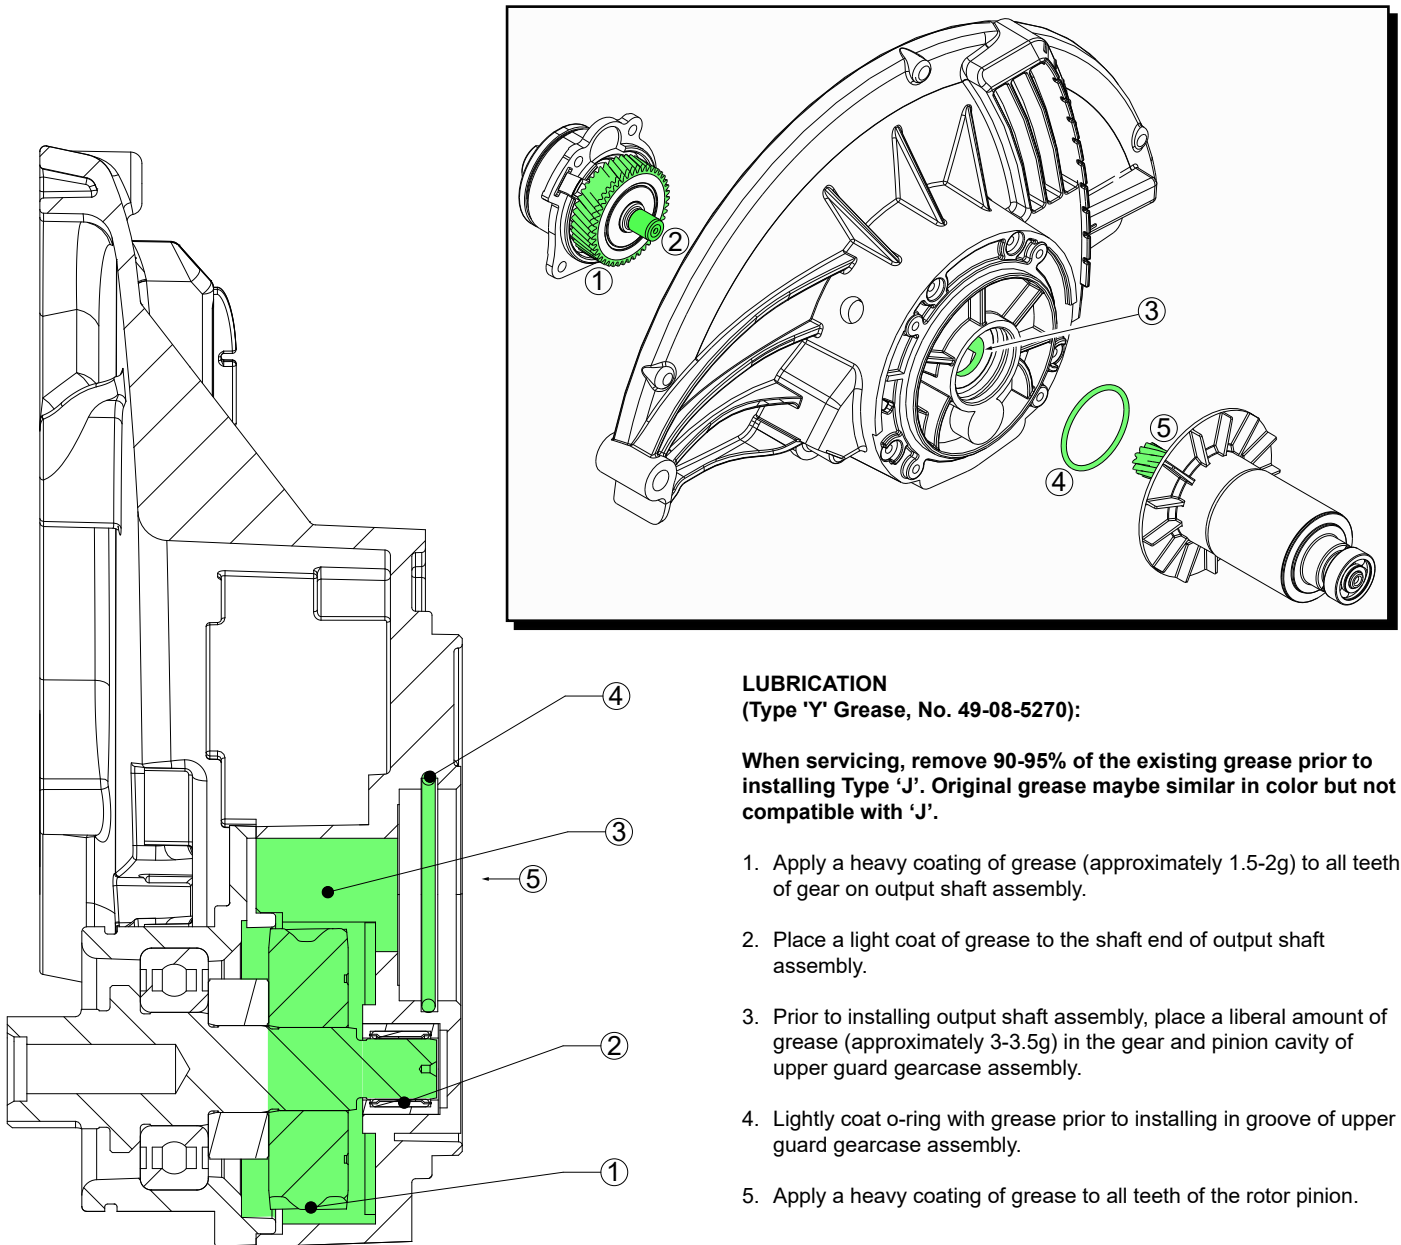

**LUBRICATION**  
 (Type 'Y' Grease, No. 49-08-5270):

**When servicing, remove 90-95% of the existing grease prior to installing Type 'J'. Original grease maybe similar in color but not compatible with 'J'.**

1. Apply a heavy coating of grease (approximately 1.5-2g) to all teeth of gear on output shaft assembly.
2. Place a light coat of grease to the shaft end of output shaft assembly.
3. Prior to installing output shaft assembly, place a liberal amount of grease (approximately 3-3.5g) in the gear and pinion cavity of upper guard gearcase assembly.
4. Lightly coat o-ring with grease prior to installing in groove of upper guard gearcase assembly.
5. Apply a heavy coating of grease to all teeth of the rotor pinion.

