



Questions, problèmes, pièces manquantes? Avant de retourner au magasin, veuillez communiquer avec le service à la clientèle Commercial Electric entre 8h00 et 19h00 (HNE) du lundi au vendredi, entre 9h00 et 18h00 (HNE) du samedi

1-877-592-5233

HOMEDEPOT.COM/HUBSPACE

Conservez ce guide pour un usage ultérieur.



 
Item #1010 633 889
Model #LCN3002LM-01 WH
Item #1010 634 128
Model #LCN3002LM-01 MB
Item #1011 101 171
Model #LCN3002LM-01 BN

T24

Can be used to comply with California Title 24 High Efficacy requirements

USE AND CARE GUIDE

LED INTERIOR SMART 12 IN. FLUSHMOUNT

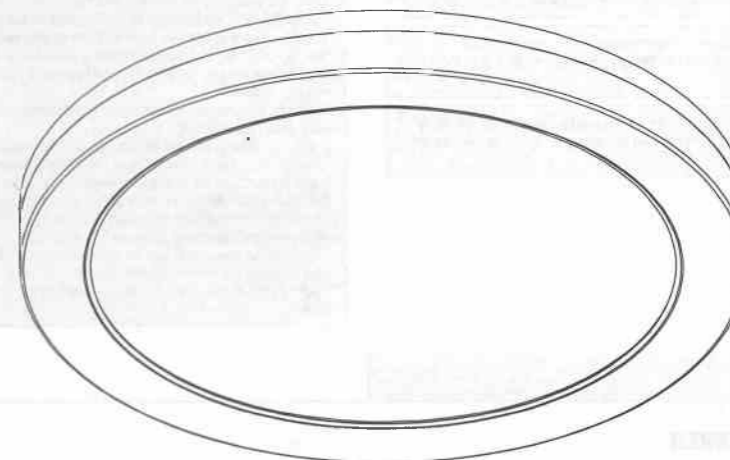

Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-592-5233

HOMEDEPOT.COM/HUBSPACE

THANK YOU

We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of these LED edgelit flushmounts. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Commercial Electric!

Table of Contents

Table of Contents	2	Package Contents	4
Safety Information	2	Installation	5
Warranty	2	Care and Cleaning	6
What is Covered	2	Troubleshooting	6
What is Not Covered	2	Connect the Products	7
Pre-Installation	3		
Planning Installation	3		
Tools Required	3		
Hardware Included	3		

Safety Information



WARNING: Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire or other injuries which could be hazardous or even fatal.



WARNING: Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn the circuit off.

NOTICE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-592-5233 or visit HOMEDEPOT.COM/HUBSPACE.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

NOTE: Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED



Wire Strippers



Safety goggles



Ladder



Gloves



Flathead Screwdriver



Phillips Screwdriver



 
Electrical Tape



Wire Cutters

HARDWARE INCLUDED (FOR EACH FLUSHMOUNT)


NOTE: Hardware not shown to actual size.

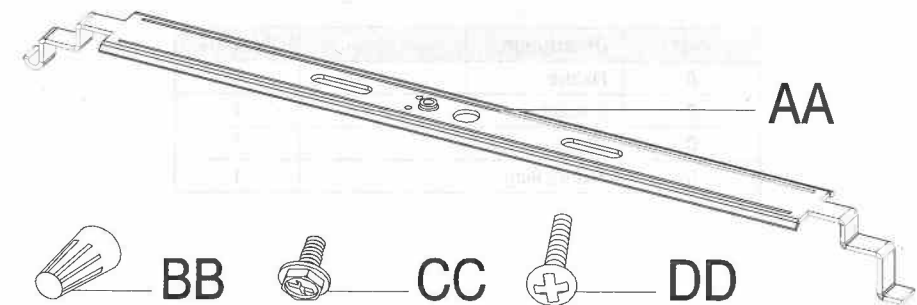

Part	Description	Quantity
AA	Mounting Bracket	1
BB	Wire Connector	2
CC	Ground Screw	1
DD	Outlet Box Screw (15 mm)	2

Pre-Installation (continued)

 PACKAGE CONTENTS (FOR EACH FLUSHMOUNT)

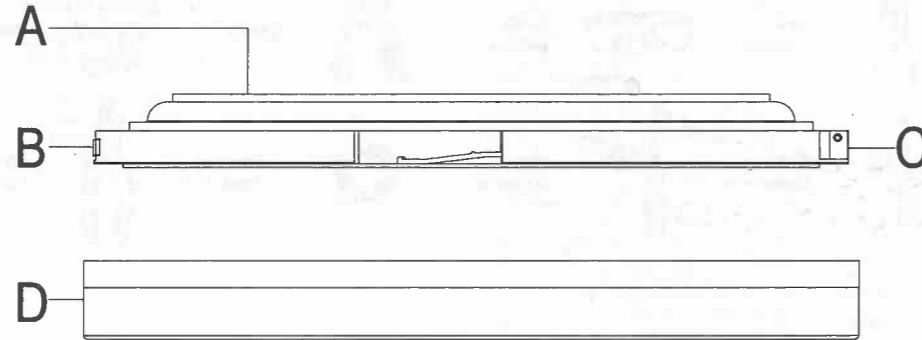


Part	Description	Quantity
A	Fixture	1
B	Bracket	1
C	Hook	1
D	Fixture Ring	1

Installation


1 Attaching the mounting bracket to the outlet box

 - Place the mounting bracket (AA) over the outlet box (not included) so the holes on the mounting bracket (AA) align with the screw holes on the outlet box.
- Screw the outlet box screws (DD) through the holes on the mounting bracket (AA) into the screw holes on the outlet box.

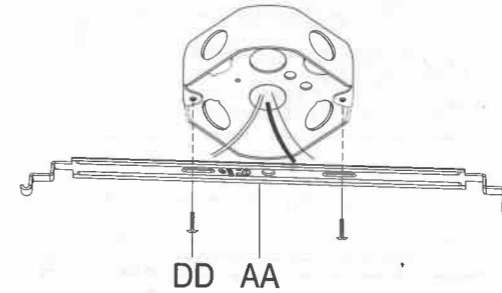

2 Connecting the electrical wires

 
- Hang the hook (C) located on the fixture (A) onto the mounting bracket (AA).
- Wrap the ground wire from the outlet box around the ground screw (CC) on the mounting bracket (AA).
- Use a wire connector (BB) to connect the white wire from the fixture (A) to the white wire (neutral wire) from the outlet box.
- Use a wire connector (BB) to connect the black wire from the fixture (A) to the black wire (live wire) from the outlet box.
- Wrap the three wire connections with electrical tape for a more secure connection.
- Position the wires inside the outlet box.

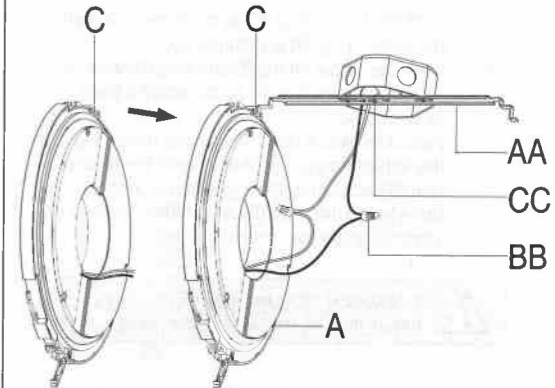

Installation (continued)


3 Securing the fixture to the ceiling

 - Raise the fixture (A) until it is flush with the mounting bracket.
- Close the bracket (B) to fixing the fixture (A) on the mounting Bracket (AA).

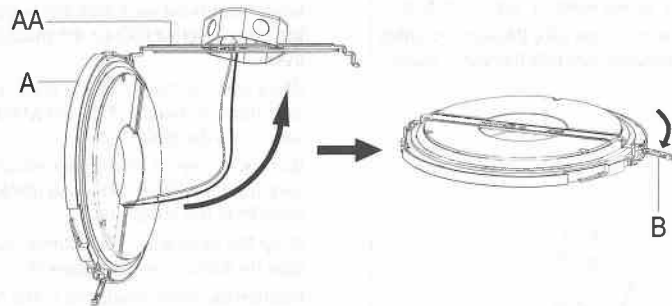

4 Securing the fixture ring

 - Hold the fixture ring (D) so the arrow label on the fixture ring (D) is pointing up.
- Align the arrow on the fixture ring (D) with the arrow on the fixture (A) so the arrows point to each other.
- Place the fixture ring (D) over the fixture (A). Turn the fixture ring (D) clockwise until the fixture ring (D) locks into place (just a few inches).
- Once the fixture ring (D) is installed, remove the arrow label on the fixture ring (D).

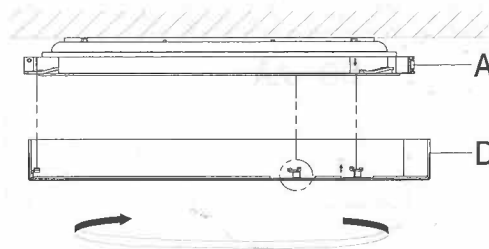

WARNING: If not locked in place, the fixture ring (D) may fall and cause serious injury.

Care and Cleaning

- Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.
- Clean the fixture with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The fixture will not light.	The power is off.	Ensure the power supply is On.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or the circuit breaker trips when the light is turned on.	The wires are crossed or the power wire is grounding out.	<ul style="list-style-type: none"> □ Check the wire connections. □ Contact a qualified electrician or call the Customer Service Team at 1-877-592-5233.

Connect the products

1 Download the app

- Descargar Hubspace™ aplicaciones de App Store o Google Play Store.



NOTE: For more information on the Hubspace app, visit hubspace.com/Hubspace.



2 Create an account and instructions on the app screen

- Create an account to sign in or log in if you already have an account

 


NOTE:

- This Hubspace device requires a 2.4GHz Wi-Fi channel. Hubspace only shows Wi-Fi networks that your device can use.
- If you do not see your Wi-Fi network name when you attempt to connect your devices, please check your router settings or move your product closer to your Wi-Fi router.

3 Tap the '+' button in the upper right corner to add your smart light

- Tap the '+' button in the upper right corner to add your smart light.

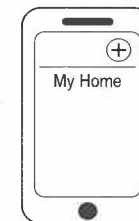

NOTE:

- Bluetooth access is required for device setup.
- If the device cannot be connected to the smart light, it needs to be turned on and off 5 times to the smart light to reset and reconnect it.

4 Scan the QR Code

- Scan the QR code on the label.



HUBSPACE APP QUICK START GUIDE



NOTE: If the QR code cannot be scanned, you can enter the code manually. Tap Enter Code and follow the instructions.

5 Using your smart light

- Turn your smart light on or off and selected lighting effects according your requirements from the Home page on the Hubspace app.
- To set a schedule or timer, tap the name of the smart light on the Home page. You will see options for setting Schedules and Auto-Off Timers

6 Set up your voice assistant

- You can connect your smart light to Google Home and Alexa from the Hubspace app. Or you can sign in to Alexa app or Google Home and connect to your Hubspace devices from there.