 




PANEL DOLLY

OWNER'S MANUAL

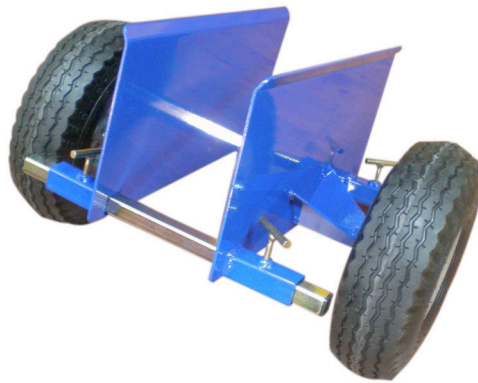

WARNING: Read carefully and understand all **INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item # 999012

Thank you very much for choosing a Northern Industrial Tools™ product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This product is designed for certain applications only. The distributor cannot be responsible for issues arising from modification. We strongly recommend this product not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the product until you have first contacted the distributor to determine if it can or should be performed on the product.

For technical questions please call **1-800-222-5381**.

INTENDED USE

This dolly will help you safely move large heavy items such as drywall or wood panels, sheets of steel or steel parts, large doors, or any other heavy or bulky items. For added control of larger or longer pieces, two dollies can be used. Always secure any loads / items and use on hard, flat surfaces only.

TECHNICAL SPECIFICATIONS & PACKING LIST

Item	Description
Load Capacity	600 Lbs. (272kgs)
Adjustable Size	0in.-9in. (0-22.9cm)

GENERAL SAFETY RULES



WARNING: Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.



CAUTION: Do not allow persons to use or assemble this dolly until they have read this manual and have developed a thorough understanding of how the dolly works.



WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

SAVE THESE INSTRUCTIONS

WORK AREA

When assembling or operating the dolly

- **Keep work area clean**, free of clutter and well lit. Cluttered and dark work areas can cause accidents.
- **Keep children and bystanders** away while assembling or working with the dolly. Distractions can cause loss of control, so visitors should remain at a safe distance from the work area.
- **Be aware of all power lines, electrical circuits**, water pipes and other mechanical hazards near your work area, particularly those hazards below the work surface hidden from the operator's view that may be unintentionally contacted and may cause personal harm or property damage.

PERSONAL SAFETY

- **Stay alert**, watch what you are doing and use common sense when using the dolly.
- After adjusting backplates, make sure the T-HANDLE set screws have been locked.

DOLLY USE AND CARE

- **Do not modify the dolly in any way** . Unauthorized modification may impair the function and/or safety and could affect the life of the equipment. There are specific applications for which the dolly was designed.
- **Always check for damaged or worn parts before using the dolly**. Broken parts will affect the dolly operation. Replace or repair damaged or worn parts immediately.
- **Do not exceed the dolly 600-lb. load capacity**.

ASSEMBLY

Recommended Tools:

1 -Rubber Mallet

NOTE: Refer to parts diagram during assembly to see fully assembled product.

Step 1: Assemble the wheel on the shaft of backplate and lock it with cap

Hardware Needed:

Qty 2: Back plate Assembly (Part #1)


Qty 2: Wheels (Part #3)

Qty 2: Cap (Part #5)

Qty 6: Flat Washer (Part #4)

See Figure#1 below. Attach backplate assembly (Part #1) with wheels (Part #3) using flat washer (Part #4). Next, lock it with cap (Part #5) (see below).

 IMPORTANT! Repeat for opposite side. You will have two assemblies when complete.

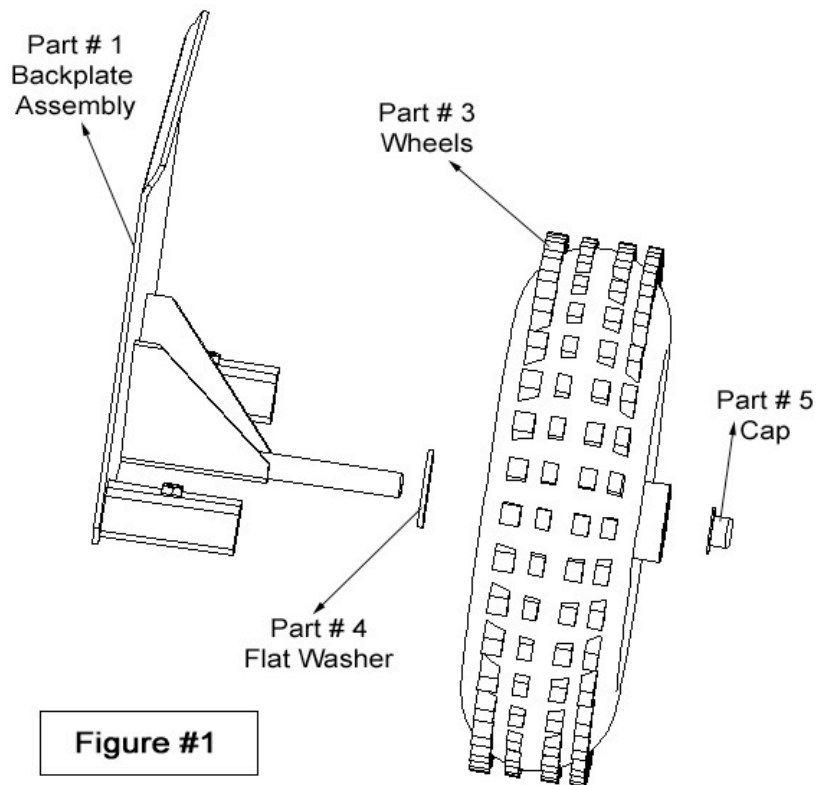


Step 2: Attach the two assembled backplates from step 1 with adjustable tube and lock with T-style screw.

Hardware Needed:

Qty 2: Adjustable Tube (Part #2)

Qty 4: T-style screw (Part #6)

 See Figure #2 below. Attach the two side of assembled backplates to the adjustable tube (Part #2) with T-style (Part #6) locking using flat washer (Part #4).

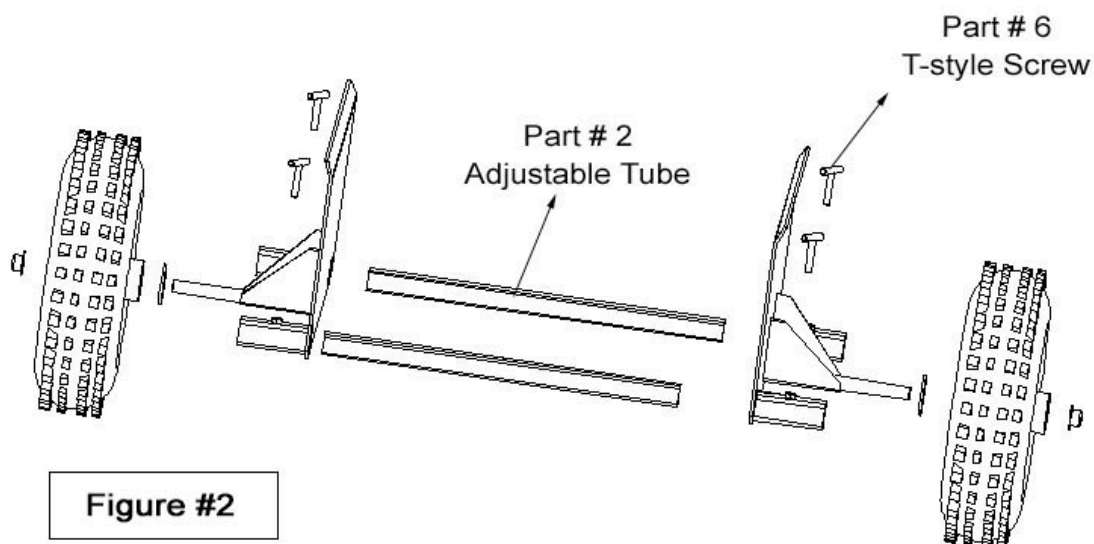

OPERATION

Step 1: Adjust the opening of two backplates to fit the item to be moved.


Step 2: Set the load or cargo on the adjustable tube.

Step 3: Locked with T-style screw to secure the load or cargo.

MAINTENANCE

- **Maintain your dolly.** It is recommended that the general condition of the dolly be examined before it is used. Keep the dolly in good repair by adopting a program of conscientious repair and maintenance in accordance with the recommended procedures found in this manual.
- **Keep the dolly clean.** A properly maintained dolly will work more effectively. Keep all of the parts dry, clean, and free from oil and grease.
- **Cleaning.** Use only soap and a damp cloth to clean your dolly.

 DIAGRAM & PARTS LIST

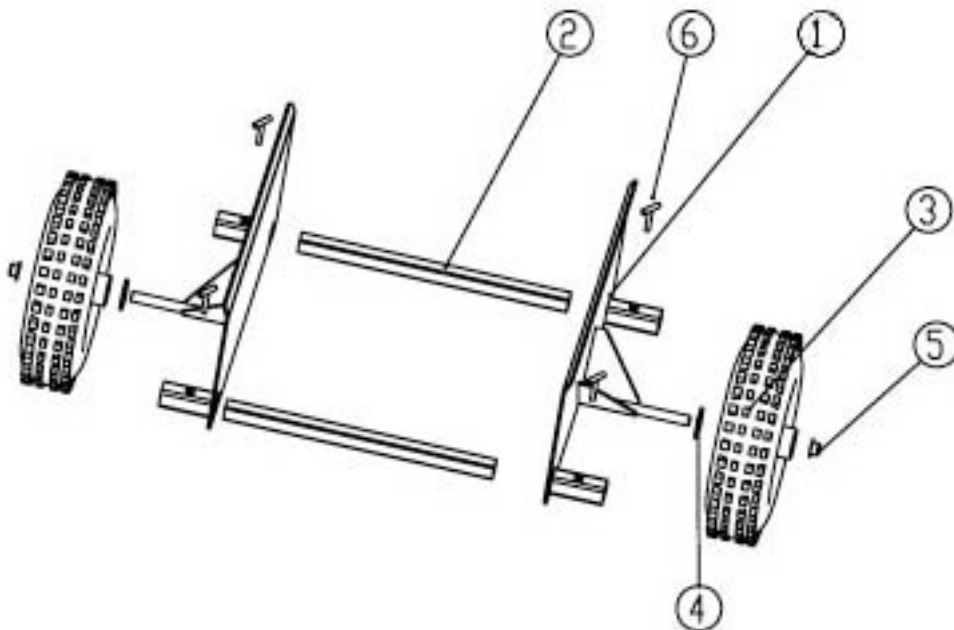

Part#	Description	Qty.
1	Backplate assembly	2
2	Adjustable Tube	2
3	Wheels	2
4	Flat washer	6
5	Cap	2
6	T-style Screw	4

For replacement parts and technical questions, please call **1-800-222-5381**.

WARRANTY

One-Year Limited Warranty



Distributed by
Northern Tool + Equipment Co.,
Burnsville, MN 55306-6936
Made in China