

ENFORCER III

Instructions

Both models of the Enforcer III require minimum assembly.

- A. Row unit on it's side and mount the release levers to the aluminum release plate. Use open end wrenches and a screwdriver for mounting the inside screw. (see figure #1)
- B. Tighten eyebolts down firmly against the forks (see figure #2)

Mount unit level with ground and operate 2-4" from surface. The speed of travel and mounting height "greatly" affects the Enforcer's performance. Even the most powerful magnets will fail to attract steel objects if the unit is too high from the ground, or if driving too fast. (2-4 mph travel speed is recommended)



Figure #1

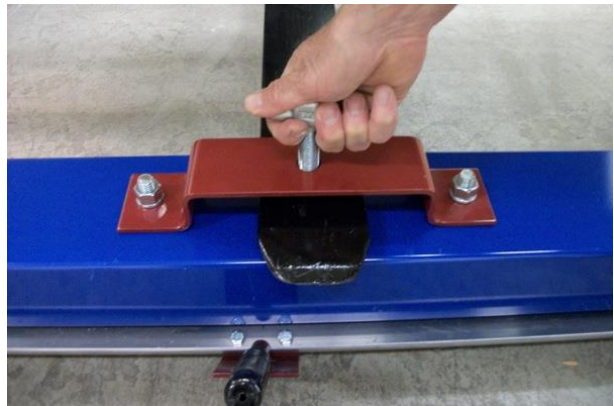


Figure #2



Figure #3


Cleaning: Excessive buildup of magnetic material will reduce the unit's lifting power.

Simply raise the forks and push down on the hinged aluminum plate and allow debris to fall to the ground. (see figure #3)

- The 96" model has two sets of hinged plates that need to be released.

ENFORCER III

Parts List

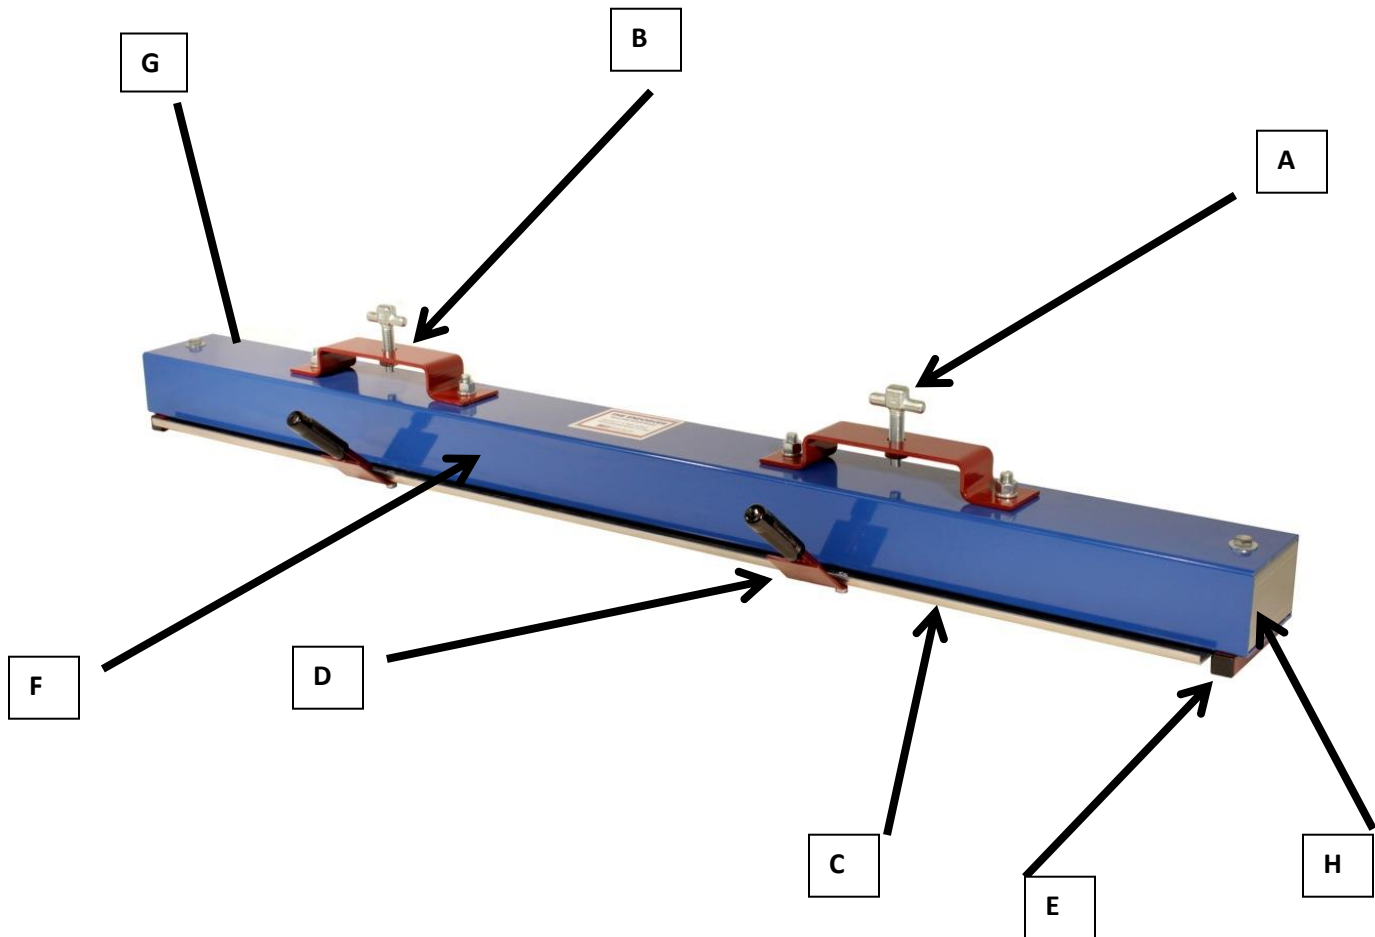

A. Eyebolts (2)

B. Fork Pockets (2)

C. Hinged Aluminum Plate*

D. Release Levers (2)

E. Feet (2)

F. Aluminum Housing Tube

G. Hinge (back side of unit) *

H. End Cap (2)

* The 96 Inch Model has 2 Release Plates – 4 Release Levers – 2 Hinges