


battery powered
motion-activated
OUTDOOR NIGHT-LIGHT™
ASSEMBLY AND INSTRUCTION GUIDE

Model #: 40341 (white)
 40342 (dark bronze)

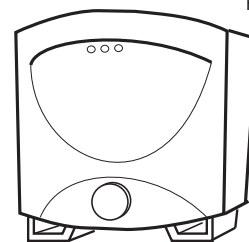


ABOUT YOUR OUTDOOR NIGHT-LIGHT™

- Light where you need it most! Your Outdoor Night-Light™ will guide you every step of the way.
- Perfect for both indoor and outdoor use. Place your Outdoor Night-Light™ outdoors by the entrance door, and you won't fumble for your keys or the lock anymore. Place it indoors and you no longer have to enter your house in the dark.
- Use it outdoors for steps, doors, walkways, porches, gates, sheds, decks and more.
- Use it indoors for hallways, bathrooms, steps, and any other dark spaces you can imagine.
- The three brilliant LEDs will light your way, preventing you from falling down the stairs or tripping over objects. Great for lighting up dark areas.
- Totally portable and needs no wiring. Uses 3 AA batteries (not included), which will last 6-12 months depending on usage.

CHOOSING A LOCATION

The selected location should not be near light sources, such as street or porch lighting, as these may cause the Outdoor Night-Light™ to turn off automatically. The Outdoor Night-Light™ should also be installed away from heaters, air conditioners, barbecues, vents, and large reflective surfaces such as swimming pools and jacuzzis, and white walls. To avoid damage to some components, do not aim the motion sensor towards the sun.


At night, the LED lights will remain on for about 45 seconds. The lights gently fade so you know when they are turning off. If a movement is detected while the lights are on, the light duration will be reset and remain on for about another 45 seconds.

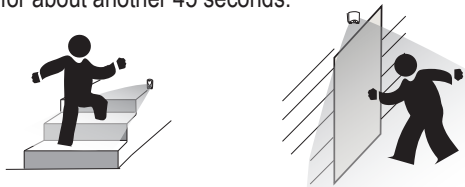

OPERATING YOUR OUTDOOR NIGHT-LIGHT™


1. Install the batteries (see BATTERY INSTALLATION section).
2. Choose a location (see CHOOSING A LOCATION section).
3. Mount the light (see MOUNTING YOUR OUTDOOR NIGHT LIGHT section), or simply stand the unit on any flat surface.
4. Built-in motion sensor (located below the light) automatically turns on the light when movement in front of the light is detected. The light remains on as long as motion continues to be detected. **Please note that there is no On/Off switch, the light can only be activated by motion.**
5. Built-in photosensor (on bottom) allows the light to only be turned on at night or in darkness, conserving energy.

BATTERY INSTALLATION

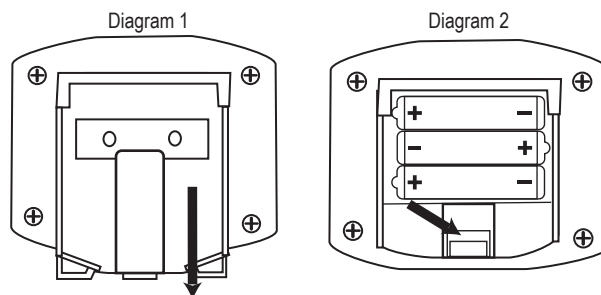

1. To access the battery compartment, slide the tab on the bottom of the mounting plate to "Open" and slide down the mounting plate on the back side of your Outdoor Night-Light™. If the mounting bracket does not slide, please make sure mounting lock is positioned towards the back side of the unit.
2. Then push up the tab of the battery cover inside and replace the batteries according to the orientation noted in Diagram 2.

Your Outdoor Night-Light™ uses three AA batteries. The batteries typically last 6 months to 1 year under normal use.

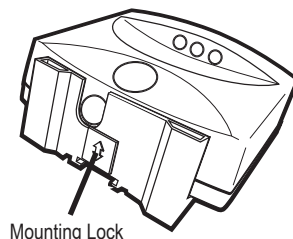


Mounting Lock

Note: If your Outdoor Night-Light™ does not turn on after battery installation: Make sure fresh batteries have been inserted matching the correct +/- polarity orientation and are making secure contact with the terminals.

MOUNTING YOUR OUTDOOR NIGHT-LIGHT™

The Outdoor Night-Light will stand up by itself and doesn't have to be mounted unless it will be standing in a puddle of water.

1. Take out the mounting plate by sliding it down as shown in Battery Installation.
2. If you decide to mount it, please use the included screws as follows: Put the flat side against the wall and use the two screws to install the mounting plate. If you are installing it on a very hard surface, you may need to first drill holes for the screws.
3. The included screw anchors can be used for drywall, cement, brick, or similar surfaces. 3. Slide down the main body of your Outdoor Night-Light™ onto the mounting plate after the plate is attached to the wall. Lock the mounting plate by pushing the mounting lock towards the sensor. (It only moves a fraction of an inch to lock).

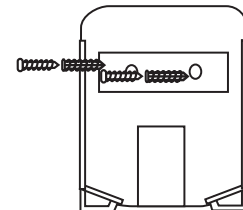

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Light does not turn on when there is movement in the detection area.	<ol style="list-style-type: none"> 1. Batteries are old. 2. Nearby lighting is too bright. 3. The sensor is facing the wrong direction. 	<ol style="list-style-type: none"> 1. Replace the batteries with fresh batteries. 2. Redirect the sensor or install in a different location, away from other lighting. 3. The sensor is directly below the light and should be facing in the direction of movement.
Light turns on for no apparent reason (false trigger).	<ol style="list-style-type: none"> 1. Heat sources such as air conditioners, vents, barbecues, other outside lighting, or moving cars are triggering the motion sensor. 2. Pets or other animals are triggering the motion sensor. 3. Reflections from swimming pools, jacuzzis, white walls, or other large reflective surfaces are triggering the motion sensor. 	<ol style="list-style-type: none"> 1. Install the Outdoor Night-Light™ away from the sources of interference. 2. Redirect the sensor. 3. Install the Outdoor Night-Light™ away from the sources of reflections.

SPECIFICATIONS

Batteries Required: 3 AA cell alkaline

Wattage: Maximum 0.72 W, static ≤ 0.24 mW

Voltage: 4.5 V DC

Light Duration: Approximately 45 seconds (± 10 seconds) from last motion detected.

Motion Sensor Range: Up to 10 feet when mounted 1 foot or more off the ground.

Weatherproof Rating: IP44

90 DAY LIMITED WARRANTY

This Motion-Activated Light is warranted against faulty material and/or workmanship for a period of 90 days from date of original purchase. The obligation of the manufacturer, under this warranty, is limited to servicing and replacing defective parts when the unit is returned to MAXSA Innovations, freight pre-paid during the warranty period. To obtain warranty repair, the purchase receipt should be returned with the product.

This warranty becomes void on any unit which has been tampered with, damaged by accident, or damaged otherwise by improper operation.

This guarantee is in addition to any guarantees implied by State or Federal Legislation.



MAXSA Innovations
 8412 Cathedral Forest Drive
 Fairfax Station, VA 22039
 Tel: 703-495-0661
www.maxsainnovations.com
info@maxsainnovations.com

MADE IN CHINA


v15.1

©2012 MAXSA Innovations, LLC

battery powered
motion-activated
OUTDOOR NIGHT-LIGHT™

Instructions d'installation

Modèle #: 40341 (Blanc), 40342 (Bronze foncé)

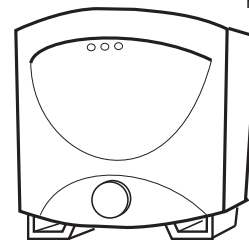


À PROPOS DE VOTRE OUTDOOR NIGHT-LIGHT™

- La lumière là où vous en avez la plus besoin! Votre Outdoor Night-Light™ va vous guider.
- Parfait pour l'utilisation à l'extérieur et à l'intérieur tous les deux. Installez votre Outdoor Night-Light™ à l'extérieur vers votre porte pour éviter la situation où vous ne pouvez pas trouver vos clés. Installez la lampe à l'intérieur pour ne jamais entrer chez vous à l'obscurité.
- Utilisez-la à l'extérieur pour les escaliers, les portes, les chemins, les porches, les portails, les cabanes, les terrasses...etc.
- Utilisez-la à l'intérieur pour les couloirs, les salles de bains, les escaliers, et tous les autres coins sombres que vous pouvez imaginer.
- Les trois lumières DEL brillantes vont allumer votre direction. Elles vous empêchent de tomber. L'éclairage superbe pour tous les coins en obscurité.
- La lampe est complètement portable. Il n'y a pas de câblage. Il utilise 3 batteries AA (pas incluses) qui vont durer 6-12 mois selon l'utilisation.

CHOIX DE L'EMPLACEMENT

L'emplacement de votre lampe doit être loin des autres sources de lumière, comme réverbères qui le feront éteindre automatiquement. Votre Outdoor Night-Light™ doit aussi être installée loin des chauffeurs, des climatiseurs, des barbecues, des événements, et toutes des surfaces réfléchives comme une piscine, un jacuzzi ou des murs blancs. Pour éviter les dommages aux parties de votre lampe, ne vissez pas le capteur de mouvement vers le soleil.


Dans la nuit, la lumière DEL reste allumée pendant 45 secondes. La lumière se fane doucement pour vous dire qu'elle s'éteint. Si la lumière détecte les mouvements tout en s'allumant, elle va recommencer les 45 secondes.

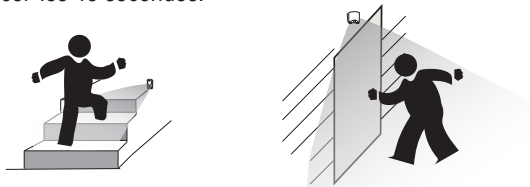

L'UTILISATION DE VOTRE OUTDOOR NIGHT-LIGHT™


1. Installez les batteries (regardez la section d'installation des batteries)
2. Choisissez l'emplacement (regardez la section de choisir l'emplacement).
3. Montez la lampe (regardez la section montage de votre Outdoor Night-Light™) ou placez l'unité sur une surface plate.
4. Le capteur de mouvement qui est en bas allume automatiquement la lumière au moment où il détecte le mouvement. La lumière dure aussi longtemps qu'un mouvement est détecté. **ATTENTION : il n'y a aucun interrupteur ON/OFF, la lumière est seulement activée par le mouvement.**
5. Le photocapteur (en bas) n'allume la lumière dans l'obscurité pour conserver l'énergie.

INSTALLATION DE LA BATTERIE

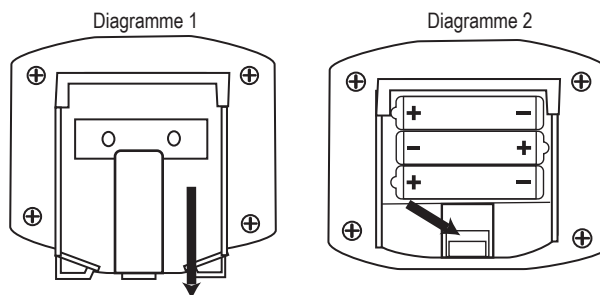

1. Pour accéder au compartiment de batterie, faites passer l'onglet sur le fond de la plaque de montage à la position OPEN et faites passer le plaque de montage à l'arrière de votre Outdoor Night-Light™. Si vous ne pouvez pas faire passer le support de montage, vérifiez que le verrou de montage fait face vers l'arrière d'unité.
2. Ensuite, poussez l'onglet du compartiment de batterie et remplacez les batteries en accordance avec l'orientation comme dit diagramme 2.

Votre Outdoor Night-Light™ a trois batteries AA qui durent typiquement 6-12 mois.

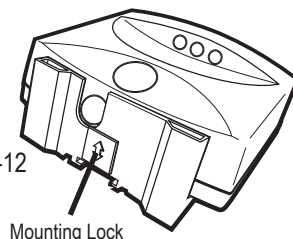


Mounting Lock

ATTENTION : Si votre Outdoor Night-Light™ ne s'allume pas après que les batteries ont installé, vérifiez que vous avez utilisé de nouvelles batteries, et que ils font face à l'orientation de polarité correcte.

MONTAGE DE VOTRE OUTDOOR NIGHT-LIGHT™

Votre Outdoor Night-Light™ peut se tenir debout tout seul. Elle n'a pas besoin de montage, mais il est important qu'elle ne touche pas de l'eau. Si vous décidez de monter la lampe :

1. Enlevez la plaque de montage et faites-la passer, comme dit le diagramme de la section d'installation de la batterie.
2. Si vous décidez de la monter, utiliser les vis incluses : placez la côté plate sur le mur et utilisez les deux vis pour installer la plaque de montage. Si la surface d'installation est très dure, vous devez percer des trous pour les vis.
3. Les ancrés de vis incluses peuvent être utilisées sur la plaque de plâtre, le ciment, la brique, ou d'autres surfaces similaires. Faites passer votre Outdoor Night-Light™ sur la plaque de montage qui doit déjà être attachée au mur (ou votre surface désirée). Verrouillez la plaque de montage par pousser le verrou de montage vers le capteur (il ne se déplace que d'un centimètre ou moins).

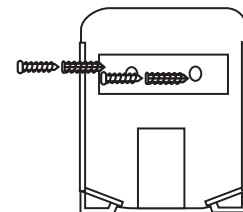

PROBLÈME	CAUSE POSSIBLE	SOLUTION POSSIBLE
La lumière ne s'allume pas au moment où il y a des mouvements dans la zone de détection	<ol style="list-style-type: none"> 1. Les batteries sont vieilles. 2. Il y a une lampe proche qui est trop brillante. 3. Le capteur fait face à la mauvaise direction. 	<ol style="list-style-type: none"> 1. Remplacez les batteries 2. Réorientez le capteur ou réinstallez la lampe dans un emplacement différent, loin des autres lumières. 3. Visez le capteur vers la zone de détection désirée
La lumière s'allume sans détection du mouvement	<ol style="list-style-type: none"> 1. Des sources de chaleur comme un climatiseur, des événements, un barbecue, ou d'autres lampes extérieures, ou des voitures en mouvement activent le capteur de mouvement. 2. Des animaux l'activent 3. Des reflets d'une piscine, un jacuzzi, des murs blancs, ou d'autres surfaces réfléchives activent le capteur. 	<ol style="list-style-type: none"> 1. Installez votre Outdoor Night-Light™ loin des sources d'interférence 2. Réorientez le capteur 3. Réorientez le capteur ou réinstallez votre Outdoor Night-Light™ loin des sources réfléchives.

SPÉCIFICATIONS

Batteries Requis : 3 AA cell Alcalin

Puissance : .72 W à maximum, ≤ .24 mW à statique

Voltage : 4.5 V DC

Durée de la Lumière : environ 45 secondes ±10 seconds après le dernier mouvement détecté.

Gamme du Capteur de Mouvement : Jusqu'à 3 mètres, s'il reste plus de 30 cm du sol.

GARANTIE LIMITÉE DE 90 JOURS

Ce produit est garanti contre le matériel défectueux et malfaçons pour une période de 90 jours après l'achat. Avec cette garantie, l'obligation du fabricant est limitée à l'entretien et la réparation des pièces défectueuses, si vous rendez l'unit à MAXSA Innovations pendant la période de la garantie. Le client doit aussi payer l'expédition. Il faut rendre le reçu d'achat avec le produit.

Cette garantie devient nulle si l'unit est altéré ou endommagé par l'accident ou par la mauvaise utilisation.

Cette garantie accompagne toutes les garanties qui sont implicites par la législation d'état ou fédérale.



MAXSA Innovations
 8412 Cathedral Forest Drive
 Fairfax Station, VA 22039
 Tel: 703-495-0661
www.maxsainnovations.com
info@maxsainnovations.com