


# PARAGON PRO MANUFACTURING SOLUTIONS

## Instruction Manual

### Steps for installing Model 1424: Seat & Base Extension


Insert base extension into the front opening on the base of the Cabinetizer™ models 72 & 76

1

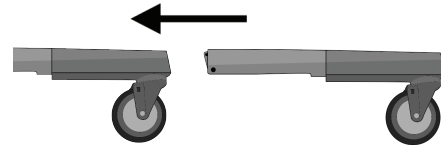


Adjust the internal hex bolt with the 1/4" allen wrench that came with your Cabinetizer™ to lock them in place.

2

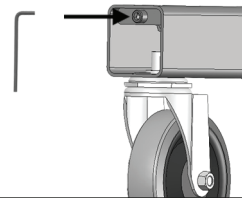


Slide the seat extension frame into the open space between the steel framework of the Cabinetizer™ platform, under the wood deck. The forks of the extension frame must be positioned above and below the strap mounting bolt.

3

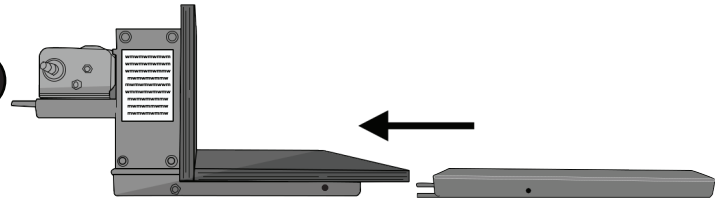


Line up the holes on the side of the Cabinetizer™ and the 1424 extension and insert the Quick Pin through the holes all the way to the ring.

4

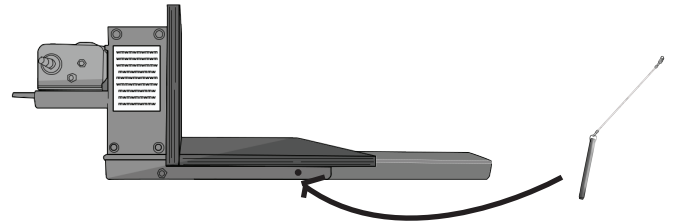

If the Quick Pin holes do not line up perfectly, some reaming may be necessary. Use a reaming tool to widen the holes slightly until the Quick Pin can be fully inserted.

4.5

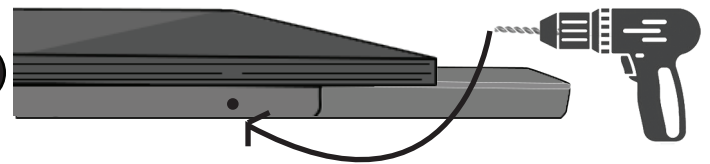

Finally, line up the 1424 wooden seat with the Cabinetizer™ seat and secure it to the steel frame with the (4) #10 x 3/4" sheet metal screws (included). Use one of these to secure the Quick Pin lanyard to the 1424 extension as shown

5

