


Instructions For Assembling Wagon Deck #04014

Rack Brackets

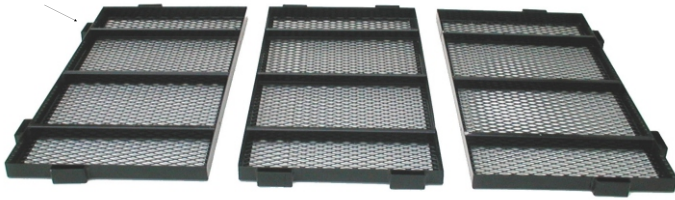

Step#1- Lay the 3 decks side by side on a flat surface. Make sure the rack brackets are facing outward and top of deck down..




Step#2- Fasten decks together with 2pc 5/16" x 1" bolts. This applies for the 2 joints in the deck.



Step#3- Tighten these bolts at the two joints.



Step#4- When finished with step#3 the deck should look like this, as one large deck.

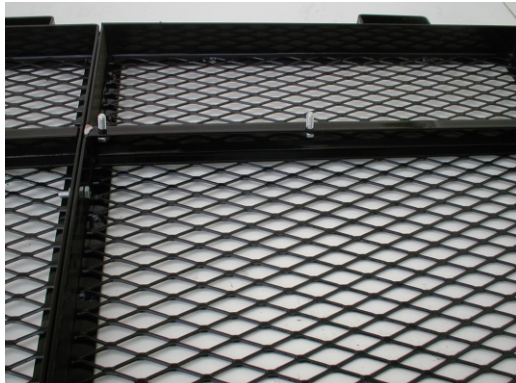

Step#5- Insert 4- 5/16" x 1" bolts into holes in the deck to fasten support beam. The applies to each side of the deck.



Step #6- Line up bolts with the holes in the support beam. Make sure you fasten support beams turned the way as shown in fig. 1-1.



fig.1-1

Step#7- Tighten bolts and when finished deck should look like fig.1-1.



Step#8- For this step have someone help you. Keep in mind this weighs 102 pounds. Flip deck and lift onto the utility wagon as shown above. Fasten the four corners with 5/16" x 1" bolts and tight securely.

Your deck requires assembly. If any parts are missing, damaged, or if you have questions or need additional instructions, DO NOT RETURN THIS PRODUCT TO THE RETAILER. Call our ANSWER LINE at 866-449-4343, Monday through Friday, 8:00 am to 5:00 pm EST for help.

Note: NOT FOR HIGHWAY USE!

Manufacturer is not responsible for any injuries or accidents indirect or direct contact with this product.