



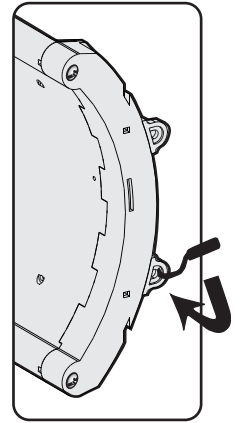

17




ATTACH BUNGEE STRAPS

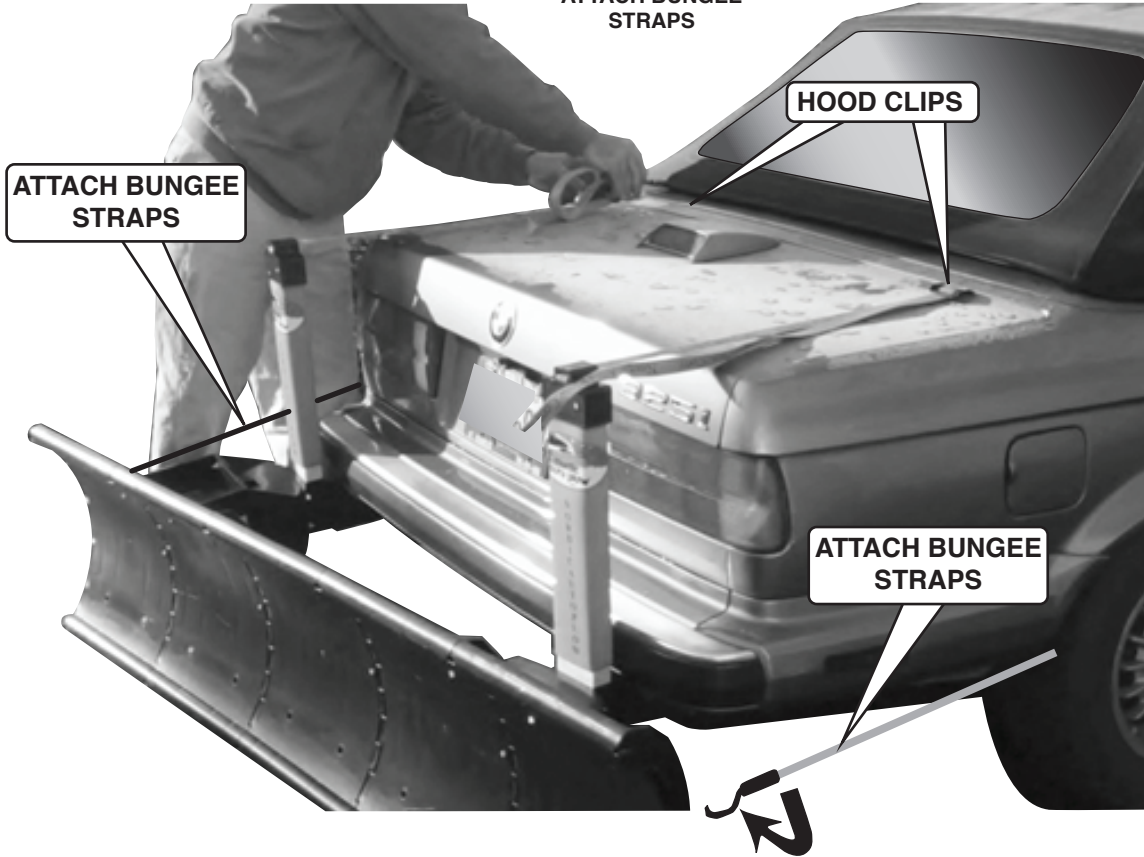


The **Nordic Auto Plow** may be attached to the rear of your car if preferred. Hood Clips will now be hooked to the leading edge of the trunk. Be sure to attach **Bungee Straps** to rear wheel well or spring as shown above.

18

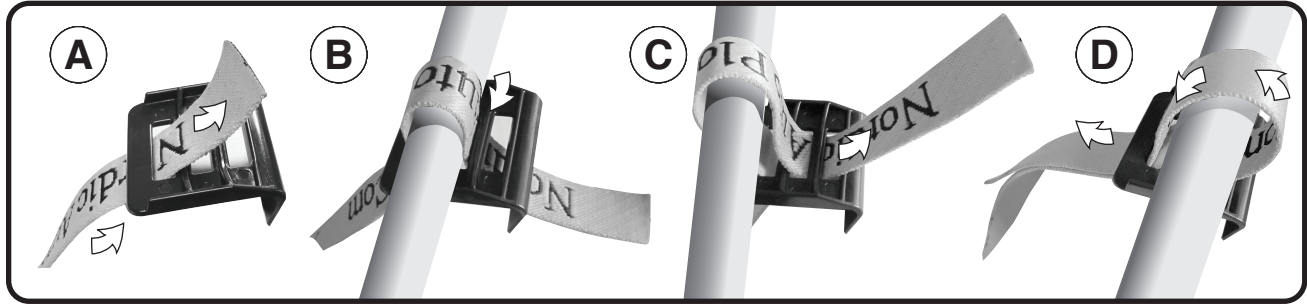

When attaching the Straps to an SUV with cross rails and / or luggage racks, follow Steps "A" - "D" above to secure Straps in these instances.

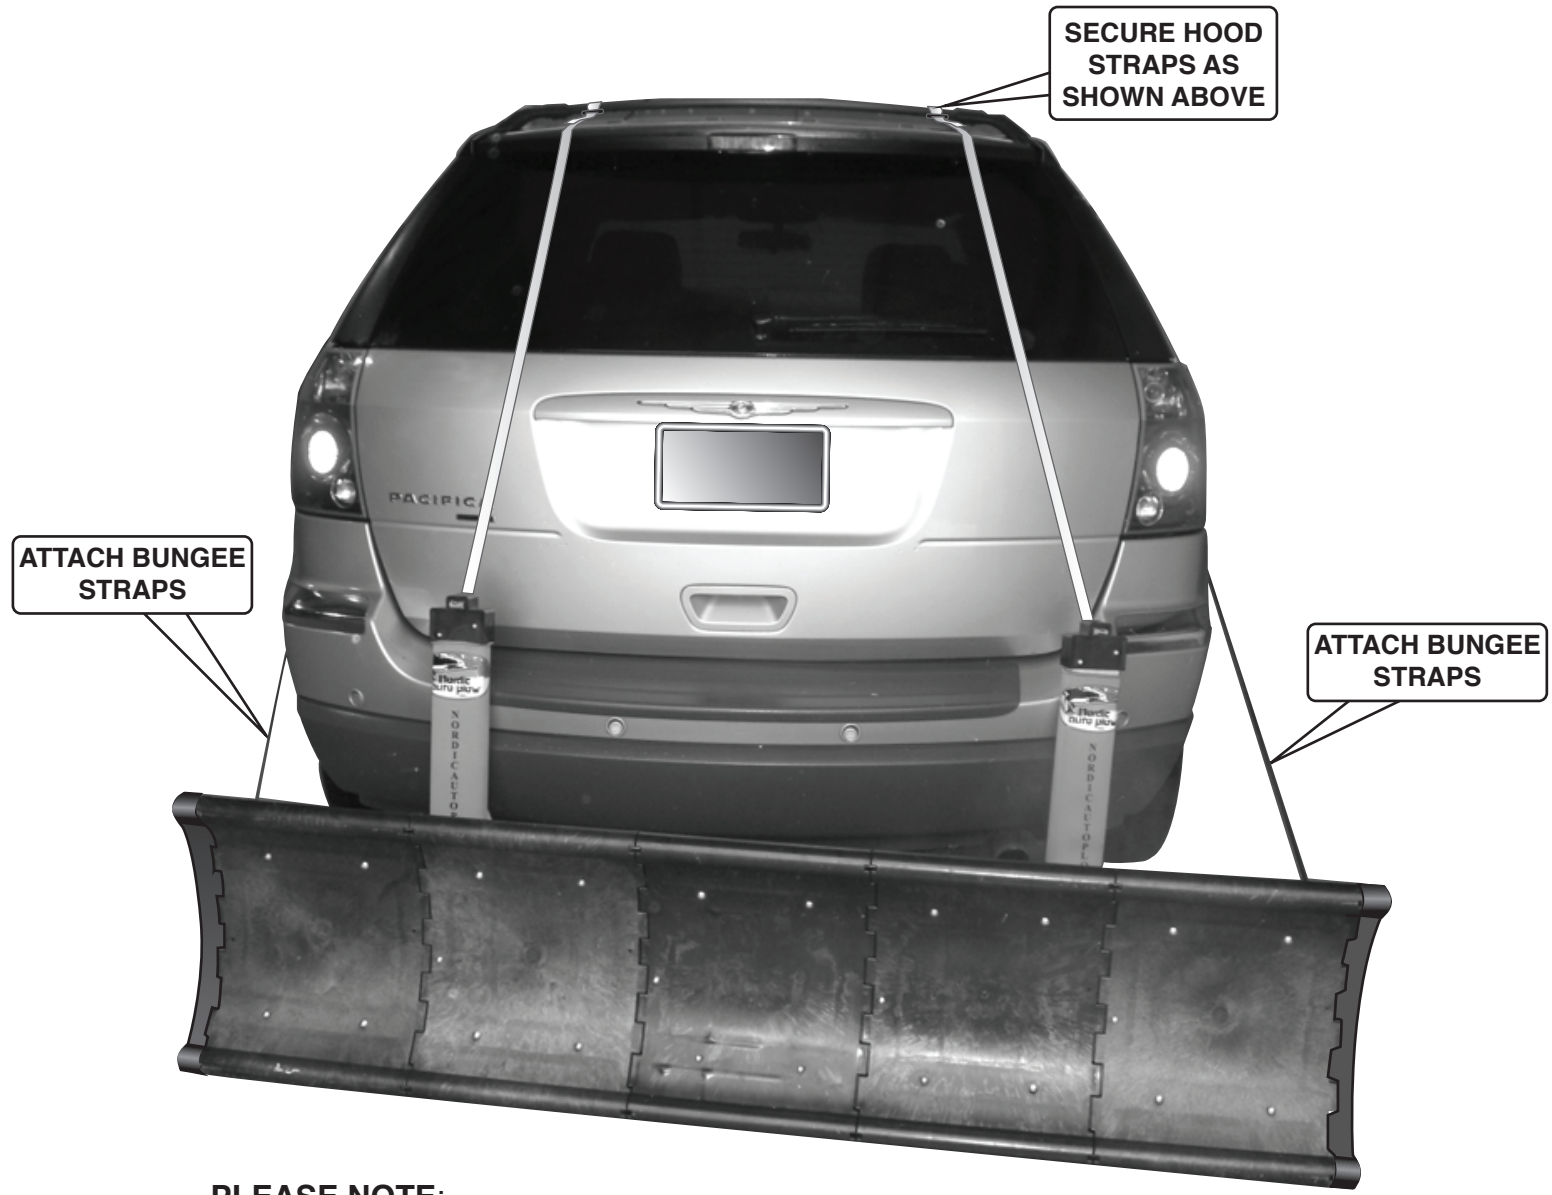

**PLEASE NOTE:**  
If your SUV is not equipped with cross rails, you may secure **Hood Straps** using the **Hood Clips** to the leading edge of the rear hatch as shown above. Be sure to attach **Bungee Straps** as in **Step - 17**.