

INSTRUCTIONS FOR ASSEMBLY AND IN-GROUND INSTALLATION

This box contains all parts for a standard in-ground installation with 45 inches above the ground. Important: Assemble and tighten post completely before cementing in ground to prevent face plate from facing in the wrong direction.

STEP 1

Assemble the three pieces of the mounting post together by screwing them together.

STEP 2

Determine the location of the Mounting Post installation.

STEP 3

Dig a hole at least 22 inches deep and wide enough to accommodate the concrete used to hold the post in place.

STEP 4


If for use with hard wire access controls, provide path for wires. We recommend using PVC conduit.

STEP 5


DO NOT continue unless post is assembled and tightened completely. Cement post in place using a level to achieve a level and plumb installation.

STEP 6

Install keypad/intercom according to product's instructions.

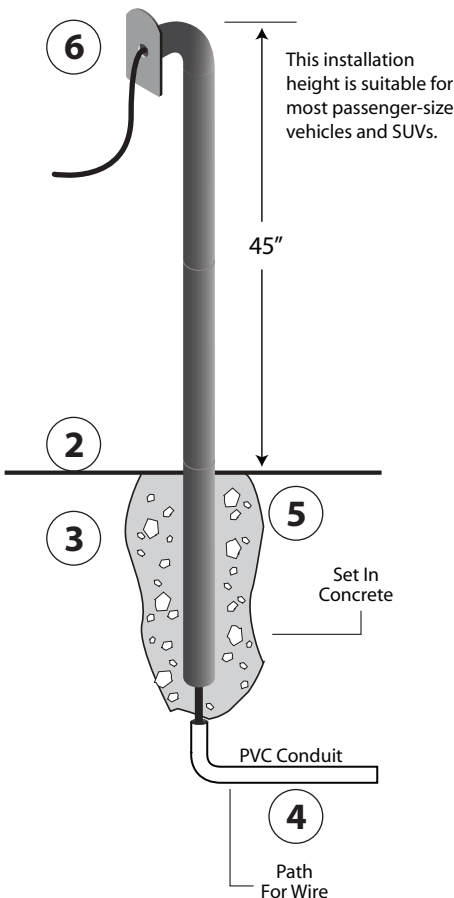

*Optional added height mounting option. Additional hardware not included.

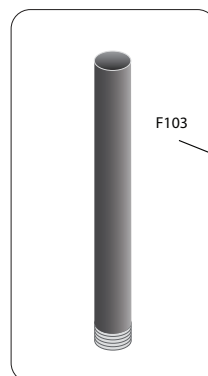

F103 Extensions Sold Separately

