


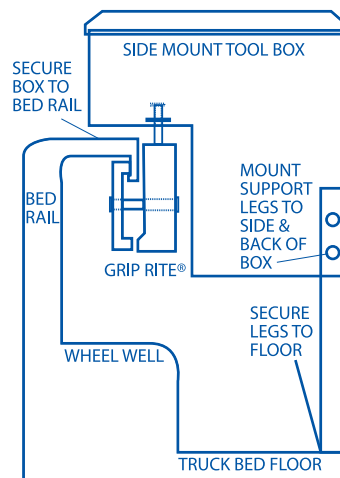

SIDE MOUNT TOOL BOX MOUNTING INSTRUCTIONS

1. Place box on top of truck bed rail, and move to desired position.
2. Support the back of the box while mounting to the truck.
3. Secure (attach) the box to the top of the truck bed rail. Most users prefer to use optional Grip Rite® no hole mounts. (instructions below):
4. Position the support leg against the back and side of the toolbox.
5. Secure the leg to the toolbox. Be sure to secure the leg on the back and side surfaces of the toolbox.
6. Secure the leg to the bed of the truck.
7. Repeat for the leg on the opposite end.



Grip Rite® Tool Box Mounting Instructions

1. Place adhesive padding strips on the inside top of the clamping surface. Assemble each Grip Rite® to the clamshell configuration as shown (Fig. 1), simply attach the two pieces together with 1 bolt.
2. Loosely attach the Grip Rites® to the truck bed rails. Do not tighten yet. (Fig. 2)
3. Gently set the toolbox in position on the truck bed rails. Align the box to be square with the truck bed.
4. **Note:** Most Better Built® toolboxes have mounting holes ready for installation, for those boxes that do not have holes please follow the directions below for installation.





- a. Measure for location then mount Grip Rites to the truck bed rail as shown in the illustration and on the Grip Rite package.
- b. Set the tool box on the bed rail and sight down the front to determine where the Grip Rite will line up under the front lip.
- c. Measure from the front of the tool box to the sighted line where the Grip Rite lines up.
- d. Transfer the dimension just taken less 1/4" (for inside compensation) to the mounting surface inside the tool box.
- e. The Grip Rite mounts have holes spaced 3 3/8" apart, and should be marked as such along the line just made. These will be the locations to drill the holes in your tool box.
- f. Drill to a finish hole size of 3/8" at the locations just indicated.
- g. Complete mounting the tool box to the Grip Rites using the allen head screws and fender washers provided.

5. Remove the toolbox and align the Grip Rites® in the marked positions.
6. Place toolbox in proper position and tighten mounting bolts with included Allen wrench. (Fig. 3)

Note: Other style toolboxes can utilize the Grip Rite® mounting system. You must measure the offset locations carefully and drill the 3/8" mounting holes 3-3/8" apart. Better Built® includes specific instructions included with the different styles of products they manufacture.

FAILURE TO SECURE THE TOOL BOX TO THE BED RAIL AND THE SUPPORTING LEGS TO THE TRUCK BED CAN RESULT IN THE BOX COMING LOOSE AND FALLING OFF THE TRUCK BED RAIL.

- Package Includes:**
- A. (2) Grip Rites®
 - B. (1) Allen Wrench
 - C. (4) Washers
 - D. (6) Mounting Bolts
 - E. (4) Adhesive Strips
- Optional Tools Needed:**
- Measuring Tape
 - Felt Tip Marker

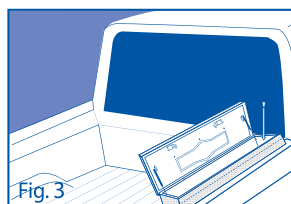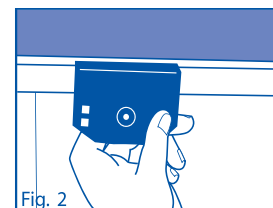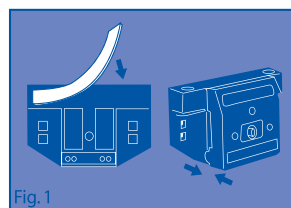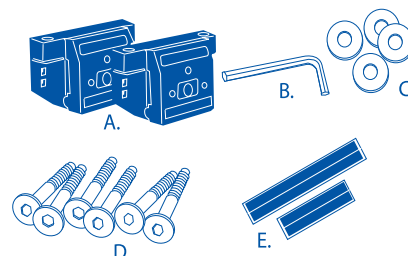

Check us out on-line!

At www.DawsBetterBuilt.com we have more Better Built® products and accessories. You can even shop online!