



MOTORCYCLE WHEEL CHOCK

OWNER'S MANUAL



 **WARNING:** Read carefully and understand all INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item #571648

Thank you very much for choosing a NORTHERN TOOL + EQUIPMENT CO., INC. Product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This machine is designed for certain applications only. Northern Tool + Equipment cannot be responsible for issues arising from modification. We strongly recommend this machine is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the machine until you have first contacted Northern Tool + Equipment to determine if it can or should be performed on the product.

For technical questions please call **1-800-222-5381**.

INTENDED USE

This wheel chock fits most of the standard motorcycles currently on the market. It is designed to be mounted to a truck bed, trailer or concrete floor.

TECHNICAL SPECIFICATIONS

Item	Description
Construction	Formed Steel w/ Carbon Steel Hardware and Thermoplastic End Caps
Overall Folded Dimensions	20 1/2in.L × 10 3/8in.W × 13 1/5in.H (52×26.4×33.5cm)
Weight	16 lbs. (7.26kgs)
Moveable Chock Length	10in. (25.40cm)

GENERAL SAFETY RULES



WARNING: Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.



WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

SAVE THESE INSTRUCTIONS

WORK AREA

- **Keep the work area clean**, free of clutter and well lit. Cluttered and dark work areas can cause accidents.

- **Keep children and bystanders** away while using this motorcycle wheel chock. Distractions can result in a loss of control, so bystanders should be kept a safe distance from the work area.
- **Be aware of all power lines, electrical circuits,** water pipes and other mechanical hazards in your work area, particularly those hazards below the work surface hidden from the operator's view that may be unintentionally contacted and may cause personal harm or property damage.

PERSONAL SAFETY

- **Maintain a safe working environment.** Make sure there is adequate surrounding workspace. Do not use this product in a damp or wet location.
- **Use the correct product for your motorcycle.** Make sure the motorcycle's wheel fits into the Wheel Chock prior to first use.

USE AND CARE

- **Use only the accessories that are recommended** by the manufacturer for your model. Accessories that may be suitable for one tool may create a risk of injury when used on another tool.
- **Never leave a motorcycle** running while unattended.

ASSEMBLY

The Wheel Chock comes fully assembled; however it must be mounted onto a solid surface to secure it. It is designed to be mounted on the bed of a truck, a motorcycle lift, or a concrete floor.



WARNING: Do not sit on the motorcycle while it is being loaded into the Wheel Chock.



WARNING: Verify that the installation surface has no hidden wires, brake lines, etc. before drilling.

Concrete Floor Mounting

- Choose a location that is flat, level and capable of bearing the combined weight of the Wheel Chock and the motorcycle. Make sure that the location is out of the way and there is sufficient room to remove the motorcycle after it has been mounted. The mounting surface should be suitable for heavy equipment.
- Use the mounting holes in the Base (7) of the Wheel Chock as a template. Arrange the Base (7) in the chosen location and, using a pencil, mark where the holes are to be drilled. You will need concrete anchors (not included) to secure the Base (7) to the concrete floor. Using the correct size concrete drill bit (not included), drill the mounting holes to secure the Base (7). Attach the concrete anchors to the floor. Secure the Base (7) to the floor utilizing the concrete anchors.

Truck Bed or Motorcycle Lift Mounting

- Place the Base (7) over the desired location in the truck bed or motorcycle lift. Use the Base (7) for a pattern and mark where you the holes need to be drilled in order to mount the Wheel Chock. Use a drill (not included) and a steel cutting bit (not included) to drill the holes in the truck bed or motorcycle lift.
- Attach the Base (7) to the truck bed utilizing the Mounting Bolts (6), Nylon Sleeves (8), Large Washers (9) and Spring Washers (3). Secure with Hex Nuts (10). See Diagram and Parts List.

OPERATION




WARNING: Do not drive motorcycle into the Wheel Chock.

- Select the correct mounting hole for the motorcycle being loaded into the Wheel Chock, and use the Pivot Bolts (5) to secure the Pivoting Bracket in place.
- To load a motorcycle, lower the Pivoting Bracket (13) to the horizontal position and simply push or slowly drive the motorcycle into the Wheel Chock.
- The Pivoting Bracket will close on the motorcycle tire, securing the bike in an upright position.
- For long-term storage, or if the Wheel Chock is mounted to a mobile platform, the motorcycle should be secured with belts or straps (not included).

MAINTENANCE

- **Before each use**, inspect the general condition of the Wheel Chock. Check for loose screws, poor alignment or binding of moving parts, cracked or broken parts, and any other condition that may affect its safe operation. Do not use damaged equipment.
- Occasionally, wipe the Wheel Chock down with soft cloth and mild detergent.

DIAGRAM & PARTS LIST

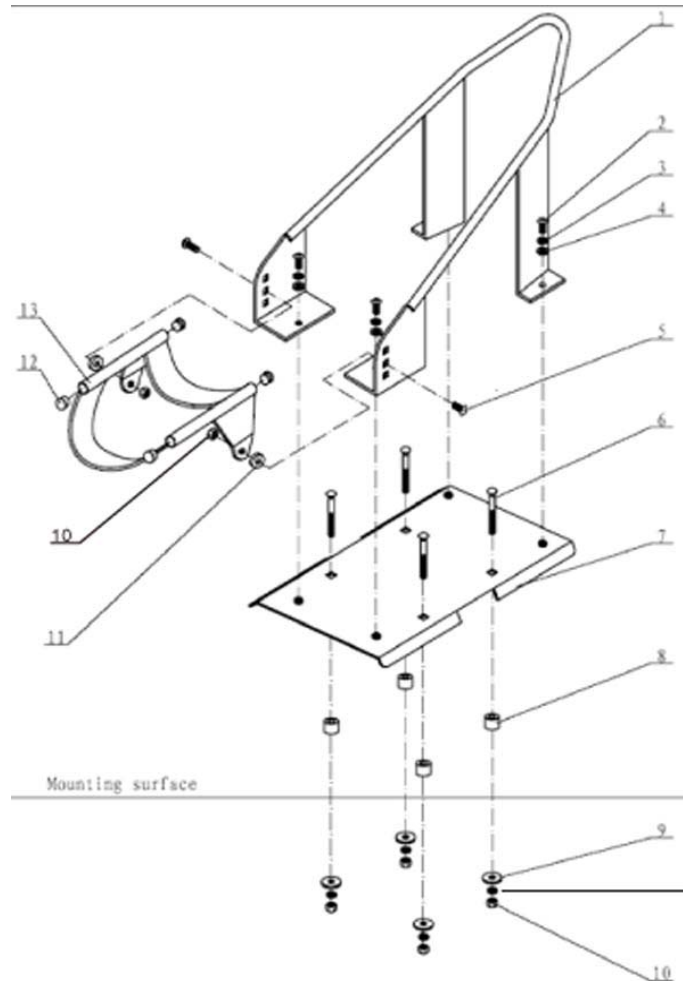

Part#	Description	Qty.	Part#	Description	Qty.
1	Main Frame	1	8	Nylon Sleeve	4
2	Hex Bolt M10×20	4	9	Large Washer	4
3	Spring Washer	8	10	Hex Nut M10	6
4	Flat Washer	4	11	Nylon Washer	2
5	Pivot Bolt M10×30	2	12	Rubber Cap	4
6	Bolt M10×70	4	13	Pivoting Bracket	1
7	Base	1			

For replacement parts and technical questions, please call **1-800-222-5381**.

WARRANTY

One-Year Limited Warranty



Distributed by
Northern Tool + Equipment Co., Inc..
2800 Southcross Drive West
P.O. Box 1499 Burnsville, MN 55306-6936
Made in China