

Owner's Manual & Safety Instructions



BOXER®

ITEM NO. 70801

WARNING

Read this manual & instructions carefully for your safety, failure to do so may cause serious injury.

BEFORE ASSEMBLY: (TAILGATE IS CLOSED)

1. Read product description and follow instructions before installation and/or use.
 2. Wear ANSI-approved safety goggles during installation and use.
 3. Check total weight to unload before use. Do not exceed 2,000 lbs.
 4. Check all unloader parts before each use. Do not use if parts are damaged or not in place.
 5. Check local regulations before driving with cargo unloader installed.
- (Refer to pages 2 and 3 for assembly and mounting instructions)**

BEFORE AND DURING LOADING CHECK LIST: (TAILGATE IS AT ITS CLOSED POSITION AND LOCKED)

1. The maximum loading weight is 2,000 lbs.
2. Check your truck's Gross Vehicle Weight Rating. Do not exceed truck rated weight.
3. Keep truck bed clear and clean before loading.
4. Place Drag Sheet in the truck bed center to cover bed.
5. When loading truck, load should be centered on Drag Sheet.
6. Make sure to secure Bar before driving to prevent accidents while driving.

UNLOADING CHECK LIST

1. Before unloading, open tailgate cautiously.
2. Use Bumper Security Strap to keep tailgate from moving.
3. Keep unloading area clear.
4. Insert Handle into slot on Bar and rotate handle to unload.
5. After unloading, collect drag sheet onto Bar and use strap to secure.
6. Remove Unloader kit from truck, store it for future use after it is cleaned and dry.

Unloader Assembly Instructions

Package Includes:



Contents: 2 Pc Bar, Drag Sheet, 21" Handle, 2 Brackets, 4 Tube Clamps, 2 End Caps, Wrench, 2 Screws, Tape for securing bars, 2 Velcro Straps, 1 Bumper Security Strap.


Additional tool Needed: Phillips Screwdriver

Setting Up The Bar:



Step 1. Join bars together to form one piece. Wrap tape around seam to secure. Attach Drag Sheet to bar with provided screws and wrench to pre drilled holes on bar. Roll Drag Sheet over bar and secure with Velcro Straps. When facing Bar make sure handle slot is to your left and Drag Sheet rolls out over and away from you.

Attaching Brackets:

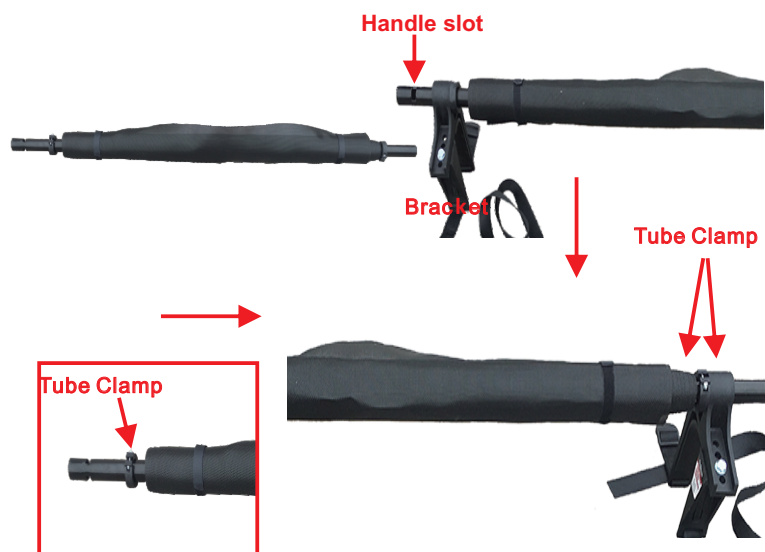

Step 2. Insert 1 tube clamp into Bar on each side. Tighten screw on clamp to secure onto the bar. Next, insert brackets one to each side. Keep handle slot to the left, insert brackets with adjustable bolt side towards you. Finish by inserting second set of tube clamps to secure bracket to the bar. Tighten screw on clamp.

Finishing Assembly:



Step 3. Make sure Brackets have been inserted correctly. Bracket with two buckles should be inserted on Handle side of Bar. Add End Cap to each end of Bar. Insert Handle into slot when ready to use. Please keep Bumper Security Strap on hand for mounting unloader.

Unloader Mounting Instructions

Setting Bar on Tailgate:



Step 1. Begin with tailgate securely closed. Place unloader bar with handle slot on trucks driver side. Bar should be placed on the outside edge of tailgate. Slide bracket assembly into truck tailgate. Make sure brackets fit securely against tailgate.

Attaching Bar to Tailgate:



Step 2. Lower tailgate and feed bracket straps through gap between tailgate and truck bed. Feed strap up to buckle on the outer side and tighten slack on strap to secure bracket to tailgate. Repeat on both sides.

Handle:



Step 3. Insert handle into slot and make sure handle will clear truck. If needed reposition bar to the left to give more room for handle to clear the side of the truck. Once in the correct position remove handle and store in truck's cab.

Securing with Bumper Strap:



Step 4. With tailgate closed, place bumper hook on bottom of bumper. Strap should be placed on the handle side of bar. Insert other end of strap to second buckle on bracket and tighten to secure.

LIMITED 90-DAY WARRANTY

Boxer Tools makes every effort to assure that our products meet high quality standard. We warrant all new products to original purchasers against any defect in material and Workmanship. This warranty does not apply to any damage due to, directly or indirectly misuse, abuse, negligence, repairs, alterations, criminal activities, improper installation, normal wear and tear and/or lack of maintenance. This warranty allows original purchasers to return merchandise with prior authorization from the office. With Proof of original purchase receipt, the defective item can be returned with freight charges paid by the sender. We will inspect, examine the returned product to decide to either, repair, replace or refund. If we determine there is no defect, or that the defect caused is beyond the scopes of warranty, then you must bear the shipping cost of returning the product. You may have other rights which vary from state to state besides this warranty.