



Check that you have all your parts and accessories.

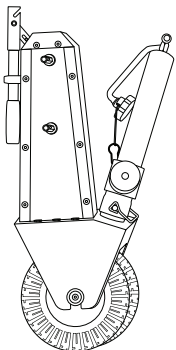

5X UNIT



BRACKET BOLTS (4X)




SECURITY BOLT




STOW PIN




FOAM STRAP

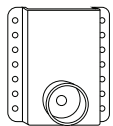

MOUNT BRACKET

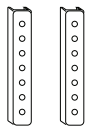

BRACKET CLAMPS (2X)

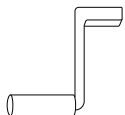

HAND CRANK




MANUAL




TRAILER VALET 5X


Quick Start Guide

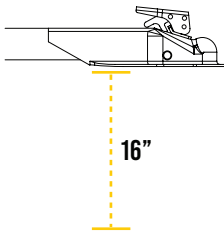


1. Check trailer height and raise the trailer tongue to where the frame is about 16 inches off the ground to give adequate space to attach the dolly.

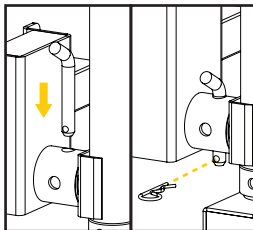


3. Secure utilizing the stow pin.

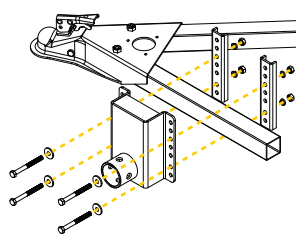


2. Install the 5X Mount Bracket to your the trailer frame.

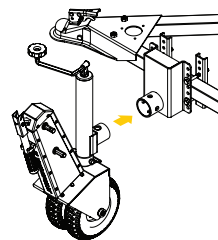

3. Connect the 5X unit to the Mount Bracket.

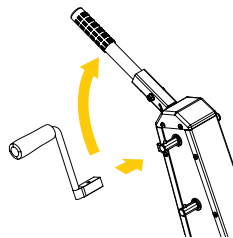

5. Attach the crank handle, lift the steering handle to disengage brakes, and start moving!

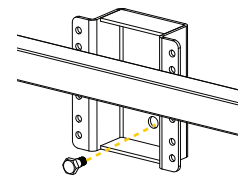

6. **OPTIONAL:** Lock with security bolt located in the back of the bracket to prevent removal.

Read the manual for step-by-step instructions. For supporting documents, visit us at support.trailervalet.com.

Scan the QR code to access some helpful videos to help you get started and #MoveForward.



 **TRAILER VALET**

MOVE *FORWARD.*