



Wall Mount Hook Instructions

Part A. Installing the Wall Hook

Minimum Attachment Requirements:


- 2x4 studding capable of supporting at least 50 lbs.
- A 3/8" diameter x 2" long Lag Screw (*not included*)

- 1) Using a stud finder, locate and mark the stud on the wall where you'd like to install the J hook. Mark your precise install location over the stud using a pencil.
- 2) Drill a pilot hole into your marking. Line up the screw over your pilot hole. Using a power drill, begin to set the screw into the wall, leaving a 1/2" space remaining between the screw head and wall to allow for room for the J bracket.
- 3) Using the J hook's keyhole opening, line up the screw head on the larger part of the keyhole opening, then lower it onto the smaller portion of the keyhole.
- 4) Using a power drill, completely tighten the screw to install the J hook to the wall. Verify the J hook is resting securely on the screw against the wall.


Part B. Placing Your Maxx Air® Fan on the Wall Hook

This J hook is compatible with Maxx Air® 20" floor fans (Models HVFF 20, HVFF 20UPS, and HVFF 20 WB).

- 1) Using a Phillips head screwdriver, loosen the machine screw from the hook to allow for fan install.
- 2) Invert your floor fan and place the cradle base tube into the J hook.
- 3) Fully retighten the machine screw towards the back of the J hook to hold the fan's cradle base in place.

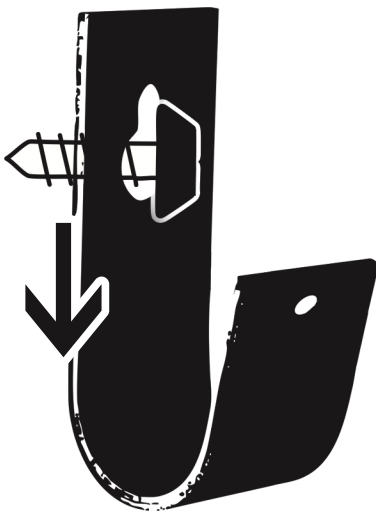

Installing the Wall Hook

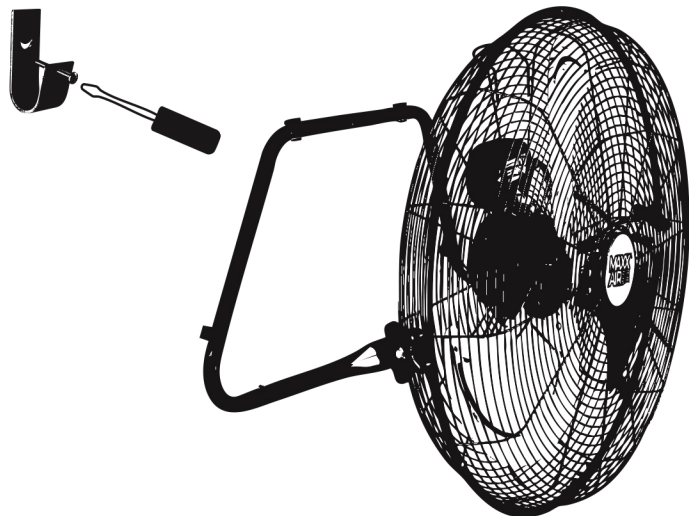

B. Placing Fan on Wall Hook

We're here to help! Please call **1-800-433-1626** if you have any questions about the installation or operation of this fan.