

AUTOMATIC WATERBOWL

ASSEMBLY MANUAL


SKU# 21500

ASSEMBLY PREPARATION



- Through the two back holes, attach the waterer to the wall using two pieces of 10 mm screws (not included).
Use self-tapping screws as Step 1 for wood walls.
Use an expansion bolt as Step 2 if the wall is made of concrete.

ASSEMBLY


1

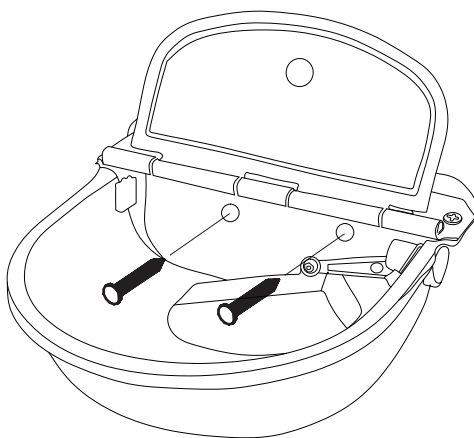


2

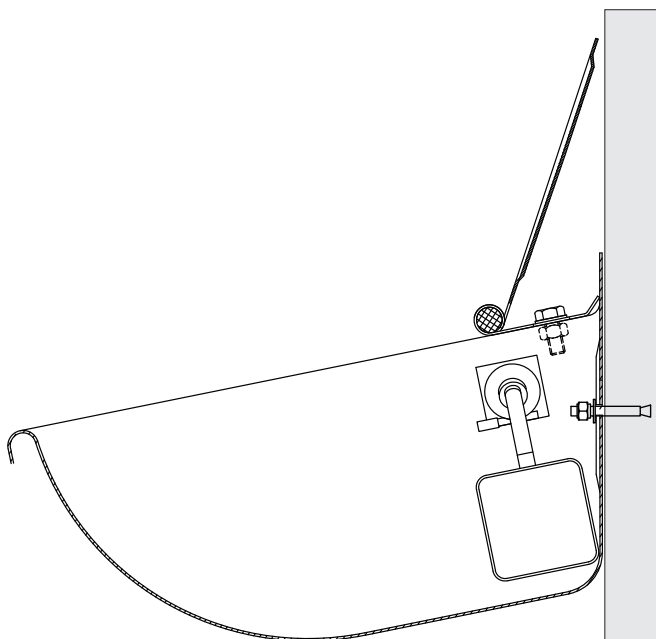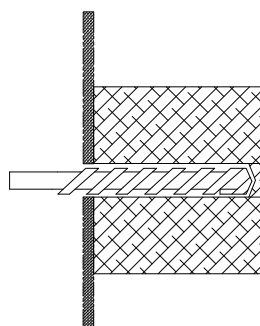

A. Drill a hole

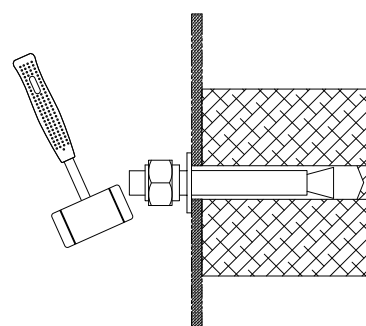

B. Put the expansion bolt

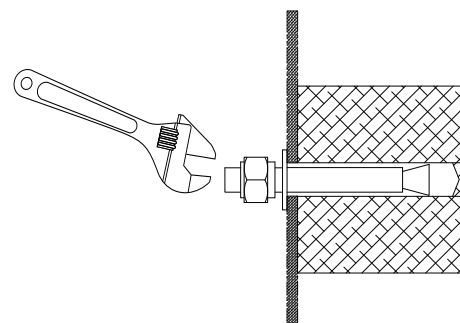

C. Tighten it