


Pet Barrier Assembly Manual




SKU NO.: 21651

Distributed by:
Win World International Trade LLC., Ontario, CA
www.PetGazebo.com & www.JJShelter.com
Made in China


PART LIST

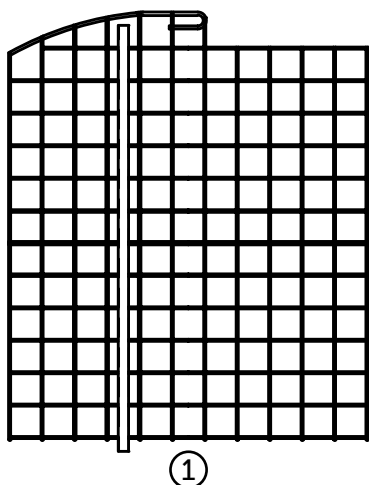


①

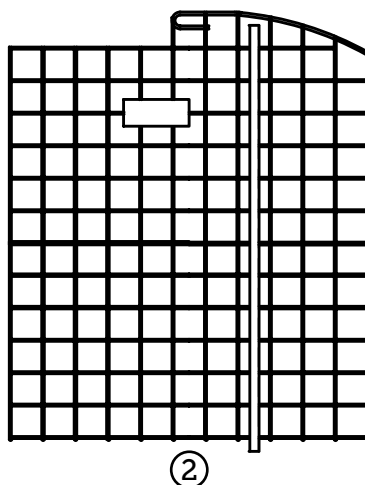


②

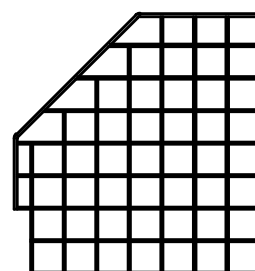


⑤

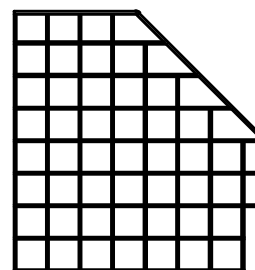

⑥

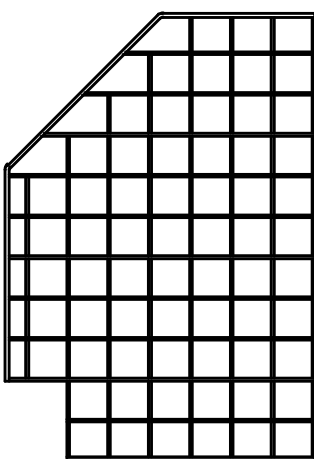

③

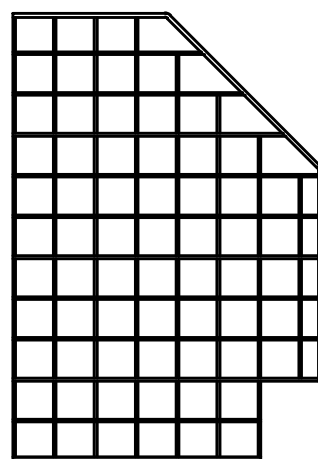


④



⑦




⑧



⑨



⑩




⑪



⑫



⑬



⑭



⑮

1. Main Body Left.....x1
2. Main Body Right.....x1
3. Large Left Side Extender.....x1
4. Large Right Side Extender.....x1
5. Small Left Side Extender.....x1
6. Small Right Side Extender.....x1
7. Height Adjustment Rod.....x2
8. Height Adjustment Nut (M12).....x2

9. Rubber End Cap.....x2
10. Rubber End Cap (pipe).....x2
11. Headliner Guard.....x2
12. Side Guard.....x2
13. Plastic Clamp.....x12
14. Clamp Bolt (M6x30mm).....x6
15. Clamp Nut (M6).....x6

Note:

1. #9, #10, #11, #12 are pre-assembled in the factory.
2. #5, #6 are extra parts to be used based on car space.





TOOLS REQUIRED FOR ASSEMBLY
(not included)

● INSTALLATION STEP


STEP 1

Using 4 plastic clamps, attach the left and right main body pieces as shown in the picture.

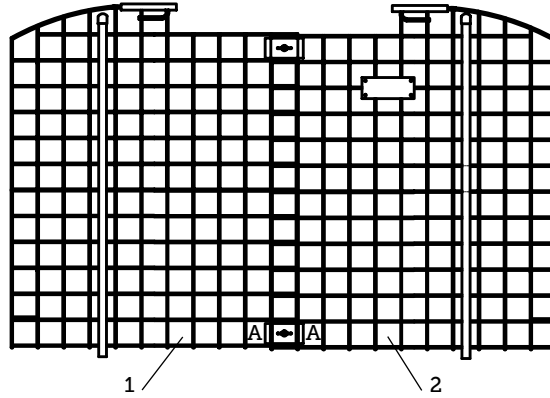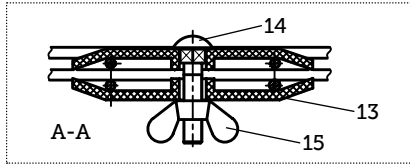




STEP 2

Using clamps attach extensions as necessary to block openings behind seats.

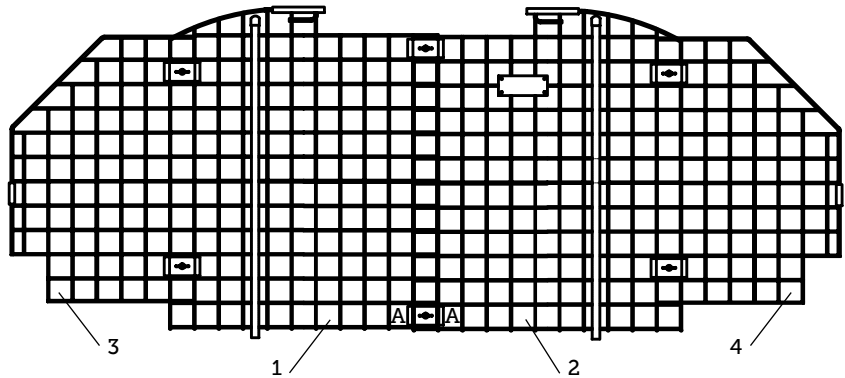

STEP 3

Slide height adjustment rod into pre-attached guide pipes. Using the wing nuts (part #8) adjust the height of the barrier all the way to the headliner of the car.

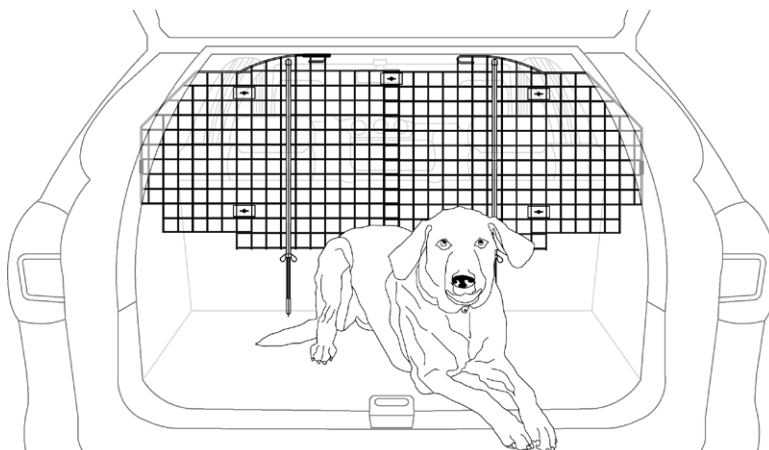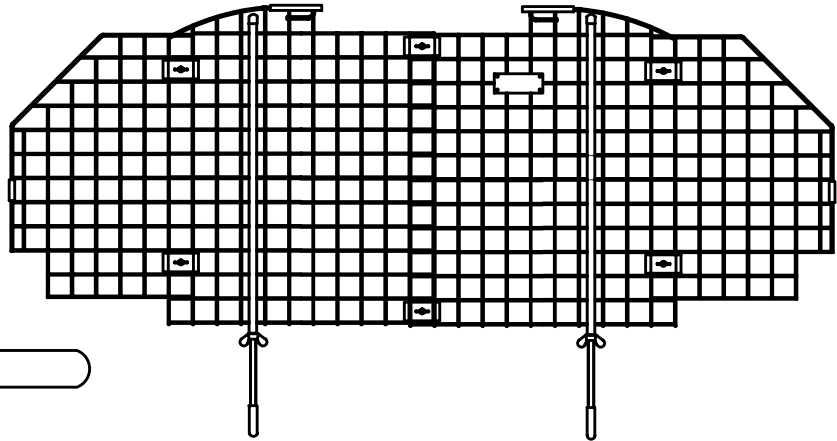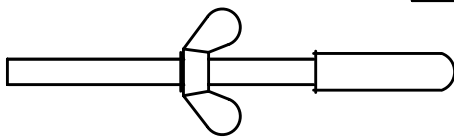

In the event of missing or defective parts please contact customerservice@petgazebo.com