
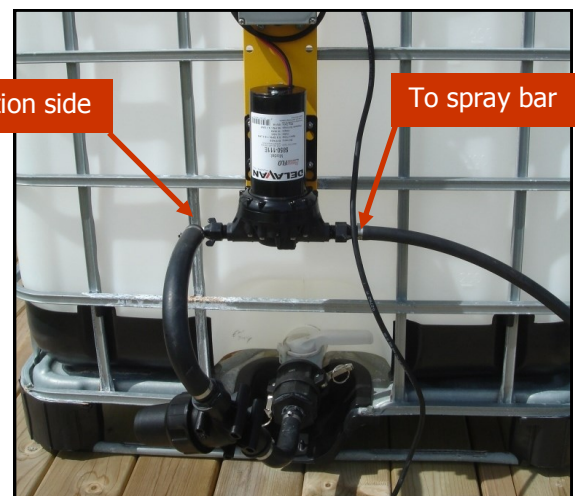
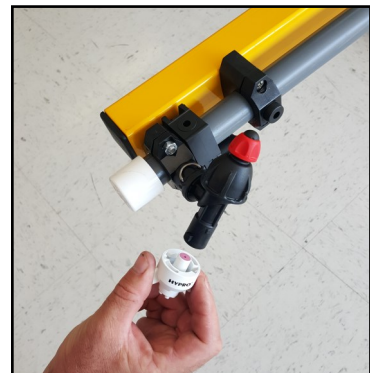
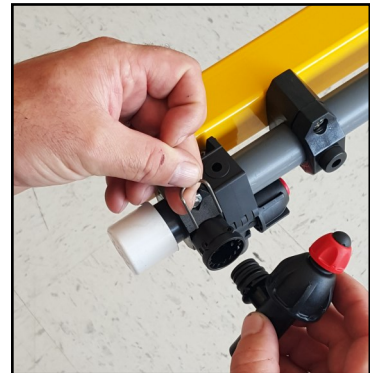


Assembly Instructions

Tote Tank Hitch Boom Kit

1. Insert 2" hitch tube into a vehicle receiver hitch.
(Black tube caps facing upwards).
2. Attach spray bar to mounting tube using U-bolts and lock nuts provided.
3. Attach the loose half of the swivel nozzle holder at the end of the spray bar by inserting into the attached half and securing it with the provided clip.
4. Install the nozzles on the nozzle bodies by aligning the tabs, pushing in, and twisting 1/4 turn.
5. Hang pump and control assembly on the tote tank cage. Zip tie or paddle lock the bracket to the tank through the side holes of the bracket.

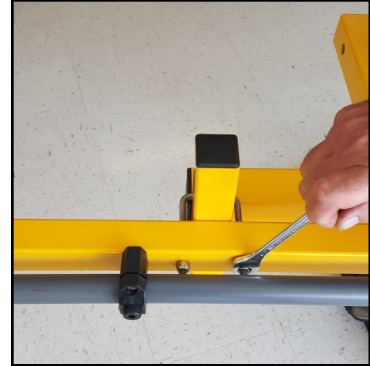

6. Connect tank hose to the suction side of the pump and the spray bar hose to the outlet side of the pump.

Assembly Instructions (continued)

- Insert power supply cord into vehicle 7-pin hitch connector on your vehicle



Trouble shooting

Problem: Spray pump won't turn on

Solutions:


1. Verify that the LED light on the key FOB goes on when the 'ON' button is pushed. If no light appears, replace FOB battery.
2. Verify power is supplied to the correct pins in the vehicle Connector (see photo)



Power can also be tested at the control box between the posts marked 'Gnd' and 'Bat'.

Jumping the power from 'Bat' to 'Pump' will bypass the control box and run the pump

For off-season storage, flush and store with RV anti-freeze solution.

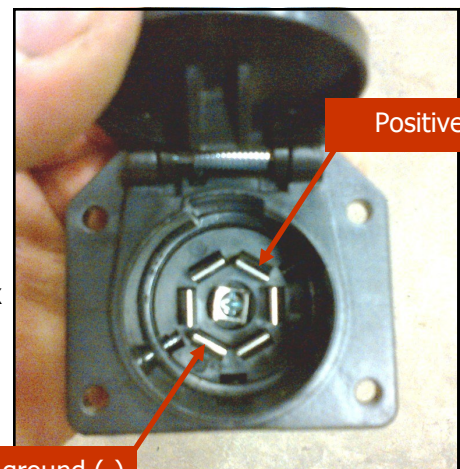

Innovative solutions - Experience - Service



Call **800-621-7910**

Visit us at:

www.frostserv.com

