


GENERAL ASSEMBLY INSTRUCTIONS

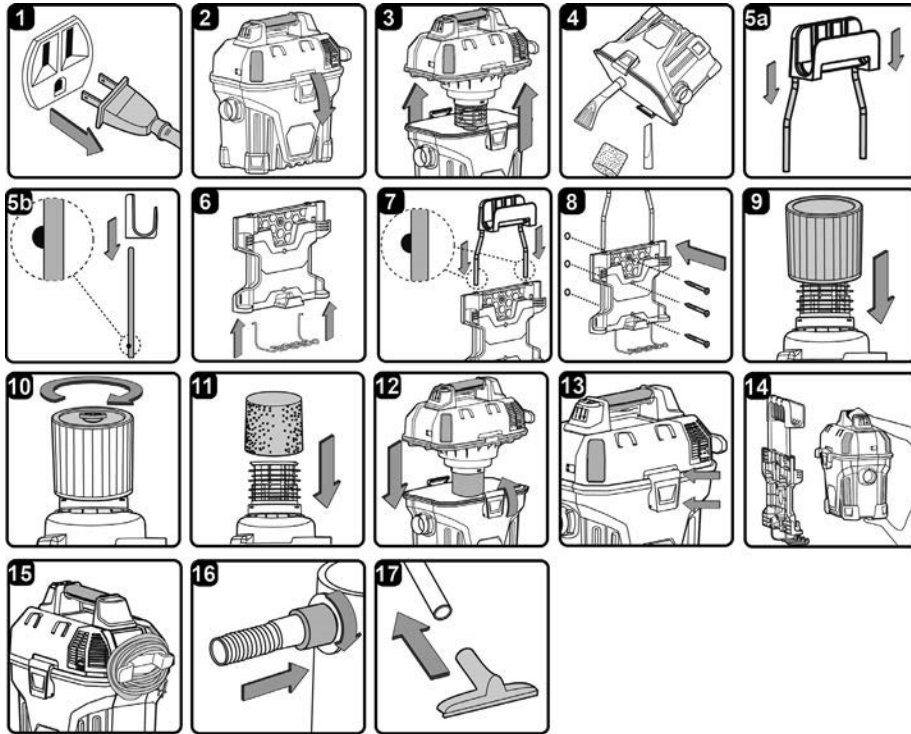

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK - DO NOT EXPOSE TO RAIN. MAKE SURE PLUG IS DISCONNECTED BEFORE ASSEMBLING THE WET/DRY VAC.

UNPACKING YOUR WET/DRY VACUUM & GENERAL ASSEMBLY

1. Verify that the power cord is disconnected from the outlet. (fig. 1)
2. Undo the latches. (fig. 2)
3. Lift the power head off of the container. (fig. 3)
4. Remove the contents from inside the container. Make sure you have all contents as listed on page 6. (fig. 4)
5. Insert the steel rod into the hose holding rack, and snap into place. Make sure the buttons on the rod are directed as illustrated. (fig. 5a & fig. 5b)
6. Locate the two openings on the bottom of the mounting rack and insert the wire accessory storage into the mounting rack until they lock in place. Make sure the wire accessory storage is directed towards the front side of the mounting rack. (fig. 6)
7. Insert the steel rod with hose holding rack into the two holes located on the top of the mounting rack. Ensure the Vacmaster logo is facing forward. (fig. 7)