




Durawood Essentials/Sunrise Adirondack Chair

CHAIR PARTS

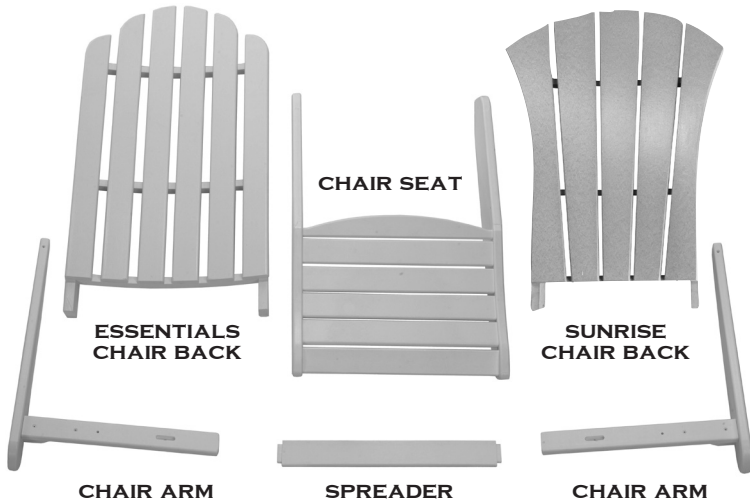

HARDWARE PACK



- 8 - 1.5" Barrel Bolt Assemblies
- 2 - 2" Flathead Screws
- 2 - 1.5" Plugs
- 1 - Allen Wrench
- 1 - Square-Head Drill Bit


Hardware pack weight: 6.08 oz

Before beginning assembly, make sure you have all parts. Note that not all parts pictured are to scale.



EXTREMELY IMPORTANT: Use **ONLY** a Standard Phillips Head Screwdriver to tighten Barrel Bolt Assemblies; do **NOT** use a drill fitted with a Phillips head bit, as you can strip the Barrel Bolt head, marring the appearance of your Durawood Sunrise/ Essentials Adirondack Chair.

USING BARREL BOLTS

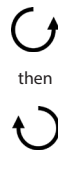

To correctly thread Barrel Bolts to Bolt Fasteners: Fit the Fastener over the bottom of the Bolt, turning the Fastener at first counterclockwise, until you hear a slight click, which means the Bolt is in its groove. Now begin tightening clock-wise as you normally would. **NOTE:** Holes for bolts may seem too big, this tolerance will not impact joint, once both barrel bolt halves are properly secured.

SUGGESTED TOOLS (NOT PROVIDED)



- Rubber Mallet
- Standard Phillips Head Screwdriver
- Drill (Square-Head Drill Bit provided in HARDWARE PACK)

Congratulations on purchasing this Durawood Essentials/Sunrise Adirondack Chair! You're going to love the quality, durability and simple assembly — plus the full Residential Lifetime Warranty. **QUESTIONS REGARDING THIS PRODUCT?** Call our customer-service line toll-free at (800) 643-3522.

ASSEMBLY



STEP 1. Your Durawood Furniture comes with several pegs to increase sturdiness. Wherever you find a peg hole, insert peg. You may need to use a small mallet to tap the plug into place.

STEP 2. On a flat surface, set the **Chair Seat** up on one side, the wide end of the slats facing right. With the **Chair Back's** seating side facing left, slide its short legs between the two slats of the Chair Seat, to where the two sets of drilled holes in both the Chair Seat and Chair Back roughly line up (FIGURE 1).

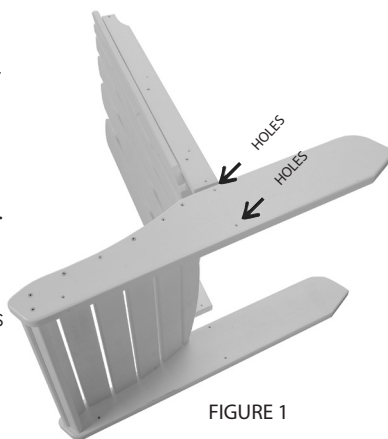


FIGURE 1

NOTE: Chair parts are made to connect precisely, so you may find the fit a little tight during assembly. If so, lightly tap parts into place with a **Rubber Mallet**.

STEP 3. Fine-adjust one set of holes between the **Chair Seat** and **Chair Back**. Insert a **Barrel Bolt** into the lined-up holes (FIGURE 2), keeping track of the Bolt Fastener, which you'll need in the next step. If the Barrel Bolt doesn't go in easily, push it all the way in using the **Allen Wrench**

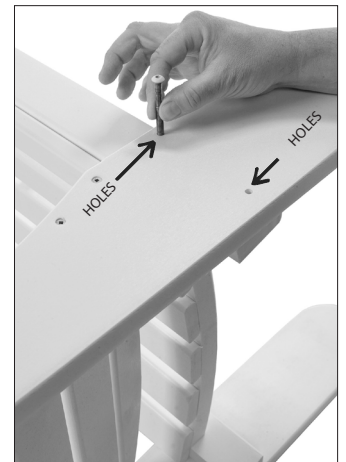


FIGURE 2

or tap it gently with a **Rubber Mallet**, if necessary.

Line up the other set of holes, repeating this step with a second Barrel Bolt parts.

ASSEMBLY INSTRUCTIONS continue, back of page; Residential Lifetime Warranty, back of page

STEP 4. Fit **Bolt Fasteners** over the bottom of each **Barrel Bolt**, carefully to follow the instructions on **Using Barrel Bolts** on the other side of this page.



FIGURE 4

Tighten using the **Allen Wrench** and a **Standard Phillips Head Screwdriver** (FIGURE 4). Do not over-tighten.

STEP 5. Flip the **Chair Seat** onto its opposite side and connect the other side of the **Chair Back** to it, following STEPS 3-4, to complete the chair body.

STEP 6. With the completed chair body still on its side, locate the circular peg toward the outside of the **Chair Seat** (FIGURE 5), then fit the corresponding peg hole in the **Chair Arm** over the peg, tapping gently with a **Rubber Mallet**, if necessary.

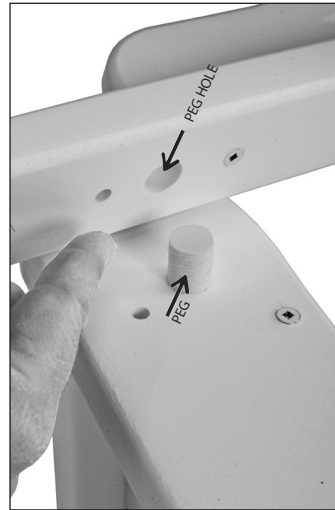


FIGURE 5

STEP 7 Line up the top drilled hole in the **Chair Arm** slat with the hole toward the right side of the **Chair Seat**. Insert the **Barrel Bolt** (FIGURE 6), pushing it all the way into the paired holes using the **Allen Wrench**, or tapping it gently with a **Rubber Mallet**, if necessary.



FIGURE 6

STEP 8 Line up the hole at the top of the **Chair Arm** with the one in the **Chair Back** slat facing you (see FIGURE 6, above right). Insert **Barrel Bolt** into the hole in the back of the Chair Arm, using the **Allen Wrench** to push it all the way into the Chair Back slat. Fit the **Bolt Fastener** over the end of the **Barrel Bolt**, carefully following the **Using Barrel Bolts** instructions on the other side of this page. Tighten using the **Allen Wrench** and a **Standard Phillips Head Screwdriver** (FIGURE 7), careful not to over-tighten.



FIGURE 7

STEP 9. Using the **Allen Wrench** and a **Standard Phillips Head Screwdriver**, go back and fully tighten the **Barrel Bolt Assembly** from STEP 7, careful not to over-tighten.

STEP 10. Flip the chair body over onto its opposite side, repeating STEPS 6-9 with the second **Chair Arm**.

STEP 11. Stand the chair up, facing you. Fit the tongue piece of one end of the **Spreader** into the groove on the inside of one chair leg (FIGURE 8). Do the same for the opposite side of the **Spreader** and chair, though you may have to pull the second leg backward gently to get the second tongue piece of the **Spreader** to slide into the groove.

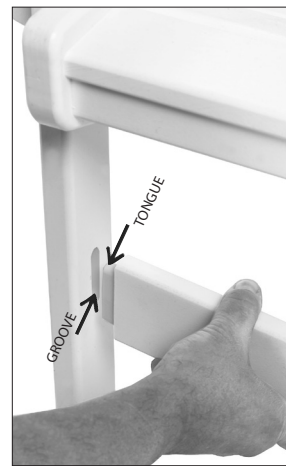


FIGURE 8

STEP 12. Using a **Drill** fitted with the **Square-Head Drill Bit** provided, screw one **Flathead Screw** into the hole opposite the **Spreader** on the outside of one chair leg (FIGURE 9). Repeat with the remaining **Flathead Screw** and other leg to complete assembly.



FIGURE 9

STEP 13. Have a seat in your new chair — you've earned it!

RESIDENTIAL WARRANTY | This quality product includes a **FULL LIFETIME WARRANTY** for **RESIDENTIAL CUSTOMERS**. In the unlikely event any splintering, rotting, cracking, peeling, chipping, insect infestation or other damage should ever occur, The Hammock Source will replace this furniture, at no charge to you. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call toll-free at (800) 643-3522.

CONTRACTOR WARRANTY | **CONTRACTORS** receive a **FULL 7-YEAR WARRANTY**. Follow the same steps outlined above.