

KLUTCH[®]

4-1/2" Angle Grinder

Owner's Manual



WARNING: Read carefully and understand all ASSEMBLY AND OPERATION INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item # 48093

Thank you very much for choosing a Klutch product!

For future reference, please complete the owner's record below:

Serial Number/Lot Date Code: _____

Purchase Date: _____

Save the receipt, warranty, and this manual. It is important that you read the entire manual to become familiar with this product before you begin using it.

This Angle Grinder is designed for certain applications only. The distributor cannot be responsible for issues arising from modification or use of this product in an application for which it was not designed. We strongly recommend that this product not be modified and/or used for any application other than that for which it was designed. If you have questions about a particular modification or application, DO NOT use the product until you have first contacted the distributor to determine if the product can or should be modified or used in such an application.

For technical questions, please call **1-800-222-5381**.

Table of Contents

Intended Use	4
Technical Specifications	4
Important Safety Considerations	5
Safety Signs and Labels	8
Air Supply	9
Assembly	10
Lubrication	10
Before Each Use	10
Operating Instructions	11
After Each Use	11
Maintenance	11
Troubleshooting	12
Diagram	13
Parts List	14
Replacement Parts	14
Limited Warranty	15

Intended Use

KLUTCH heavy duty Angle Grinders feature a high performance motor and are designed for efficient grinding. Selected models feature a spindle lock design that allows quick and easy disc change (0.8mm - 6mm discs), a 9-position adjustable swivel guard, composite motor housing, comfort grip with speed governor, rear exhaust, and low noise. They are ideal for weld preparation, rust removal, or deburring steel, cast iron, or aluminum.

Technical Specifications

Item	Description
Free Speed	12,000 RPM
Grinding Wheel Size	4- 1/2"
Spindle Thread	5/8" - 11
Air Consumption	4 CFM
Air Inlet	1/4" - 18 NPT
Air Pressure	90 PSI
Minimum Hose Size	3/8" ID
Maximum Hose Length	25'
Overall Length	9-3/8"
Weight	4.4 lbs.

WARNING

- Read and understand all instructions. Failure to follow all instructions may result in serious injury.
- The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when using this tool. Always be aware of the environment and ensure that the tool is used in a safe and responsible manner.
- DO NOT allow persons to operate or assemble this product until they have read this manual and have developed a thorough understanding of how the product works.

SAVE THESE INSTRUCTIONS

Important Safety Considerations

- **DO NOT** modify the tool in any way. Unauthorized modification may impair the function and/or safety of the tool and could affect the life of the tool. There are specific applications for which the tool is designed.
- **Use the right tool for the job. DO NOT** attempt to force small equipment to do the work of larger industrial equipment. There are certain applications for which this equipment was designed. It will do the job better and more safely at the capacity for which it was intended. **DO NOT** use this equipment for a purpose for which it was not intended.
- **Industrial or commercial applications must follow OSHA requirements.**

⚠ WARNING

WORK AREA SAFETY

- Inspect the work area before each use. Keep work area clean, dry, free of clutter, and well lit. Cluttered, wet, or dark work areas can result in injury. Using the tool in confined work areas may put you dangerously close to other cutting tools and rotating parts.
- Do not use the tool where there is a risk of causing a fire or an explosion; e.g., in the presence of flammable liquids, gases, or dust. The tool can create sparks, which may ignite the dust or fumes.
- Do not allow the tool to come into contact with an electrical source. The tool is not insulated and contact will cause electrical shock.
- Keep children and bystanders away from the work area while operating the tool. Do not allow children to handle the tool.
- Be aware of all power lines, electrical circuits, water pipes, and other mechanical hazards in your work area. Some of these hazards may be below the work surface hidden from your view and may cause personal harm or property damage if unintentionally contacted.

PERSONAL SAFETY

- Stay alert, watch what you are doing, and use common sense when operating the tool. Do not use the tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the tool may result in serious personal injury.
- Dress properly. Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts. Air vents on the tool often cover moving parts and should be avoided.
- Use safety apparel and equipment. Use ANSI-approved safety goggles or safety glasses with side shields, or when needed, a face shield. Use a dust mask in dusty work conditions. Also use non-skid safety shoes, hardhat, gloves, dust collection systems, and hearing protection when appropriate. This applies to all persons in the work area.
- Do not overreach. Keep proper footing and balance at all times.
- Remove adjusting keys or wrenches before connecting the tool to the air supply or turning on the tool. A wrench or key that is left attached to a rotating part of the tool may cause personal injury.
- Secure the work with clamps or a vise instead of your hand when practical. This safety precaution allows for proper tool operation using both hands.

⚠ CAUTION

TOOL USE AND CARE

- **USE COMPRESSED AIR ONLY.** Use clean, dry, and regulated compressed air to power the tool. Do not use oxygen, carbon dioxide, or any other bottled gas as a power source for this tool.
- Lubricate the tool before its initial use and before and after each additional use.
- Do not force the tool. Pneumatic tools do a better and safer job when used in the manner for which they are designed. Plan your work, and use the correct tool for the job.
- Check for damaged parts before each use. Carefully check that the tool will operate properly and perform its intended function. Replace damaged or worn parts immediately. Never operate the tool with a damaged part.
- Do not use a tool with a malfunctioning switch. Any power tool that cannot be controlled with the power switch is dangerous and must be repaired by an authorized service representative before using.
- Disconnect the air supply from the tool and place the switch in the locked or off position before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.
- Store the tool when it is not in use. Store it in a dry, secure place out of the reach of children. Inspect the tool for good working condition prior to storage and before re-use.
- Use only accessories that are recommended by the manufacturer for use with your tool. Accessories that may be suitable for one tool may create a risk of injury when used with another tool. Never use an accessory that has a lower operating speed or operating pressure than the tool itself.
- Keep guards in place and in working order. Never operate the tool without the guards in place.
- Do not leave the tool running unattended.
- Inspect the tool, hose, and accessories for damage or excessive wear before each use. If you find damage do not use the tool.

Safety Signs and Labels

⚠ WARNING

TO REDUCE THE RISK OF INJURY PLEASE FULLY READ AND UNDERSTAND THE OWNER'S MANUAL. ALWAYS USE THE PROPER PERSONAL PROTECTIVE EQUIPMENT. DO NOT EXCEED 90 PSI.




WARNING!
Risk of severe injury. Do not operate without blade guard in place. Do not use if blade or disc becomes worn or cracked. Always wear eye protection. Do not exceed max blade RPM. Only use blades which are rated for a higher RPM than the tool.

Air Supply

! WARNING: Operating the tool at pressures over the rated capacity may cause severe damage and/or personal injury. Do not exceed 90 PSI while operating the tool. Do not use an accessory rated at a lower maximum pressure than the tool itself.

! CAUTION: The air supply must be clean while operating the tool. Unclean air will cause excessive wear, shorten the life of the tool, and may cause damage and/or personal injury.

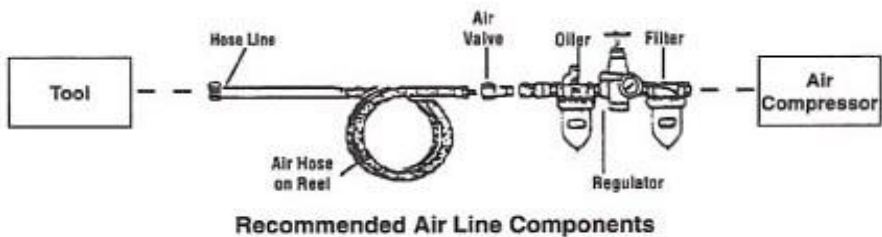

The illustration above shows an optimal setup that includes an inline filter, regulator, and oiler.

- Make sure that the air valve (or trigger) is in the OFF position before connecting to the air supply.
- Do not exceed an air pressure of 90 PSI.
- Drain the air tank daily. Water in the air line can damage the tool.
- Clean the air inlet filter weekly.
- Keep the hose away from heat, oil, and sharp objects. Check the hose for wear and make certain that all connections are secure before every use.

Assembly

1. Wrap the 1/4 in. air nipple with pipe thread seal tape (not included), and then thread it into the air inlet on the air tool.
2. Connect the 3/8 in. I.D. air hose (not included) to a quick-connect coupler (not included) and then to the air nipple.
3. Turn on the air compressor and set it to 90 PSI. Do not exceed the recommended air pressure of 90 PSI.
4. Check the air connection for leaks.

Lubrication

Air tools require lubrication throughout their lifetime. The air motor and bearing use compressed air to power the tool. Compressed air contains moisture which may rust the air motor and other internal parts if the tool is not kept lubricated. Failure to lubricate the tool properly will dramatically shorten the life of the tool and will void the warranty.

The tool must be manually lubricated before its initial use. If you are not using a lubricated air supply, the tool must be manually lubricated before and after each use, as well as after each hour of continual use.

To manually lubricate the tool, add a few drops of pneumatic tool oil to the tool's air line connection.

Before Each Use



WARNING: Remove adjusting keys or wrenches before connecting the tool to the air supply or turning on the tool. A wrench or key that is left attached to a rotating part of the tool may cause personal injury.

- Inspect the tool for damage or excessive wear.
- If you are not using a lubricated air supply, lubricate the tool.
- Drain water from the air compressor tank and condensation from the air lines.
- Connect the air supply to the tool. Do not exceed the maximum air pressure of 90 PSI.

Operating Instructions

- To start the tool, depress the lever. To stop the tool, release the lever.
- To change cutting wheel, disconnect the tool from the air supply, depress the lever to release any pressure, and use the pin wrench (included) to remove the hex screw from the front of the cutting wheel while depressing the wheel lock (55) to prevent the cutting wheel from turning.

After Each Use

- Disconnect the air supply from the tool.
- If you are not using a lubricated air supply, lubricate the tool.
- Store the tool.

Maintenance



WARNING: To avoid risk of severe injury, disconnect the air supply from the tool before performing any maintenance, cleaning, or inspection.


Maintain your tool. It is recommended that the general condition of any tool be examined before it is used. Keep your tool in good repair by adopting a program of conscientious repair and maintenance in accordance with the recommended procedures found in this manual. Keep all cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control. Keep handles dry, clean, and free from oil and grease.

Cleaning. Use only soap and a damp cloth to clean your tool. Many household cleaners are harmful to plastics and other insulation. Never let liquid get inside the tool.

Troubleshooting

Problem	Possible Cause	Solution
There is moisture blowing out of the tool's exhaust.	There is water in the tank.	Drain the tank. (See the air compressor manual for instructions.) Lubricate the tool again and run for 1-2 seconds.
The tool runs slowly or will not operate.	There is grit or gum in the tool.	Flush the tool with air tool oil or gum solvent.
	The tool is out of oil.	Lubricate the tool according to the lubrication instructions in this manual.
	The air pressure is low.	Adjust the regulator setting on the air compressor. Adjust the compressor regulator to the tool's maximum setting of 90psi.
	The air hose leaks.	Check the fitting and connection; Check the air hose.
	The air pressure drops.	Ensure the hose is the proper size. Long hoses or tools using large volumes of air may require a hose with an I.D. of 1/2" or larger depending on the total length of the hose. Do not use a multiple number of hoses connected together with a quick connect fitting. This causes additional pressure drops and reduces the tool power. Directly connect the hoses together.
	There is a worn rotor blade in the motor.	Replace the rotor blade.
	There is a worn ball bearing in the motor.	Remove and inspect the bearing for rust, dirt, and grit. Replace or clean and grease the bearing with bearing grease.

Diagram

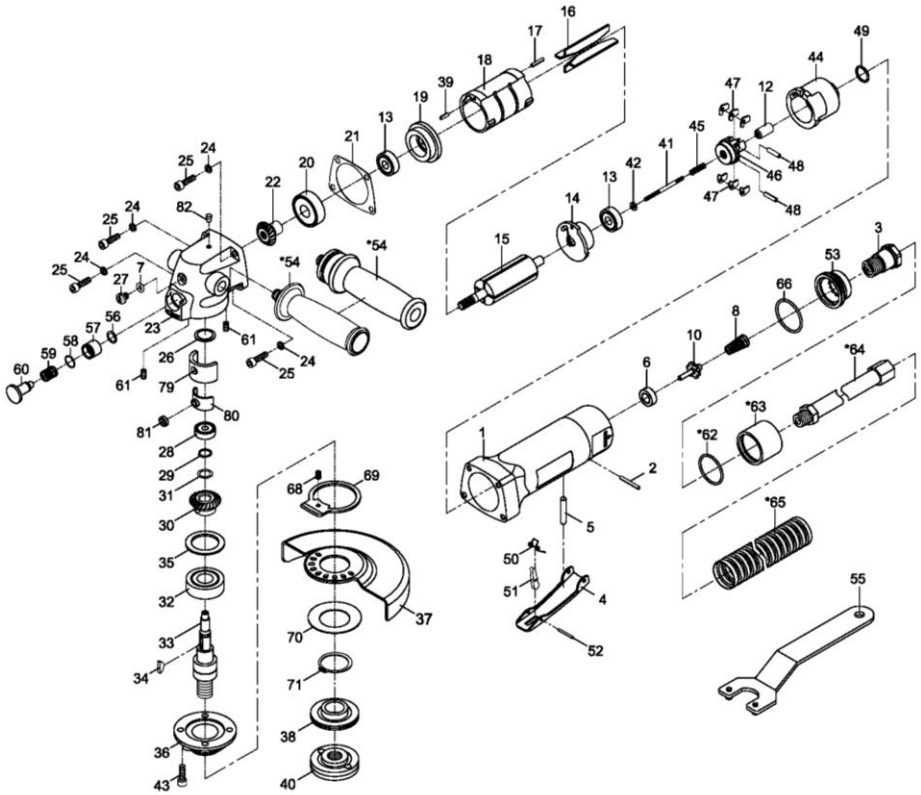

Parts List

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	5D-6192PA01	Motor Housing	40	5D-619244	Flange Nut (5/8"-11UNC)
2	30102	Spring Pin (3x24)	41	61941	Adjust Screw
3	5D-619203	Air Inlet	42	61942	Adjust Nut
4	6K-301104	Throttle Lever	43	40343-12	Screw (4) (M5x16)
5	5D-619205	Pin	44	5D-619224	Inlet Guide
6	75-725145	Rubber Spacer	45	61945	Spring
7	61907	O-Ring (4.9x2.2)	46	61946	Governor
8	73108	Spring	47	61947	Pendulum (6)
10	75-725146	Valve Stem	48	40317-13	Spring Pin (2) (3x12)
12	61912	Plunger	49	82247	O-Ring (13.5x1.5)
13	030120	Ball Bearing (2) (608zz)	50	522212	Spring
14	5D-619214	Rear Plate	51	522239	Safety Bar
15	61915	Rotor	52	51542	Spring Pin (2x18)
16	61916	Rotor Blade (4)	53	5D-619207	Exhaust Diffuser
17	206106	Spring Pin (2.5x12)	*54	5D-619256	Dead Handle
18	5D-619218	Cylinder		5G-619753	Vibration Reduced Handle
19	5D-619219	Front End Plate	55	619554	Pin Wrench
20	080227	Ball Bearing (6201z)	56	ISTW-7	Retaining Ring (ISTW-7)
21	5D-619008	Gasket	57	5D-619227	Bushing
22	61922	Bevel Gear	58	52236	O-Ring (10.5x1)
23	5D-619228-0001	Gear Housing	59	5D-619208	Spring
24	40344	Spring Washer (4) (M5)	60	5D-619229	Spindle Stop Button
25	62025	Screw (4) (M5x18)	61	82246-12	Set Screw (2) (M5x8)
26	61926	Spacer	*62	OR02700200	O-Ring (27x2)
27	5D-619261	Screw (M6x10)	*63	5D-619247	Clamp
28	030113	Ball Bearing (626zz)	*64	51239	Hose
29	60319	Retaining Ring (STW-10)	*65	5D-619249	Exhaust Hose
30	5D-6192S30	Bevel Gear	66	208011	O-Ring (29.5x2)
31	61931	Wave Washer (WW-10)	68	5D-6192S08	Spring
32	061932	Ball Bearing (6202zz)	69	5D-6192S09	Lock Ring
33	5D-6192S27	Spindle (5/8"-11UNC)	70	5D-6192S10	Disk Spring
34	61934	Key (3x13)	71	STW27	Retaining Ring (STW-27)
35	5D-6192S11	Spacer	79	5D-619250	Felt Oiler
36	5D-6192S07	Bearing Cap	80	5D-619251	Steady
37	5C-6192S02	Disc Cover	81	5D-619258	Washer
38	5D-619243	Flange (5/8")	82	41-401254	Oil Cap (1/8")
39	61048	Sping Pin (2.5x8)			

Replacement Parts

- For replacement parts and technical questions, please call Customer Service at **1-800-222-5381**.
- Not all product components are available for replacement. The illustrations provided are a convenient reference to the location and position of parts in the assembly sequence.
- When ordering parts, the following will be required: Model Number, Serial Number/Lot Date Code, and Description.
- The distributor reserves the rights to make design changes and or improvements to product lines and manuals without notice.

Limited Warranty

Northern Tool and Equipment Company, Inc. ("We" or "Us") warrants to the original purchaser only ("You" or "Your") that the Klutch Air Tool product purchased will be free from material defects in both materials and workmanship, normal wear and tear excepted, for a period of **one year** from date of purchase. The foregoing warranty is valid only if the installation and use of the product is strictly in accordance with product instructions. There are no other warranties, express or implied, including the warranty of merchantability or fitness for a particular purpose. If the product does not comply with this limited warranty, Your sole and exclusive remedy is that We will, at our sole option and within a commercially reasonable time, either replace the product without charge to You or refund the purchase price (less shipping). This limited warranty is not transferable.

Limitations on the Warranty

This limited warranty does not cover: (a) normal wear and tear; (b) accessories both consumable and durable; (c) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (d) damage from misapplication, overloading, or improper installation; (e) improper maintenance and repair; and (f) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workmanlike manner.

Obligations of Purchaser

You must retain Your product purchase receipt to verify date of purchase and that You are the original purchaser. To make a warranty claim, contact Us at 1-800-222-5381, identify the product by make and model number, and follow the claim instructions that will be provided. The product and the purchase receipt must be provided to Us in order to process Your warranty claim. Any returned product that is replaced or refunded by Us becomes our property. You will be responsible for return shipping costs or costs related to Your return visit to a retail store.

Remedy Limits

Product replacement or a refund of the purchase price is Your sole remedy under this limited warranty or any other warranty related to the product. We shall not be liable for: service or labor charges or damage to Your property incurred in removing or replacing the product; any damages, including, without limitation, damages to tangible personal property or personal injury, related to Your improper use, installation, or maintenance of the product; or any indirect, incidental or consequential damages of any kind for any reason.

Assumption of Risk

You acknowledge and agree that any use of the product for any purpose other than the specified use(s) stated in the product instructions is at Your own risk.

Governing Law

This limited warranty gives You specific legal rights, and You also may have other rights which vary from state to state. Some states do not allow limitations or exclusions on implied warranties or incidental or consequential damages, so the above limitations may not apply to You. This limited warranty is governed by the laws of the State of Minnesota, without regard to rules pertaining to conflicts of law. The state courts located in Dakota County, Minnesota shall have exclusive jurisdiction for any disputes relating to this warranty.

⚠ WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.



Distributed by
Northern Tool and Equipment Company, Inc.
Burnsville, Minnesota 55306
NorthernTool.com
Made in Taiwan