



Record purchase information:

| | |
|-----------------|------------|
| Model No.: | Stock No.: |
| Serial No.: | |
| Purchased from: | |
| Date purchased: | |

Operating Instructions and Parts Manual

14"x40" Electronic Variable Speed Lathe

Model EVS-1440B



JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-311440
Edition 1 03/2019
Copyright © 2019 JET



1.0 IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce risk of injury:

1. Read and understand the entire owner's manual before attempting set-up or operation of this lathe.
2. This machine is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper and safe use of lathes, do not use this machine until proper training and knowledge have been obtained.
3. Keep guards in place. Safety guards must be kept in place and in working order.
4. Remove adjusting keys and wrenches. Before turning on machine, check to see that any adjusting wrenches are removed from the tool.
5. Reduce the risk of unintentional starting. Make sure switch is in the OFF position before plugging in the tool.
6. Do not force tools. Always use a tool at the rate for which it was designed.
7. Use the right tool. Do not force a tool or attachment to do a job for which it was not designed.
8. Maintain tools with care. Keep tools sharp and clean for best and safest performance. Follow instructions for lubrication and changing accessories.
9. Always disconnect the tool from the power source before adjusting or servicing.
10. Check for damaged parts. Check for alignment of moving parts, breakage of parts, mounting, and any other condition that may affect the tool's operation. A guard or any part that is damaged should be repaired or replaced.
11. Keep work area clean. Cluttered areas and benches invite accidents.
12. Keep work area well lighted.
13. Keep children and visitors away. All visitors should be kept a safe distance from the work area.
14. Make the workshop child proof. Use padlocks, master switches, and remove starter keys.
15. Wear proper apparel. Loose clothing, gloves, neckties, rings, bracelets, or other jewelry may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair. Do not wear any type of glove.
16. Always wear ANSI Z87.1 approved safety glasses or face shield while using this machine. (Everyday eyeglasses only have impact resistant lenses; they are *not* safety glasses.)
17. Do not overreach. Keep proper footing and balance at all times.
18. Do not place hands near the chuck or workpiece while the machine is operating.
19. Do not perform any set-up work while machine is operating.
20. Read and understand all warnings posted on the machine.
21. This manual is intended to familiarize you with the technical aspects of this lathe. It is not, nor was it intended to be, a training manual.
22. Do not attempt to adjust or remove tools during operation. Disconnect tools before servicing; when changing accessories, such as blades, bits, cutters, and the like.
23. Never stop a rotating chuck or workpiece with your hands.
24. Choose a low spindle speed when working unbalanced workpieces, and for threading and tapping operations.
25. Do not exceed the maximum speed of the workholding device.
26. Do not exceed the clamping capacity of the chuck.
27. Workpieces longer than 3 times the chucking diameter must be supported by the tailstock or a steady rest.
28. Avoid small chuck diameters with large turning diameters.
29. Avoid short chucking lengths and small chucking contact.
30. Turn off the machine and disconnect from power before cleaning. Use a brush to remove shavings or debris — do not use bare hands.
31. Do not stand on the machine. Serious injury could occur if the machine tips over.
32. Never leave the machine running unattended. Turn the power off and do not leave the machine until moving parts come to a complete stop.
33. Remove loose items and unnecessary work pieces from the area before starting the machine.
34. Do not operate the lathe in flammable or explosive environments. Do not use in a damp environment or expose to rain.

35. Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
36. Installation work and electrical wiring must be done by a qualified electrician in accordance with all applicable codes and standards.
37. Tighten all locks before operating.
38. Rotate workpiece by hand before applying power.
39. Rough out workpiece before installing on faceplate.
40. Use lowest speed when starting new workpiece.

⚠ WARNING: This product can expose you to chemicals including lead and cadmium which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to <http://www.p65warnings.ca.gov>.

⚠ WARNING: Some dust, fumes and gases created by power sanding, sawing, grinding, drilling, welding and other construction activities contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead based paint
- crystalline silica from bricks, cement and other masonry products
- arsenic and chromium from chemically treated lumber

Your risk of exposure varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as dust masks that are specifically designed to filter out microscopic particles. For more information go to <http://www.p65warnings.ca.gov/> and <http://www.p65warnings.ca.gov/wood>.

Familiarize yourself with the following safety notices used in this manual:

⚠ CAUTION

This means that if precautions are not heeded, it may result in minor injury and/or possible machine damage.

⚠ WARNING

This means that if precautions are not heeded, it may result in serious, or possibly even fatal, injury.

SAVE THESE INSTRUCTIONS

2.0 About this manual

This manual is provided by JET, covering the safe operation and maintenance procedures for a JET Model EVS-1440B Electronic Variable Speed Lathe. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. Your machine has been designed and constructed to provide consistent, long-term operation if used in accordance with the instructions set forth in this document.

If there are questions or comments, please contact your local supplier or JET. JET can also be reached at our web site: www.jettools.com.

Retain this manual for future reference. If the machine transfers ownership, the manual should accompany it.

⚠ WARNING

Read and understand the entire contents of this manual before attempting assembly or operation. Failure to comply may cause serious injury.

Mail in the provided registration card, or register your product online -

<http://www.jettools.com/us/en/service-and-support/warranty/registration/>

3.0 Table of contents

| Section | Page |
|---|------|
| 1.0 IMPORTANT SAFETY INSTRUCTIONS | 2 |
| 2.0 About this manual | 3 |
| 3.0 Table of contents | 4 |
| 4.0 Main features and nomenclature, EVS-1440B Lathe | 6 |
| 5.0 Specifications | 7 |
| 5.1 Machine dimensions and hole spacing | 9 |
| 6.0 Setup and assembly | 10 |
| 6.1 Shipping contents | 10 |
| 6.2 Installation | 10 |
| 6.3 Leveling the lathe | 11 |
| 6.4 Completing installation | 11 |
| 6.5 Chuck preparation and mounting | 11 |
| 6.6 Break-in period | 12 |
| 7.0 Lubrication | 12 |
| 7.1 Coolant preparation | 14 |
| 8.0 Electrical connections | 14 |
| 9.0 Controls | 14 |
| 10.0 Operation | 16 |
| 10.1 Feed and Thread Selection | 17 |
| 10.2 Thread cutting | 17 |
| 11.0 Adjustments | 18 |
| 11.1 Chuck jaw reversal | 18 |
| 11.2 Gib/drag adjustments | 18 |
| 11.3 Tailstock adjustments | 19 |
| 11.4 Gap section | 19 |
| 11.5 Aligning tailstock to headstock | 20 |
| 11.6 Shear pin replacement | 20 |
| 11.7 Steady rest adjustment | 20 |
| 11.8 Follow rest adjustment | 20 |
| 11.9 Belt tension | 20 |
| 11.10 Gear change | 21 |
| 12.0 Lubrication schedule | 22 |
| 13.0 Thread and feed chart | 23 |
| 14.0 Recommended cutting speeds | 24 |
| 15.0 Replacement Parts | 25 |
| 15.1.1 EVS-1440B Headstock Assembly – Exploded View I | 25 |
| 15.1.2 EVS-1440B Headstock Assembly – Exploded View II | 26 |
| 15.1.3 EVS-1440B Headstock Assembly – Exploded View III | 27 |
| 15.1.4 EVS-1440B Headstock Assembly – Parts List | 28 |
| 15.2.1 EVS-1440B Gearbox Assembly – Exploded View I | 30 |
| 15.2.2 EVS-1440B Gearbox Assembly – Exploded View II | 31 |
| 15.2.3 EVS-1440B Gearbox Assembly – Exploded View III | 32 |
| 15.2.4 EVS-1440B Gearbox Assembly – Parts List | 33 |
| 15.3.1 EVS-1440B Apron Assembly – Exploded View I | 35 |
| 15.3.2 EVS-1440B Apron Assembly – Exploded View II | 36 |
| 15.3.3 EVS-1440B Apron Assembly – Exploded View III | 37 |
| 15.3.4 EVS-1440B Apron Assembly – Parts List | 38 |
| 15.4.1 EVS-1440B Carriage Assembly – Exploded View | 40 |
| 15.4.2 EVS-1440B Carriage Assembly – Parts List | 41 |
| 15.5.1 EVS-1440B Tool Post Assembly – Exploded View | 42 |
| 15.5.2 EVS-1440B Tool Post Assembly – Parts List | 43 |
| 15.6.1 EVS-1440B Tailstock Assembly – Exploded View | 44 |
| 15.6.2 EVS-1440B Tailstock Assembly – Parts List | 45 |
| 15.7.1 EVS-1440B Bed Assembly – Exploded View | 46 |
| 15.7.2 EVS-1440B Bed Assembly – Parts List | 47 |
| 15.8.1 EVS-1440B Cabinet and Panel Assembly – Exploded View | 48 |
| 15.8.2 EVS-1440B Cabinet and Panel Assembly – Parts List | 49 |
| 15.9.1 EVS-1440B End Gear Assembly – Exploded View | 50 |

| | | |
|---------|---|----|
| 15.9.2 | EVS-1440B End Gear Assembly – Parts List..... | 51 |
| 15.10.1 | EVS-1440B Chuck Guard Assembly – Exploded View | 52 |
| 15.10.2 | EVS-1440B Chuck Guard Assembly – Parts List..... | 52 |
| 15.11.1 | EVS-1440B Coolant Pump Assembly – Exploded View | 53 |
| 15.11.2 | EVS-1440B Coolant Pump Assembly – Parts List | 53 |
| 15.12.1 | EVS-1440B Dial Indicator Assembly – Exploded View | 54 |
| 15.12.2 | EVS-1440B Dial Indicator Assembly – Parts List | 54 |
| 15.13.1 | EVS-1440B Chuck Assembly – Exploded View | 55 |
| 15.13.2 | EVS-1440B Chuck Assembly – Parts List..... | 55 |
| 15.14.1 | EVS-1440B Face Plate (OPTIONAL) – Exploded View | 55 |
| 15.14.2 | EVS-1440B Face Plate (OPTIONAL) – Parts List..... | 55 |
| 15.15.1 | EVS-1440B Four-Position Stop Assembly – Exploded View | 56 |
| 15.15.2 | EVS-1440B Four-Position Stop Assembly – Parts List | 56 |
| 15.16.1 | EVS-1440B Chuck Key Bracket Assembly – Exploded View..... | 57 |
| 15.16.2 | EVS-1440B Chuck Key Bracket Assembly – Parts List | 57 |
| 15.17.1 | EVS-1440B Steady Rest Assembly – Exploded View..... | 58 |
| 15.17.2 | EVS-1440B Steady Rest Assembly – Parts List | 58 |
| 15.18.1 | EVS-1440B Follow Rest Assembly – Exploded View | 59 |
| 15.18.2 | EVS-1440B Follow Rest Assembly – Parts List | 59 |
| 15.19.1 | #892035 Taper Attachment Assembly (OPTIONAL) – Exploded View..... | 60 |
| 15.19.2 | #892035 Taper Attachment Assembly (OPTIONAL) – Parts List..... | 61 |
| 15.20.1 | EVS-1440B Control Plate Assembly – Exploded View | 62 |
| 15.20.2 | EVS-1440B Control Plate Assembly – Parts List | 63 |
| 16.0 | Electrical Connections for EVS-1440B..... | 64 |
| 17.0 | Warranty and service | 67 |

4.0 Main features and nomenclature, EVS-1440B Lathe

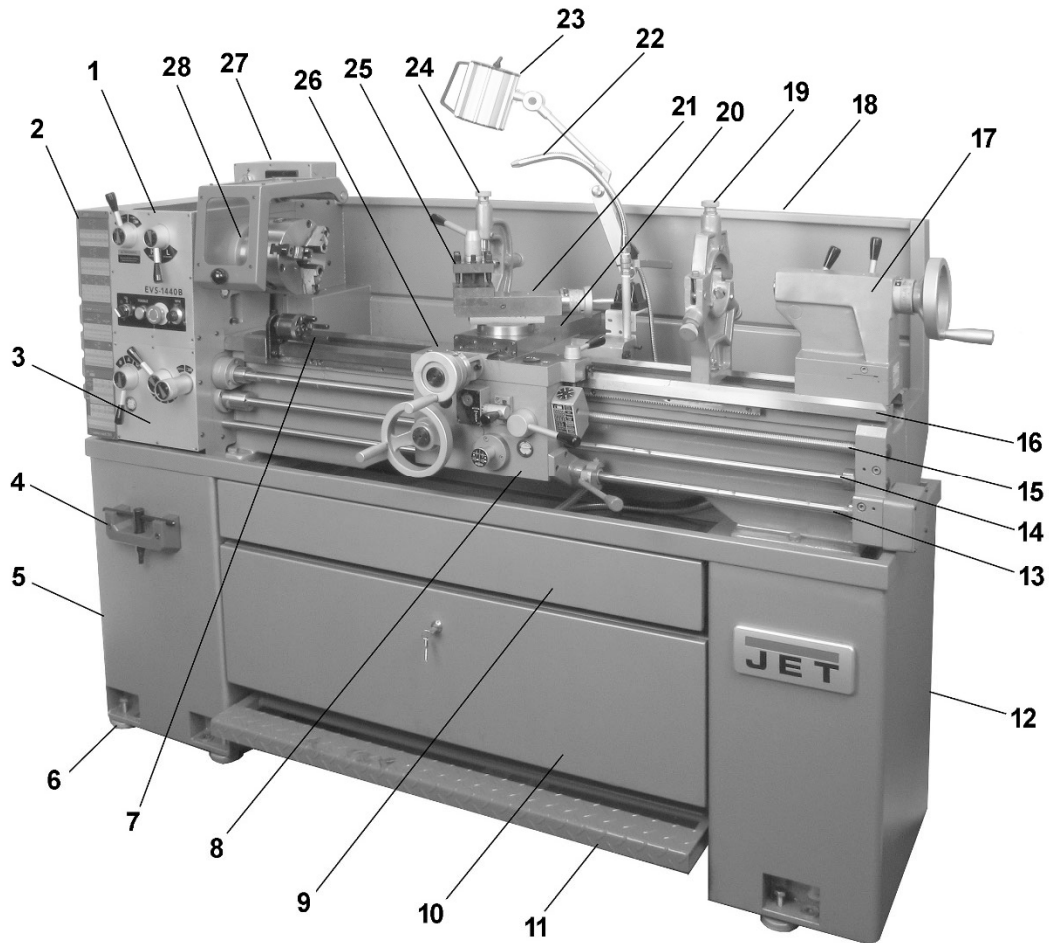


Figure 4-1

- | | |
|-----------------------------------|-------------------------------------|
| 1. Headstock | 16. Bed ways |
| 2. End cover | 17. Tailstock |
| 3. Gearbox | 18. Splash guard |
| 4. Chuck key bracket with sensor | 19. Steady rest |
| 5. Left stand | 20. Cross slide |
| 6. Leveling pad with screw (x6) | 21. Top slide |
| 7. 4-way carriage stop | 22. Coolant nozzle |
| 8. Apron | 23. LED lamp |
| 9. Chip tray | 24. Follow rest |
| 10. Storage cabinet | 25. Tool post |
| 11. Foot brake | 26. Saddle |
| 12. Right stand | 27. Electrical box with LED display |
| 13. Spindle direction control rod | 28. Spindle |
| 14. Feed shaft | |
| 15. Lead screw | |

5.0 Specifications

Table 1

| | | |
|---|-----------------------------|--|
| Model number | | EVS-1440B |
| Stock number | | 311440 |
| Motor and Electricals | | |
| Main Motor | Type | Totally enclosed, fan-cooled, induction |
| | Horsepower | 3HP (2.2 kW) |
| | Phase | 3 |
| | Voltage | 230/460V |
| | Cycle | 60 Hz |
| | Listed FLA (full load amps) | 8.4/4.2 A |
| | Motor speed | 1800 RPM |
| Coolant pump | Horsepower | 1/8 |
| | Phase | single |
| | Voltage | 230V |
| | Cycle | 60 Hz |
| | Listed FLA (full load amps) | 0.4 A |
| | Motor speed | 3400 RPM |
| Power switch | | Magnetic, 25A, 690VAC |
| Drive system | | VFD-B inverter, dual v-belts and gear train |
| Input power requirement | | 230V, 3-phase or single phase |
| Power cord/plug | | Not supplied |
| Work lamp | | LED, AC24V 9W |
| Recommended minimum circuit size ¹ | | 15A |
| Sound emission without load ² | | 60 dB |
| General capacities | | |
| Distance between centers | | 40 in. (1000 mm) |
| Swing over bed | | 14 in. (350 mm) |
| Swing over gap | | 19-1/2 in. (495 mm) |
| Swing over cross slide | | 9-1/16 in. (230 mm) |
| Maximum cross slide travel | | 6-1/8 in. (155 mm) |
| Maximum carriage travel | | 35-1/2 in. (900 mm) |
| Maximum top slide travel | | 3-1/2 in. (90 mm) |
| Maximum size cutting tool | | 3/4 x 3/4 in. (20 x 20 mm) |
| Steady rest capacity | | Ø 6~85mm (0.23~3.34") copper shaft (standard) Ø 5~60mm (0.20~2.36") bearing roller (optional) |
| Follow rest capacity | | Ø9~56mm (0.35"~2.2") copper shaft (standard) Ø10~50mm (0.393"~2") bearing roller (optional) |
| Headstock and spindle | | |
| Spindle bore | | 1-9/16 in. (40 mm) |
| Spindle nose mounting | | D1-4 camlock |
| Spindle taper with sleeve | | MT-5 |
| Range of spindle speeds | | 40~365 and 220~2000 RPM |
| Feeds | | |
| Feed rod diameter | | 3/4 in. (19 mm) |
| Longitudinal feeds | Number | 25 |
| | Range | 0.0016 ~ 0.0460 in. per revolution |
| Cross feeds | Number | 25 |
| | Range | 0.0005 ~ 0.015 in. per revolution |

| Threads | | |
|-------------------------------|--------|---|
| Lead screw diameter and pitch | | 7/8 in., 8 TPI |
| Inch threads | Number | 34 |
| | Range | 2-56 TPI |
| Metric threads | Number | 34 |
| | Range | 0.5-12 mm |
| Tailstock | | |
| Tailstock quill taper | | MT-3 |
| Maximum quill travel | | 4 in. (100 mm) |
| Quill diameter | | 1-9/16 in. (40 mm) |
| Dimensions | | |
| Overall dimensions LxWxH | | 1740 x 717 x 1263 mm (68.5 x 28.3 x 50 in.) |
| Length of gap | | 9-1/2 in. (241 mm) |
| Bed width | | 7.48 in. (190 mm) |
| Shipping dimensions LxWxH | | 76 x 30 x 61 in. (1960 x 762 x 1549 mm) |
| Weights | | |
| Net weight | | 1320 lbs. (600 kg) |
| Shipping weight | | 1584 lbs. (720 kg) |
| Lubrication capacities | | |
| Headstock | | 4~5L (1~1.3 gal) |
| Gearbox | | 0.9~1L (0.24~0.27 gal.) |
| Apron | | 0.7~0.8L (0.18~0.21 gal.) |
| Coolant tank capacity | | 9L (2.38 gal.) |

¹ subject to local and national electrical codes.

² The specified values are emission levels and are not necessarily to be seen as safe operating levels. As workplace conditions vary, this information is intended to allow the user to make a better estimation of the hazards and risks involved only.

L = length, W = width, H = height

The specifications in this manual were current at time of publication, but because of our policy of continuous improvement, JET reserves the right to change specifications at any time and without prior notice, without incurring obligations.

5.1 Machine dimensions and hole spacing

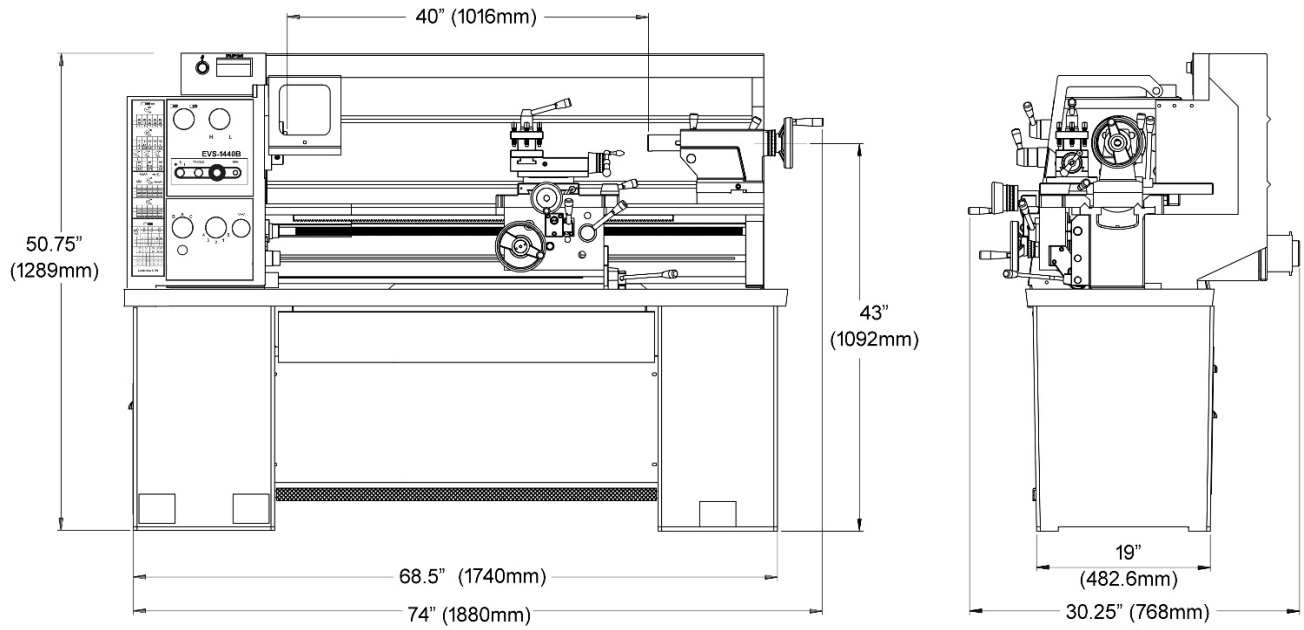


Figure 5-1

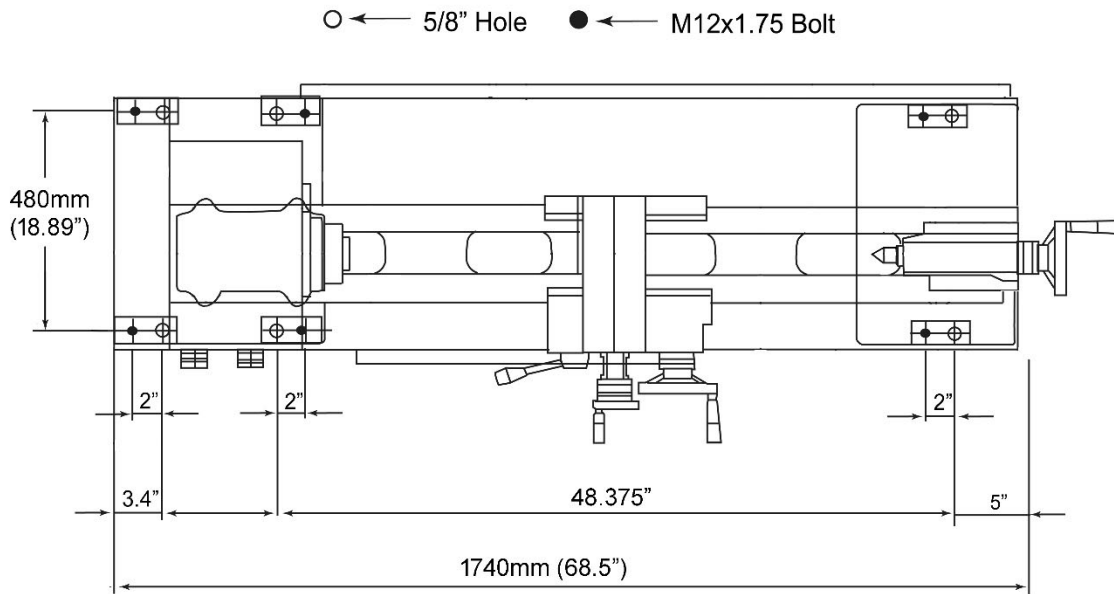


Figure 5-2

⚠WARNING Read and understand all assembly instructions before attempting assembly. Failure to comply may cause serious injury.

6.0 Setup and assembly

6.1 Shipping contents

See Figure 6-1.

- 1 Lathe
- 1 Steady rest (pre-installed)
- 1 Follow rest (pre-installed)
- 1 Three jaw scroll chuck 6" (pre-installed)
- 1 Backplate 6" (150mm) (pre-installed)
- 1 Splash guard (pre-installed)
- 1 4-Position carriage stop (preinstalled)
- 6 Leveling pads (not shown)
- 1 Tool box (see contents below)

Tool box (p/n EVS1440B-TB) contents:

- 2 Open end wrenches (17/19, 12/14 mm)
- 1 Oil can
- 1 Hex key set (2, 2.5, 3, 4, 5, 6, 8 mm)
- 2 Shear pins
- 1 Set of change gears (50/46/44/40/35/30 T)
- 2 Chuck wrenches
- 1 Tool post wrench
- 2 Dead centers MT-3
- 1 Center sleeve MT-3/MT-5
- 1 Cross point screwdriver
- 1 Flat head screwdriver
- 2 Sets of keys for stand doors
- 1 Operating Instructions and Parts Manual
- 1 Product registration card

6.1.1 Optional accessories

The following accessories are available for the EVS-1440B Lathe. See your dealer to order.

- Taper attachment #892035
- 5C Collet closer #892006
- 12" Face Plate #E1440VS-FP02



Figure 6-1

6.2 Installation

1. Finish removing all crate material from around lathe.
2. Unbolt lathe from shipping pallet.
3. Choose a location for the lathe that is dry and has sufficient illumination (consult OSHA or ANSI standards for recommended lighting levels in workshop environments).
4. Allow sufficient room on all four sides for servicing lathe, and to load and off-load work pieces. In addition, if bar work is to be performed, allow enough space for stock to extend out the headstock end. If used in production operations, leave enough space for stacking unfinished and finished parts.
5. The foundation must be solid to support the weight of the machine and prevent vibration, preferably a solid concrete floor.
6. The lathe's center of weight is near the headstock. Before lifting, release tailstock and carriage (see sect. 9.0 to locate locking levers) to right end of bed and lock them.

⚠CAUTION Confirm that all suspension equipment is properly rated and in good condition for lifting lathe. Do not allow anyone beneath or near load while lifting.

- With proper lifting equipment, slowly raise lathe off shipping pallet. (See Figure 6-2). **Do not lift lathe by the spindle. Do not place slings around bed – this can bend leadscrew and feed shaft.**

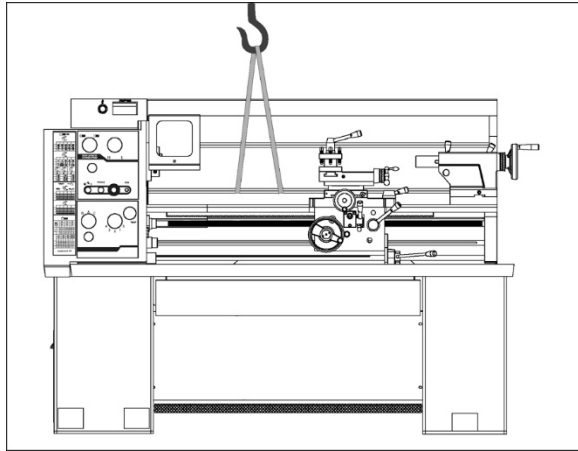


Figure 6-2

- The lathe may be installed free-standing or bolted to the foundation:

Free-standing – Use the provided cast iron pads under each foot hole, and adjust using the adjusting bolts with hex nuts (see sect. 6.3).

Fixed installation – Position lathe over six bolts (1/2in. or 12mm diameter) placed head-down in the concrete. Refer to Figure 5-1 for hole dimensions and spacing. Secure with hex nuts, after leveling (sect. 6.3).

6.3 Leveling the lathe

It is imperative that the lathe be on a level plane; that is, where headstock and tailstock center points remain aligned throughout the tailstock travel, with the bed ways absent of twist and thus parallel to operational center line.

A lathe which is not properly leveled will be inaccurate, producing tapered cuts. Also, the center point of the tailstock will vary as it is positioned along the bed, thus requiring constant readjustment of the set of the tailstock.

- Use a machinist's precision level on the bed ways both front to back and side to side, as shown in Figure 6-3. Take the reading in one direction every ten inches. Make sure the ways are clean and free of any debris before placing a level upon them.

Deviation over bed length (see Figure 6-3):

(a) Maximum 0.02/1000mm

(b) Maximum 0.04/1000mm

- Tighten foot screw nuts evenly to avoid distortion.
- Leveling should be inspected occasionally, and especially if the accuracy of the lathe begins to diminish.

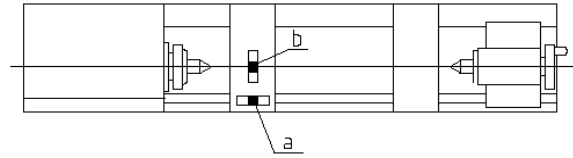


Figure 6-3

6.4 Completing installation

- Exposed metal surfaces have been treated with an anti-corrosion coating. Remove this using a soft rag and mild commercial solvent or kerosene. Do not use paint thinner, gasoline, or lacquer thinner, as these will damage painted surfaces. Cover all cleaned surfaces with a light film of SAE-20W machine oil, such as Mobil DTE® Oil Heavy Medium.
- Remove end gear cover. Clean all components of end gear assembly with kerosene or mild commercial solvent. Coat all gears with a heavy, non-slinging grease. Replace end gear cover.

NOTE: A limit switch prevents lathe from operating while end gear cover is removed.

6.5 Chuck preparation and mounting

WARNING Grey iron chucks must not be fitted on this high speed lathe. Use only ductile iron chucks.

The three-jaw scroll chuck is shipped pre-installed on the lathe. It can be used for clamping cylindrical, triangular and hexagonal stock, and has reversible jaws.

WARNING Chuck is heavy; request assistance to remove or install.

Before removing a chuck, place a flat piece of thick plywood across the bedways under the chuck to prevent damage to the bedways should the chuck fall from your hands. Alternatively, many users make a wood chuck cradle that sits atop the ways and accepts the specific diameter of chuck, for easier installing and removal. Figure 6-4 shows an example.

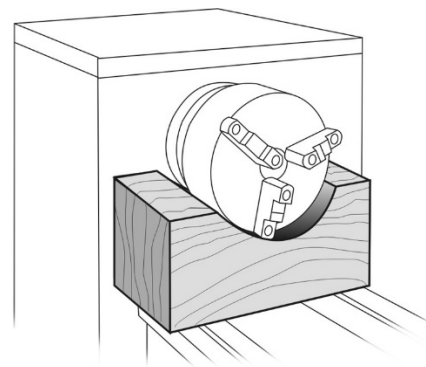


Figure 6-4

To remove chuck or faceplate:

1. Support the chuck while turning three camlocks 1/4-turn counterclockwise using the chuck wrench from toolbox. See Figure 6-5. Line up the two marks for removal.

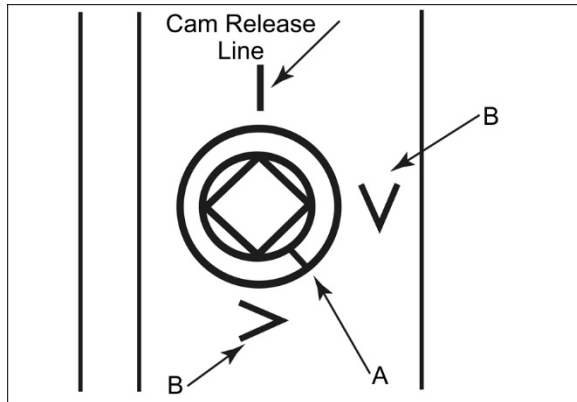


Figure 6-5

2. Carefully remove chuck from spindle and place on an adequate work surface. If needed, use a mallet at various points on back side of chuck to help free it from spindle.
3. Inspect the camlock studs. Make sure they have not become cracked or broken during transit. Clean all parts thoroughly with solvent. Also clean spindle and camlocks.

To install chuck or faceplate:

4. Cover all chuck jaws and scroll inside the chuck with a lithium grease, such as Mobilith® AW2 or equivalent. Cover the spindle, cam locks, and chuck body with a light film of SAE 20W oil.
5. Lift chuck up to spindle nose and press onto spindle. Tighten in place by turning each camlock 1/4-turn clockwise. The index mark (A, Figure 6-5) on camlock should be between the two indicator arrows (B) when tight, as shown in Figure 6-5.
 - If index mark (A) is not between the two arrows, i.e. the cam turns *beyond* the indicator arrows, then remove chuck and turn camlock stud IN one full turn.
 - If a camlock will not engage, remove chuck and turn camlock stud OUT one full turn.
6. Make sure chuck is secure on spindle with camlocks correctly engaged.

NOTE: Be aware of speed limitations when using faceplates; 1000 RPM maximum for 10" faceplates, 770 RPM maximum for 12" faceplates.

Do not interchange chucks or faceplates between lathes without checking for correct cam locking beforehand.

6.6 Break-in period

Do not run lathe above 560 RPM for first six hours of operation, to allow gears and bearings to adapt and run smoothly.

7.0 Lubrication

CAUTION Lathe must be serviced at all lubrication points and all reservoirs filled to operating level before lathe is placed into service. Failure to comply may cause serious damage to lathe mechanisms.

The JET lathe is shipped with appropriate oil in the reservoirs of headstock, gearbox and apron. Coolant is not included.

Use clean lubricants and check levels often, including before each working shift. To ensure proper lubrication, oil levels should not be less than the center of the oil sight glass. Try not to overfill, as this may cause leakage.

Unless specified otherwise, the lubrication points require a non-detergent, ISO 68, SAE 20W oil. The recommended brand for this lathe is Mobil DTE® Oil Heavy Medium or equivalent.

A quick-reference lubrication chart is provided in sect. 12.0.

1. **Chuck** - Lubricate chuck daily with SAE 20W oil through ball oiler (A, Figure 7-1).

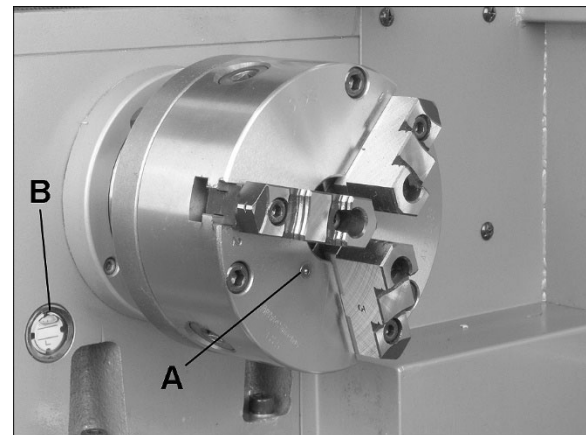


Figure 7-1

2. **Headstock** - Oil must be up to indicator mark in oil sight glass (B, Figure 7-1). Top off with SAE 20W oil. Fill by unscrewing plug (C, Figure 7-2) atop headstock. To drain headstock, remove drain plug (D, Figure 7-3). Drain oil completely and clean out all metal shavings, then rinse the casting case with kerosene. Refill after first month of operation, then change headstock oil every two months.

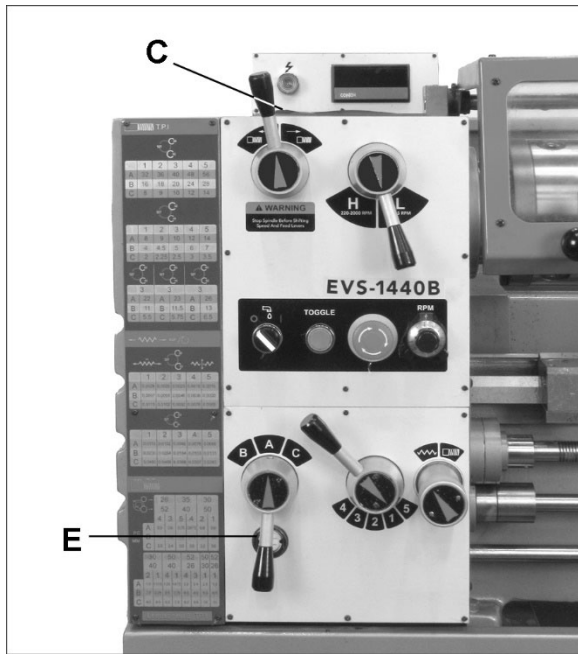


Figure 7-2

3. **External Gears** – Coat all gears (Figure 7-3) with a heavy, non-slinging grease.

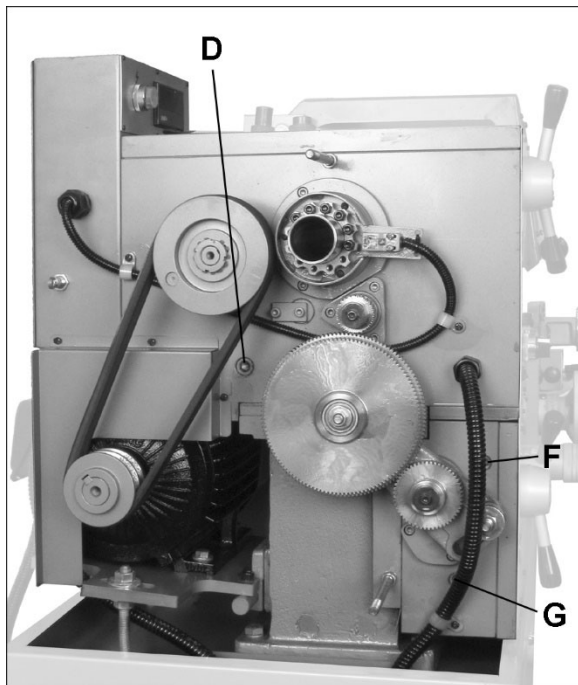


Figure 7-3

4. **Gearbox** – Oil must be up to indicator mark in oil sight glass (E, Figure 7-2). Top off with SAE 20W oil. To add oil to the gearbox, remove end cover and unscrew oil plug (F, Figure 7-3). To drain, remove drain plug (G, Figure 7-3). Drain oil completely and refill after first three months of operation. Then change gearbox oil every six months.
5. **Apron** – Oil must be between indicator marks in oil sight glass (H, Figure 7-4). Top off with SAE 20W oil. Unscrew oil cap (J, Figure 7-4) to fill. To drain, remove drain plug on underside of

apron. Drain oil completely and refill after first three months of operation. Then, change oil in the apron annually.

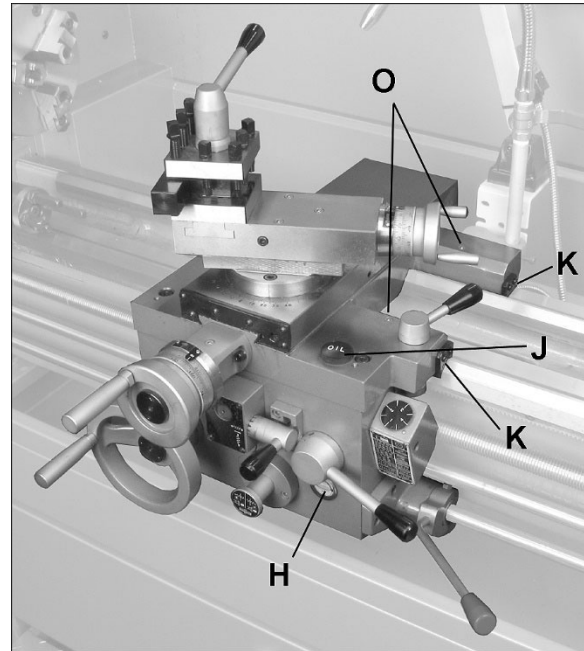


Figure 7-4 (cutting tool not provided)

6. **Saddle** – Daily lubricate four ball oilers (O, Figure 7-4 and 7-5).
The anti-dust wipers on both ends of saddle (K, Figure 7-4) should be cleaned weekly with kerosene. If a wiper becomes damaged, replace it.
7. **Cross Slide** – Daily lubricate one ball oiler on handwheel housing (L, Figure 7-5) and three ball oilers on platform (M, Figure 7-5).

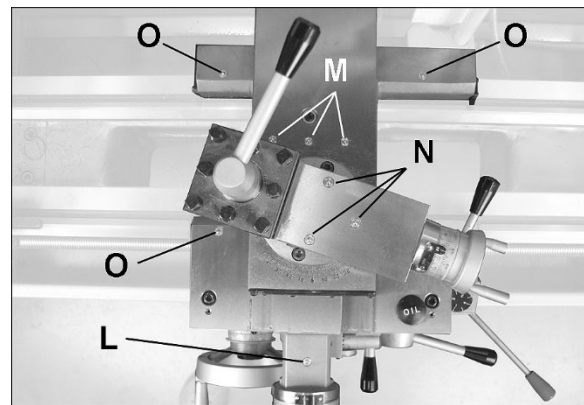


Figure 7-5

8. **Top Slide** – Daily lubricate three ball oilers (N, Figure 7-5) on platform.
9. **Tool Post** – Regularly clean dirt and coolant around the tool post to maintain its re-positioning accuracy. Apply a light coat of oil to surfaces.
10. **Tailstock** – Daily lubricate two ball oilers (P, Figure 7-6) on top of tailstock.

11. **Leadscrew** – Lubricate ball oiler (R, Figure 7-6) once daily.

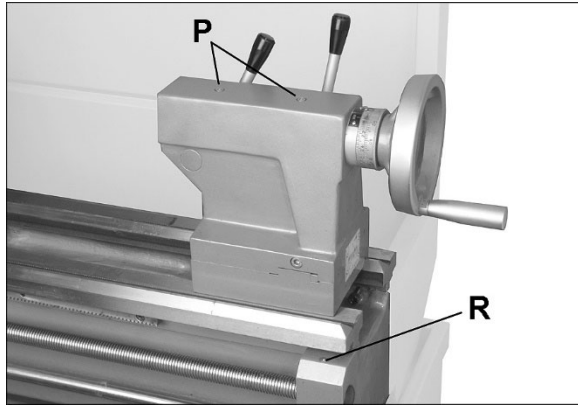


Figure 7-6

7.1 Coolant preparation

CAUTION Follow local regulations and/or coolant manufacturer's recommendations for use, care and disposal.

1. Remove access cover at rear of stand near tailstock end, and pull out coolant tank. See Figure 7-7.
2. Pour approximately 9 liters (2.38 gal.) of coolant mix into reservoir.
3. After machine has been connected to power, turn on coolant pump and check to see that coolant is cycling properly. Flow is controlled by the tap at the base of the nozzle.
4. Replace coolant assembly into its chamber, and reinstall access cover.

To change coolant, pull out coolant tank and dump dirty coolant. Clean the tank of any chips or residue. Refill with proper amount of new coolant.

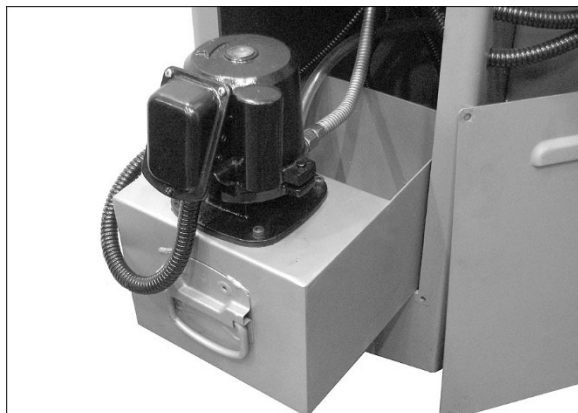


Figure7-7

8.0 Electrical connections

WARNING Electrical connections must be made by a qualified electrician in compliance with all relevant codes. This machine must be properly grounded while in use to help protect the operator from electrical shock and possible fatal injury.

The lathe is rated for **230 volt, 3-phase incoming power**. Confirm that power available at the lathe's location is the same rating as the lathe.

IMPORTANT: The lathe must be wired properly and phased correctly. The spindle should rotate counterclockwise (as viewed from tailstock end) while the feed rod rotates clockwise (as viewed from tailstock end). If the phasing needs correction, disconnect lathe from power source and switch any two of the three power leads (not the green ground wire).

The inverter will accept 3-phase or single-phase input. If wiring for single phase input, connect at R and T, as shown in the wiring diagram in sect. 16.0.

Make sure lathe is properly grounded.

Chuck should rotate counterclockwise, as viewed from tailstock, when spindle direction control lever (see O, Figure 9-2) is in down position. If rotation is opposite, disconnect power and switch any 2 of the power supply wires to the junction box.

9.0 Controls

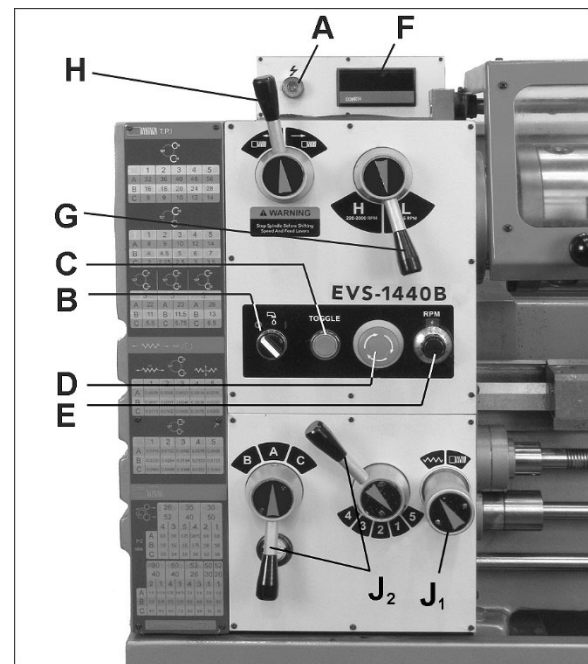


Figure 9-1

1. **Control Panel:** Located on front of headstock.

Power Indicator Light (A, Figure 9-1). Illuminates whenever lathe is receiving electrical current.

Coolant On-Off Switch (B, Figure 9-1). Activates coolant pump.

Jog/Toggle Button (C, Figure 9-1). Quickly press and release to briefly rotate spindle.

Emergency Stop Button (D, Figure 9-1). Shuts down all machine functions. NOTE: Lathe will still have power. Twist button clockwise to reset.

Variable Speed Dial (E, Figure 9-1). Adjust speed based upon range selected. Dial may be turned while spindle is rotating. Speed is displayed on LED screen (F).

2. **Power Switch:** Located at rear of left stand. "O" is off, "I" is on. The switch has a lock-out hole which will accept a padlock (not provided) to prevent unauthorized use.

3. **Inverter:** Located at rear of cabinet toward headstock side. Inverter enclosure can be locked with the provided keys.

IMPORTANT: Do not attempt to adjust settings on inverter. If you suspect a problem with the inverter, contact JPW Technical Support for instructions.

4. **Speed Range Selector (G, Figure 9-1):** Select high or low range.

CAUTION Do not move speed range selector (G) while spindle is turning. Failure to comply may damage lathe.

5. **Feed Direction Lever (H, Figure 9-1):** Select direction of feed. Center position is neutral.

CAUTION Do not move feed direction lever (H) while spindle is turning. Failure to comply may damage lathe.

6. **Lead and Feed Selector Levers (J₁/J₂, Figure 9-1):** Used conjunctively to set up for threading or feeding, according to adjoining chart on front of end cover. This chart is also reproduced in sect. 13.0.

7. **Carriage Lock (K, Figure 9-2):** Turn clockwise to lock, counterclockwise to unlock.

CAUTION Carriage lock must be released before engaging powerfeed. Failure to comply may cause machine damage.

8. **Carriage Handwheel (L, Figure 9-2):** Rotate to manually move carriage assembly along bedways. A scale is mounted to the ring, graduated in 0.005 inch increments, and can be calibrated by rotating the ring as needed.

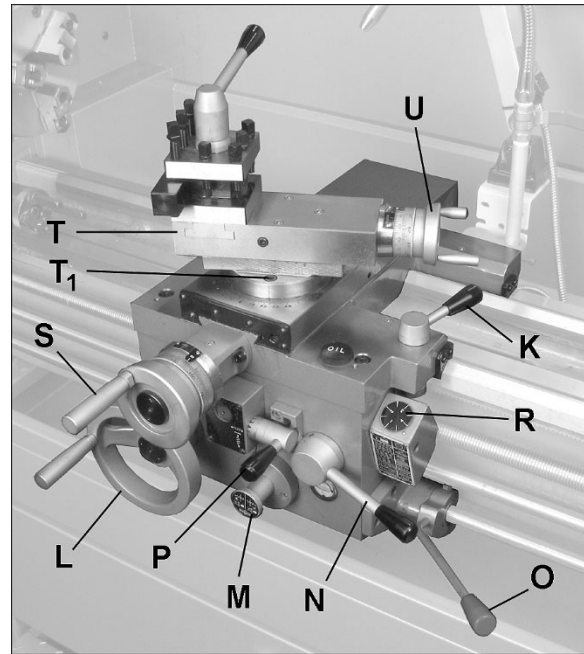


Figure 9-2 (cutting tool not provided)

9. **Feed Direction Knob (M, Figure 9-2):** Push in for left-to-right motion; pull out for right-to-left motion.

10. **Half Nut Lever (N, Figure 9-2):** Engages leadscrew for threading operations – down to engage, up to disengage.

11. **Spindle Direction Control Lever (O, Figure 9-2):** Move lever to the right so that its tab clears the notch, then *down* for forward spindle rotation, or *up* for reverse spindle rotation. Allow spindle to come to a stop before changing directions. Position lever in neutral position (tab in notch) before shutting off lathe.

12. **Power Feed Engagement Lever (P, Figure 9-2):** Engages powered operation. Push to one of three positions: LEFT and UP for cross feed operation (cross slide powered movement); RIGHT and DOWN for longitudinal operation (carriage powered movement); MIDDLE position allows engagement of half nut for threading.

13. **Threading Dial (R, Figure 9-2):** Indicates point on leadscrew where half nut can be re-engaged to continue inch threading.

14. **Cross Slide Handwheel (S, Figure 9-2):** Clockwise rotation moves cross slide toward rear of machine. The accompanying scale is graduated in increments of 0.001 inch (0.0254 mm), and can be calibrated by rotating the ring as needed.

15. **Top Slide:** Located atop cross slide (T, Figure 9-2); can be rotated 360° after loosening two socket head screws (T₁) in the circular base. Calibrations in degrees at the base will assist angle placement. Tighten screws (T₁) before operating.

16. **Top Slide Handwheel** (U, Figure 9-2): Rotate to position rest. The accompanying scale on collar is graduated in 0.001 inch increments.
17. **Tailstock Quill Lock** (V, Figure 9-3): Push clockwise to lock sleeve; counterclockwise to unlock.
18. **Tailstock Quill Traverse Handwheel** (W, Figure 9-3): Rotate clockwise to advance quill; counterclockwise to retract. Fully retract quill to eject a center or drill chuck.
19. **Tailstock Clamping Lever** (X, Figure 9-3): Push up to lock; down to unlock.

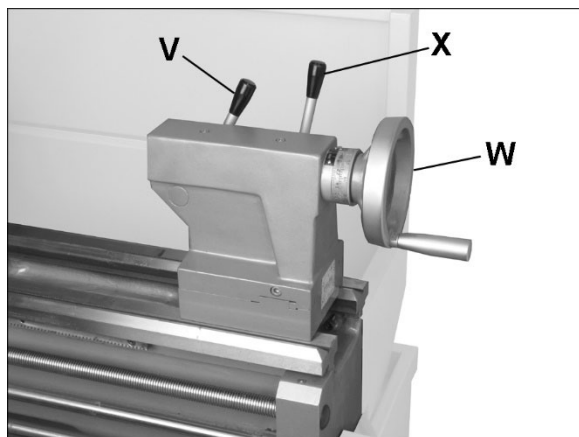


Figure 9-3

20. **Foot Brake** (see Figure 4-1): For emergency shutdown of all lathe functions. The connecting rod mechanism is in the bed stand, and activates a brake strap at the main motor. **(Caution: Lathe still has power.)**

NOTE: The foot brake is not intended for normal stopping of the lathe. Overuse can result in premature wear of brake parts.

21. **Chuck Key Bracket:** The chuck key must be placed within the bracket (Figure 9-4) for the lathe to operate. A sensor in the bracket will deactivate spindle if key is not present – this prevents key from accidentally being left in the chuck.

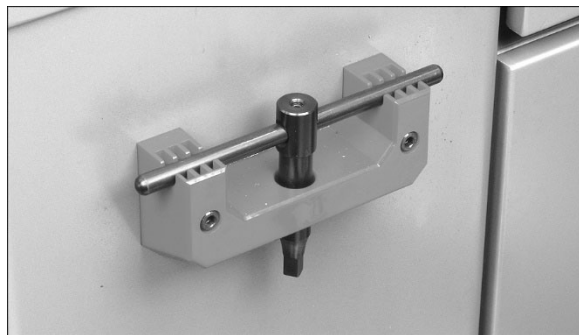


Figure 9-4

10.0 Operation

The operator should consult shop manuals such as “Machinery’s Handbook” for cutting speeds and feeds appropriate to specific workpieces. Correct feed depends upon material to be cut, cutting operation, tool type, chucking rigidity, depth of cut, and desired surface quality.

IMPORTANT: Allow a break-in period for the new lathe so that gears and bearings can adapt; do not run the lathe above 560 RPM for the first six hours of operation.

CAUTION The following points must be observed when operating the lathe:

- Never turn any handles or levers when spindle is at high speed.
- Change spindle speed range only after spindle stops.
- Change feed rate only when spindle is at low speed or is stopped.
- Never exceed maximum speed limitation of the work holding device.
- Before starting spindle, check that each handle or lever is at correct position to ensure normal engagement of gears. The spindle direction control lever (O, Figure 9-2) should be at neutral position.
- If foot brake becomes ineffective, turn off machine and adjust brake immediately.
- When operating spindle direction control lever, always turn it to correct position; never use “pre-position” for cutting at a reduced speed.
- Jaw teeth and scroll must be fully engaged, to prevent the jaws from breaking and being thrown from chuck. See Figure 10-1.

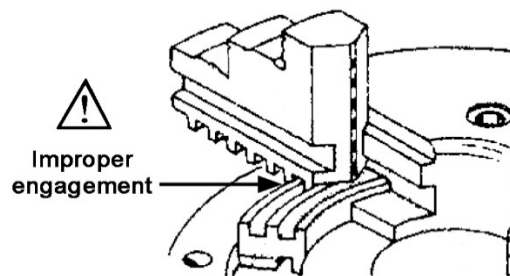


Figure 10-1

- Avoid long workpiece extensions, as parts may bend or fly off. See Figure 10-2. Use rests or the tailstock for support.

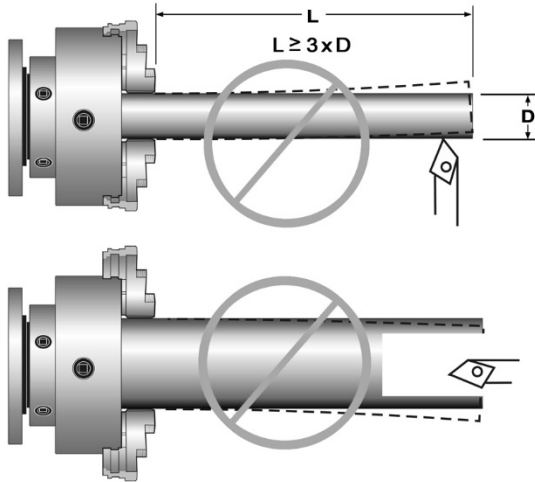


Figure 10-2

- Avoid short clamping contact (A, Figure 10-3) or clamping on a minor part diameter (B, Figure 10-3). Face-locate the workpiece for added support.

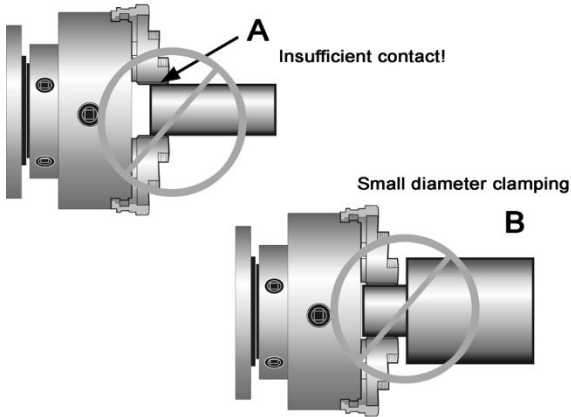


Figure 10-3

10.1 Feed and Thread Selection

To obtain various feed settings and thread pitches, the knob and two levers (J, Figure 10-4) are used conjunctively. Position the levers according to the Feed and Thread Chart on front of end cover. An identical chart is shown in *sect. 13.0*.

TIP: When selecting feed/speed correlations, remember the general principal that high speeds complement fine feeding, and low speeds are better for coarse feeding.

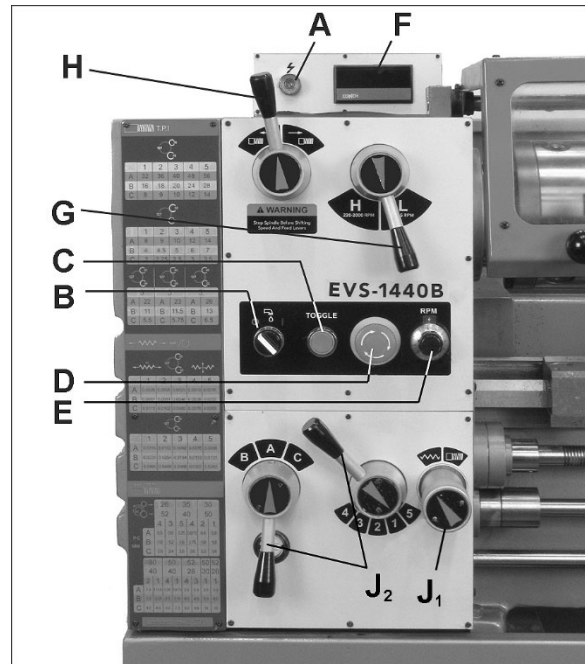


Figure 10-4

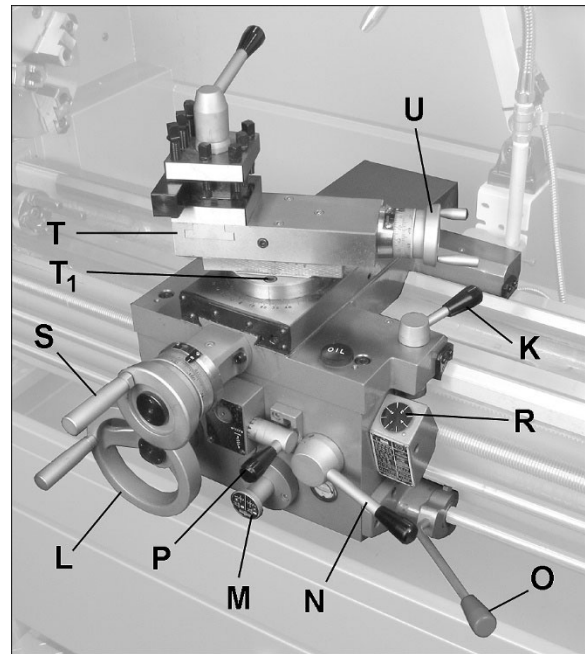


Figure 10-5 (cutting tool not provided)

10.2 Thread cutting

Threading is performed in multiple passes, with increasing depths in succeeding cuts. It is recommended that test cuts be made on scrap material and the results checked before proceeding with regular material.

1. Move feed direction lever (H, Figure 10-4) for right-hand or left-hand threads.
2. Set spindle to low speed range (G/E, Figure 10-4). Use lowest speed possible when threading.
3. Turn knob (J₁, Figure 10-4) clockwise to disengage feed rod.

4. Select desired thread using thread pitch levers (J₂, Figure 10-4), referring to charts on end cover.
 5. Set feed direction lever (P, Figure 10-5) to correct position (neutral).
 6. Engage half nut (N, Figure 10-5). The half nut lever (N) and threading dial (R) are used to thread in the conventional manner, based upon the leadscrew, which is in Imperial units (8 TPI). The thread dial chart (Figure 10-6) specifies at which points a thread can be entered using the threading dial.
- NOTE:** The half nut must be engaged during the entire threading process when doing metric, diametral, and modular threading.
7. When tool reaches end of cut, disengage and back out tool to clear workpiece.
 8. Reverse direction to allow cutting tool to return to starting point.
 9. Repeat process until desired result is obtained.

| | |
|---|------------------------------------|
| | |
| 4, 8, 12, 16, 20, 24 28, 32, 36, 40, 44 48, 56, 64, 72, 96 | ANY POSITION |
| 2, 6, 10, 14, 18 22, 24, 26, 46 52, 60, 88, 92 | EVERY LINE POSITION |
| 3, 5, 7, 9 11, 13, 15 19, 23, 27 | NUMBERED POSITION 1, 2, 3, 4 |
| $2\frac{1}{2}$, $3\frac{1}{2}$, $4\frac{1}{2}$, $5\frac{1}{2}$ $6\frac{1}{2}$, $11\frac{1}{2}$ | POSITION 1, 3 OR 2, 4 |
| $2\frac{1}{4}$, $4\frac{3}{4}$, $5\frac{3}{4}$ | POSITION 1 ONLY |
| Leadscrew 8 TPI | |

Figure 10-6

11.0 Adjustments

CAUTION Lathe adjustments, especially those involving alignment of bearings, spindle, leadscrew, etc., should only be performed by qualified personnel, as improper alignments can damage the machine and/or create a safety hazard.

WARNING Press emergency stop button and turn off main switch before making adjustments.

11.1 Chuck jaw reversal

The three jaws on the scroll chuck are reversible, to hold stock with larger diameters. See Figure 11-1.

Loosen two screws with the provided hex key, remove jaw, and rotate it 180-degrees. Reinstall jaw, and tighten each screw incrementally until fully tightened.

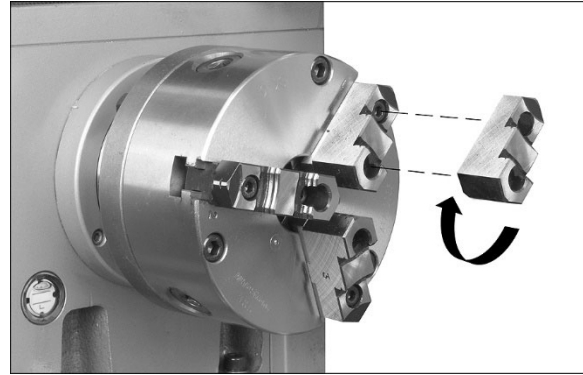


Figure 11-1

11.2 Gib/drag adjustments

After a period of time, some moving components may need adjustment for play (or “backlash”) due to wear. Do not overtighten gib screws as this can hasten wear to components.

11.2.1 Saddle gib adjustment

1. Remove splash guard.
2. Loosen three hex nuts (A, Figure 11-2) at rear of saddle.
3. Turn each of the three set screws (B, Figure 11-2) equally with a hex wrench until a slight resistance is felt. Do not overtighten, which can cause premature wear of parts.
4. Move carriage with the hand wheel and determine if drag is to your preference. Readjust the set screws as necessary to achieve desired drag.
5. Hold each set screw firmly with hex wrench to prevent it from turning, and tighten hex nut to secure setting.

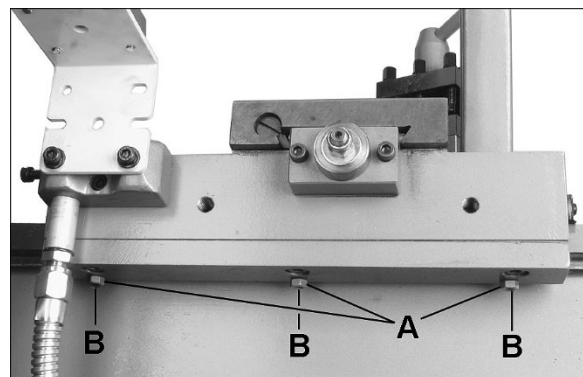


Figure 11-2

11.2.2 Cross slide gib adjustment

Gib screws are located at front and rear of cross slide opposite to one another (C, Figure 11-3).

1. To adjust drag, loosen rear gib screw one turn, and tighten front gib screw a quarter turn. Rotate handwheel to check play. If still loose, tighten front gib screw a bit more.
2. Repeat as needed until slide moves freely without play.
3. When cross slide is properly adjusted, snug rear gib screw. Do not overtighten; this will cause premature wear on gib and mating parts.

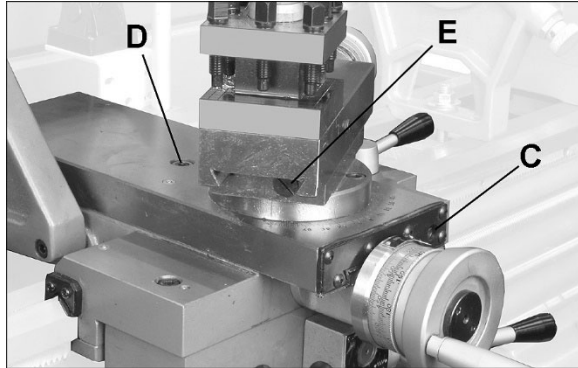


Figure 11-3

11.2.3 Cross slide nut adjustment

The cross slide moves via a lead screw which drives a nut. This can also be adjusted if backlash develops. Turn cross slide handwheel left and right; if there is a delay before any cross slide movement, the nut needs adjusting. Tighten or loosen screw (D, Figure 11-3) and move cross slide to verify setting.

11.2.4 Top slide gib adjustment

Gib screws are located at front and rear of top slide (E, Figure 11-3). To adjust, use same method as for cross slide gib above.

11.3 Tailstock adjustments

The tailstock can be offset to cut shallow tapers up to 5° angle. See Figure 1-4.

1. Release clamping lever (F).
2. Alternately loosen and tighten front and rear screws (G) to move tailstock laterally across base. The scale (H) on end of tailstock indicates amount of offset, and helps when re-centering.
3. Tighten clamp lever (F).

If the clamping force needs to be adjusted, remove tailstock from bed and turn it over. Adjust the hex nut as needed.

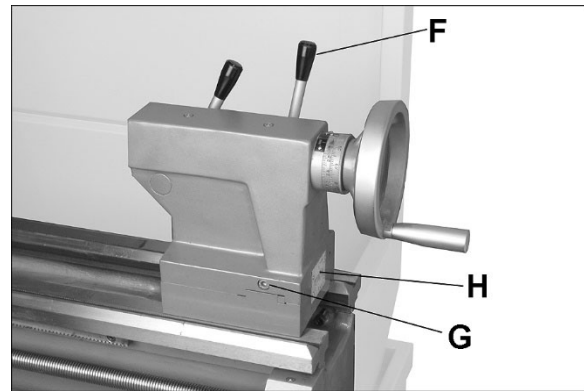


Figure 11-4

11.4 Gap section

To remove gap section (Figure 11-5):

1. Remove four socket head bolts (J) with hex wrench.
2. Remove two tapered alignment pins (K) by threading an M6 screw down into it, until the pin is loosened enough to be pulled out.
3. Remove gap section.

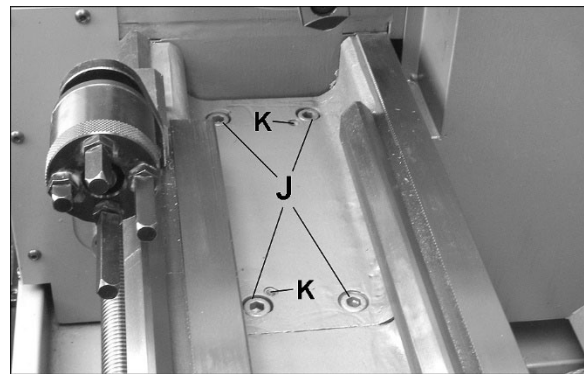


Figure 11-5

To reinstall gap section:

1. Thoroughly clean bottom and ends of gap section.
2. Set gap section in place and align the ends.
3. Insert tapered pins (L) into their holes through gap and into lathe bed.
4. Re-insert the six bolts (A,B) and tighten alternately until all are snug. Make sure gap remains aligned with ways while tightening screws.

11.5 Aligning tailstock to headstock

1. Headstock and tailstock have been aligned by the manufacturer and should not require attention. If future adjustment should ever be needed, proceed as follows. (Make sure that twist in the lathe bed is not contributing to the problem, refer to sect. 6.3.)
2. Fit a 12" ground, center-drilled, steel bar between centers of headstock and tailstock (Figure 11-6).
3. Fit a dial indicator to the top slide and traverse the center line of the bar. If it indicates a taper, adjustment is needed.
4. Align tailstock using the off-set screws at front and back until tailstock is aligned.

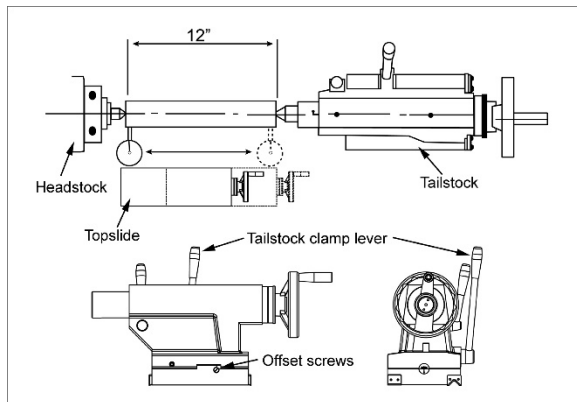


Figure 11-6

11.6 Shear pin replacement

The lead screw and feed shaft are equipped with shear pins, which are designed to break in order to protect the drive system against overload. A broken shear pin must be replaced. Replacements are provided in the toolbox.

Knock out the broken pin; line up the holes and insert new pin.

11.7 Steady rest adjustment

Always lubricate the fingers with grease before using the steady rest. The point at which the fingers contact the workpiece require continuous lubrication to prevent premature wear.

To set the steady rest (see Figure 11-7):

1. Loosen hex nut (L) to slide steady rest along the ways to desired position.
2. Loosen socket head screw (M) until it can be pivoted out of its slot.
3. Loosen three hex nuts (N) and back off set screws to allow finger movement.
4. Back off fingers (O) using knurled handles (P).
5. Pivot the collar on its hinge and position steady rest around workpiece.

6. Firmly tighten hex nut (L).
7. Set fingers snug to workpiece. Fingers should be snug but not overly tight.
8. Loosen three hex nuts (P₁), and tighten set screws (P₂) to secure finger setting.

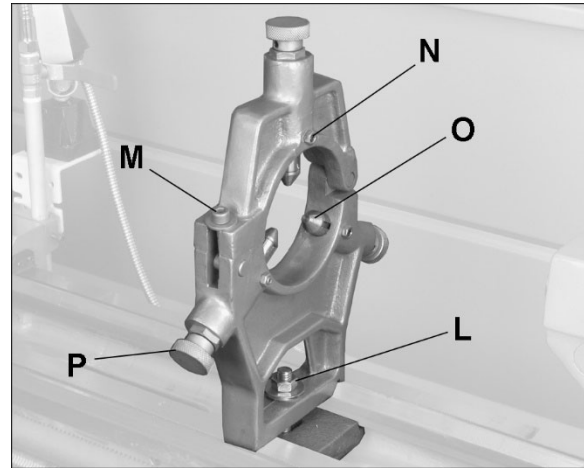


Figure 11-7

11.8 Follow rest adjustment

The follow rest mounts to the saddle with two socket head cap bolts. The follow rest should be mounted so that locking setscrews/nuts point away from chuck.

The sliding fingers are set similar to those on the steady rest – free of play, but not binding. The place of the third finger is taken by the cutting tool.

Always lubricate the fingers sufficiently with grease before operating. The point at which the fingers contact the workpiece require continuous lubrication to prevent premature wear.

11.9 Belt tension

Remove end cover. Loosen bottom nut and turn top nut (R, Figure 11-8) to push motor downward to increase tension on belt. Retighten bottom nut.

Light finger pressure midway between motor and headstock pulleys should cause approximately 3/4-inch movement, when belt is properly tensioned.

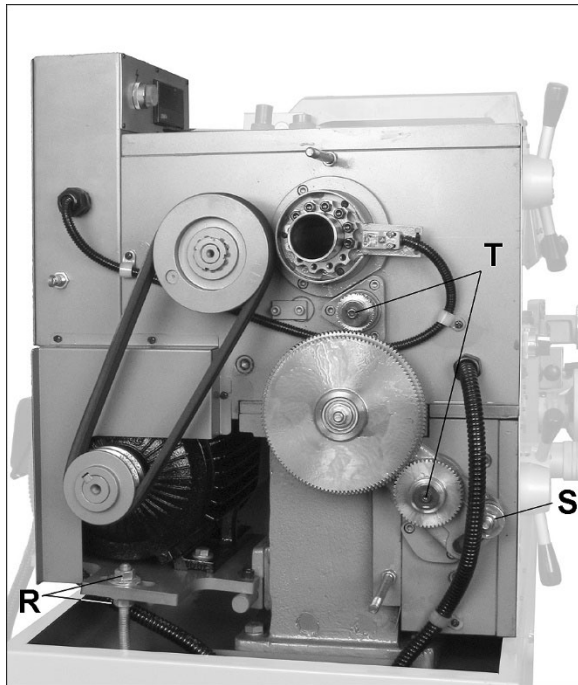


Figure 11-8

11.10 Gear change

Note: The 120/127, 26, and 52 tooth gears are installed by the manufacturer in the end gear compartment. This combination will cover most inch feeds and threads under normal circumstances. The additional gears found in the toolbox are used for some metric threads and feeds.

To replace gears:

1. Turn off power at main switch.
2. Remove end cover.
3. Loosen hex nut (S, Figure 11-8) and move quadrant out of the way.
4. Loosen socket head cap screw (T) and remove gear(s). Select replacement gears to match data on feed and thread chart. Thoroughly clean new gears before installing.
5. Move quadrant so that large gear meshes with the smaller gears, and tighten nut (S) to secure in place. Note: Make sure there is backlash of 0.002" – 0.003" between gears. Setting the gears too tight will cause excessive noise and wear.
6. Install end cover.

12.0 Lubrication schedule

Regularly scheduled maintenance is crucial to ensure a long service life for your machine. The schedule below shows lubrication points and coolant replacement information for the EVS-1440B Lathe. **Push stop button and power off before lubricating.** Follow local regulations for disposal of used coolant/lubricants. Minimize direct skin contact with lubricants and coolants, and wear eye protection when pouring coolant in case of splash.

Mobile DTE® Oil Heavy Medium is recommended for the SAE-20W machine oil. Mobilith® AW2 is recommended for the lithium tube grease.


If the brand of oil is ever changed, it is recommended that you flush and clean the reservoir first to prevent any compatibility issues.


| Element | Action | Lubricant | Frequency |
|--------------------------------|--|---|--|
| Chuck | Grease jaws and scroll | #2 lithium tube grease | As needed |
| | Ball oiler | SAE-20W machine oil | daily |
| Spindle, cam locks, chuck body | light coat of oil | SAE-20W machine oil | As needed |
| All exposed metal surfaces | light coat of oil | SAE-20W machine oil | Frequently |
| Oil sight glasses | Inspect, top off as needed | SAE-20W machine oil | Frequently; also before each working shift |
| Headstock | Drain, rinse, clean out metal shavings, and fill | SAE-20W machine oil | - after first month - then every 2 months |
| End gears | Clean and re-grease | Heavy gear grease | As needed |
| Gearbox | Drain and fill | SAE-20W machine oil | - after first 3 months, - then every 6 months |
| Apron | Drain and fill | SAE-20W machine oil | - after first 3 months, - then once a year |
| Saddle | Fill at (4) ball oilers | SAE-20W machine oil | daily |
| Saddle wipers | Clean with kerosene | | Weekly |
| Leadscrew | Fill at (1) ball oiler | SAE-20W machine oil | daily |
| Cross slide | Fill at (4) ball oilers | SAE-20W machine oil | daily |
| Top slide | Fill at (3) ball oilers | SAE-20W machine oil | daily |
| Tailstock | Fill at (2) ball oilers | SAE-20W machine oil | daily |
| Coolant reservoir * | Inspect and top off | Coolant of choice, approx. 9L (2.38 gal.) | as needed |
| | Drain and refill | | (follow coolant manufacturer's directions) |
| Chip tray | Clean; clear drain filters | | periodically |
| Steady Rest | Lubricate finger shafts and contact points | Lead-based grease | before each use |
| Follow Rest | Lubricate finger shafts and contact points | Lead-based grease | before each use |

Table 5


13.0 Thread and feed chart

Table 9




 T.P.I





| | 1 | 2 | 3 | 4 | 5 |
|----------|----|----|----|----|----|
| A | 32 | 36 | 40 | 48 | 56 |
| B | 16 | 18 | 20 | 24 | 28 |
| C | 8 | 9 | 10 | 12 | 14 |



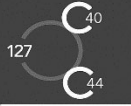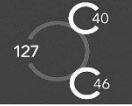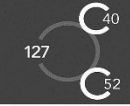

| | 1 | 2 | 3 | 4 | 5 |
|----------|---|------|-----|----|-----|
| A | 8 | 9 | 10 | 12 | 14 |
| B | 4 | 4.5 | 5 | 6 | 7 |
| C | 2 | 2.25 | 2.5 | 3 | 3.5 |






| | 3 | 3 | 3 |
|----------|-----|---------------|--------------|
| A | 22 | A 23 | A 26 |
| B | 11 | B 11.5 | B 13 |
| C | 5.5 | C 5.75 | C 6.5 |


 inch / 

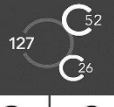



| | 1 | 2 | 3 | 4 | 5 |
|----------|--------|--------|--------|--------|--------|
| A | 0.0028 | 0.0025 | 0.0023 | 0.0019 | 0.0016 |
| B | 0.0057 | 0.0051 | 0.0046 | 0.0038 | 0.0032 |
| C | 0.0115 | 0.0102 | 0.0092 | 0.0076 | 0.0065 |



| | 1 | 2 | 3 | 4 | 5 |
|----------|--------|--------|--------|--------|--------|
| A | 0.0115 | 0.0102 | 0.0092 | 0.0076 | 0.0065 |
| B | 0.0230 | 0.0204 | 0.0184 | 0.0153 | 0.0131 |
| C | 0.0460 | 0.0409 | 0.0368 | 0.0307 | 0.0263 |

mm 

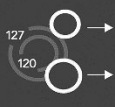

| | 26 | 35 | 30 |
|----------|----------|----------|----------|
| | 52 | 40 | 50 |
| | 4 | 3 | 5 |
| | 4 | 2 | 1 |
| A | 0.5 | 0.6 | 0.75 |
| B | 1.0 | 1.2 | 1.5 |
| C | 2.0 | 2.4 | 3.0 |

PC
MM

| | 30 | 50 | 60 | 50 | 60 |
|----------|----------|----------|----------|----------|----------|
| | 40 | 40 | 30 | 30 | 30 |
| | 2 | 1 | 4 | 1 | 4 |
| | 4 | 3 | 1 | 4 | 1 |
| A | 1.0 | 1.125 | 1.25 | 1.875 | 2.0 |
| B | 2.0 | 2.25 | 2.5 | 3.75 | 4.0 |
| C | 4.0 | 4.5 | 5.0 | 7.5 | 8.0 |

Leadscrew 8 TPI

14.0 Recommended cutting speeds

Table 4


| Workpiece material | | Speed (SFM) | Feed (LPR) |
|--------------------|----------------------|------------------|------------------|
| Aluminum | 2021 to 6061 | 500 | 0.002 |
| Brass | | 75 | 0.001 |
| Bronze | | 70 | 0.001 |
| Cast Iron | Gray | 35 to 125 | 0.0015 to 0.004 |
| | Ductile | 15 to 125 | 0.001 to 0.004 |
| | Malleable | 35 to 170 | 0.0015 to 0.003 |
| Copper | 101 to 757 | 85 to 90 | 0.002 |
| | 834 to 978 | 340 | 0.003 |
| Magnesium | AZ,AM,EZ,ZE,HK types | 500 | 0.002 |
| Nickel | Nickel 200 to 230 | 85 | 0.002 |
| | Monel | 15 to 60 | 0.001 to 0.0015 |
| | Inconel, Waspaloy | 15 | 0.002 |
| | Hastelloy | 10 to 15 | 0.002 |
| Plastic | TFE, CTFE | 250 | 0.002 |
| | Nylon | 350 | 0.002 to 0.003 |
| | Phenolic | 350 | 0.003 |
| Stainless Steel | 201 to 385 | 65 to 85 | 0.001 to 0.002 |
| | 405 to 446 | 90 | 0.0011 |
| | 15-5 PH, 16-6 PH | 30 to 60 | 0.0006 to 0.0012 |
| Steel | 1005 to 1029 | 80 to 140 | 0.001 to 0.002 |
| | 1030 to 1055 | 35 to 115 | 0.0009 to 0.0015 |
| | 1060 to 1095 | 30 to 80 | 0.0007 to 0.001 |
| | 10L45 to 10L50 | 40 to 140 | 0.0009 to 0.0015 |
| | 12L13 to 12L15 | 225 to 280 | 0.003 to 0.0035 |
| | 41L30 to 41L50 | 20 to 110 | 0.0007 to 0.0015 |
| | 4140 to 4150 | 20 to 115 | 0.0007 to 0.0015 |
| | 4140 (35 HRC) | 70 | 0.001 |
| | 8617 to 8622 | 40 to 120 | 0.001 to 0.0016 |
| | M-1 to M-6 | 60 | 0.0013 |
| | H-10 to H-19 | 20 to 80 | 0.007 to 0.0011 |
| | D-2 to D-7 | 45 to 60 | 0.001 |
| | A-2 to A-9, 01 to 07 | 45 to 60 | 0.001 |
| | W-1, W-2 | 110 | 0.0015 |
| M-50, 52100 | 20 to 85 | 0.0007 to 0.0015 | |
| Titanium | TI-6Al-6V | 45 | 0.001 |

15.0 Replacement Parts


Replacement parts are listed on the following pages. To order parts or reach our service department, call 1-800-274-6848 Monday through Friday, 8:00 a.m. to 5:00 p.m. CST. Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

Non-proprietary parts, such as fasteners, can be found at local hardware stores, or may be ordered from JET. Some parts are shown for reference only, and may not be available individually.


15.1.1 EVS-1440B Headstock Assembly – Exploded View I

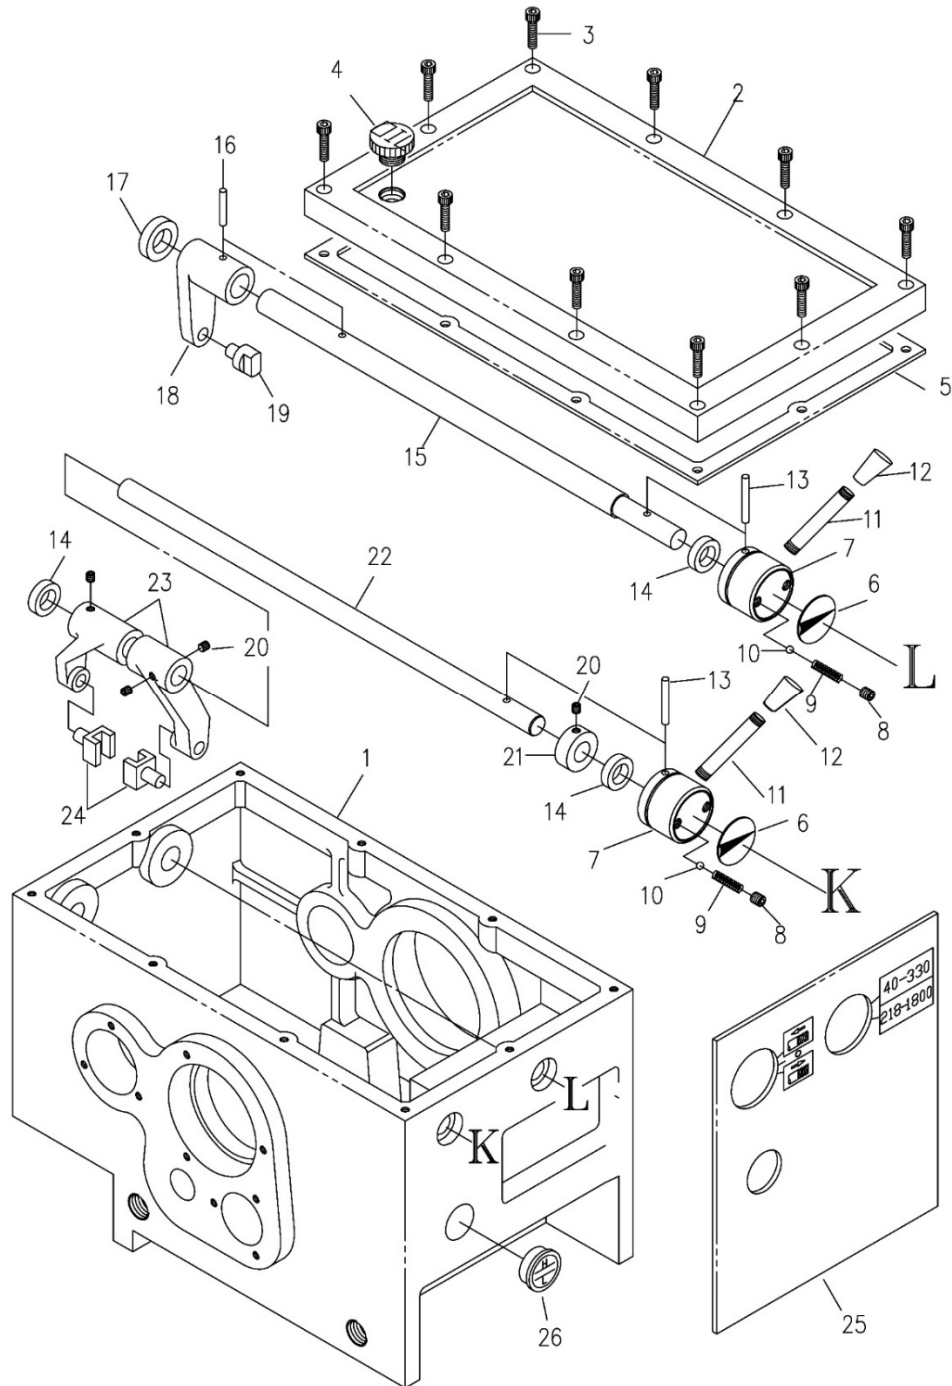

15.1.2 EVS-1440B Headstock Assembly – Exploded View II

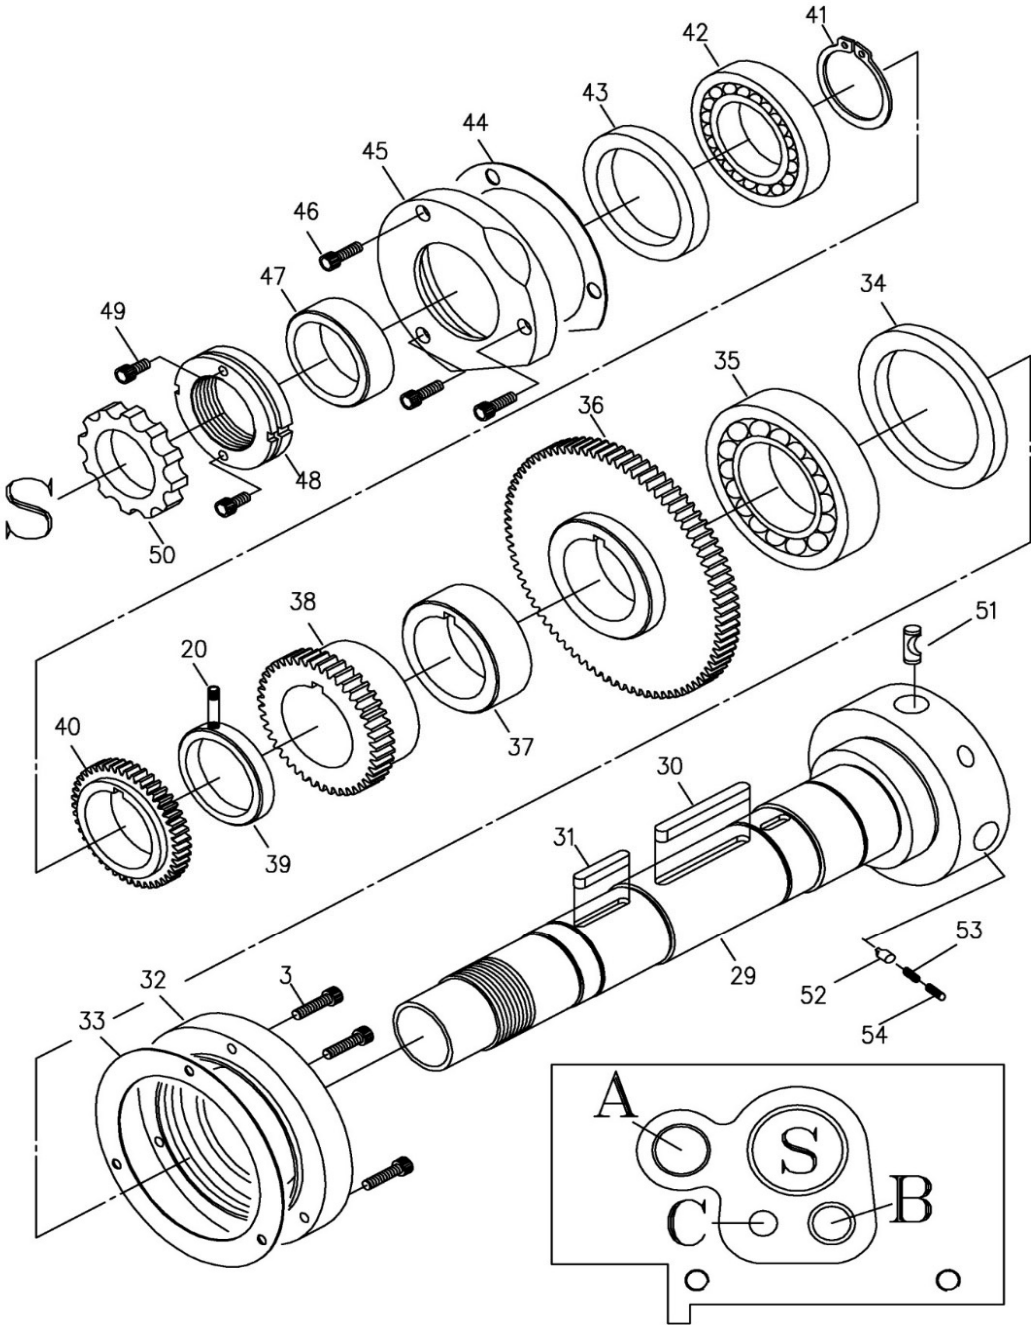

15.1.3 EVS-1440B Headstock Assembly – Exploded View III

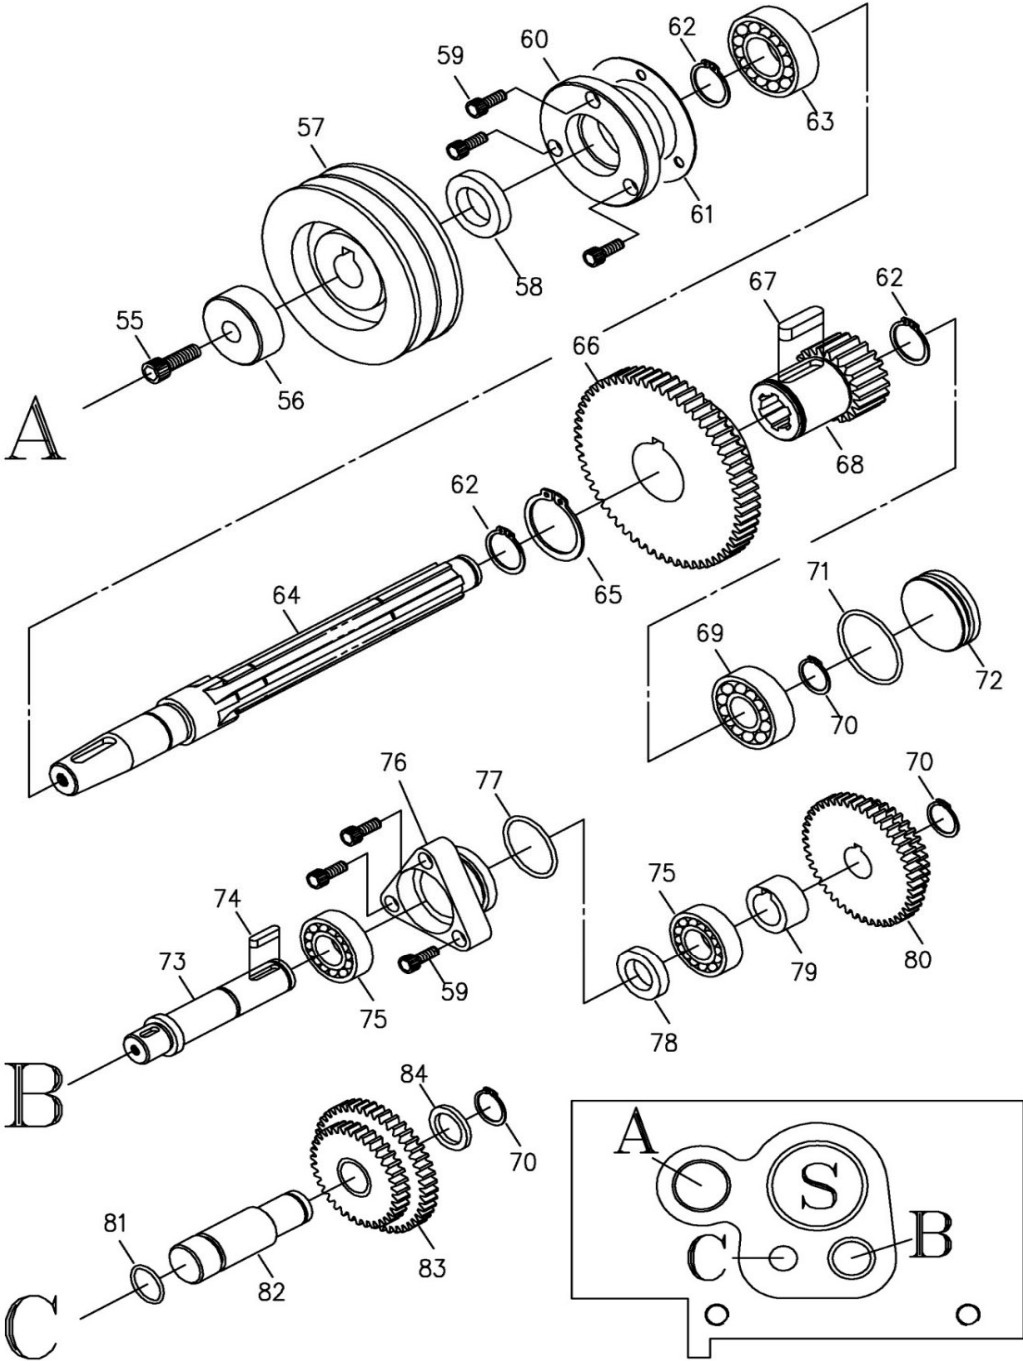


15.1.4 EVS-1440B Headstock Assembly – Parts List


| Index No | Part No | Description | Size | Qty |
|----------|---------------|-----------------------------------|--------------------------|-----|
| 1 | EVS1440B-A01 | Headstock Casting | 405Lx235Wx264H | 1 |
| 2 | EBL1236VS-A02 | Headstock Cover | 405Lx235Wx23H | 1 |
| 3 | TS-1503061 | Socket Head Cap Screw | M6x25mm | 13 |
| 4 | EBL1236VS-A04 | Plug | 3/4 in.(PVC) | 1 |
| 5 | EBL1236VS-A05 | Gasket For Headstock Cover | | 1 |
| 6 | EBL1236VS-A06 | Index Plate | | 2 |
| 7 | EBL1236VS-A07 | Handle | Ø45x35L | 2 |
| 8 | TS-1524011 | Set Screw | M8x8L | 2 |
| 9 | EBL1236VS-A09 | Spring | 1/4inx27mm | 2 |
| 10 | SB-1/4 | Steel Ball | 1/4 in. dia | 2 |
| 11 | EBL1236VS-A11 | Lever | | 2 |
| 12 | EVS1440B-A12 | Handle | Ø22xØ15x43L | 2 |
| | EVS1440B-A12A | Handle Assembly (includes #11,12) | | 2 |
| 13 | EBL1236VS-A13 | Pin | 5x40mm | 2 |
| 14 | EBL1236VS-A14 | Oil Seal | TC 16x26x7mm | 2 |
| 15 | EBL1236VS-A15 | Shaft | Ø19.5x425L (Ø16) | 1 |
| 16 | EBL1236VS-A16 | Pin | Ø5x30mm | 1 |
| 17 | EBL1236VS-A17 | Oil Seal | TC 19x32x8mm | 1 |
| 18 | EBL1236VS-A18 | Shaft Fork | PCD 62x50L | 1 |
| 19 | EBL1236VS-A19 | Shift Fork | Ø19x26.5 | 2 |
| 20 | TS-1523011 | Set Screw | M6x6L | 4 |
| 21 | EBL1236VS-A21 | Collar | | 1 |
| 22 | EBL1236VS-A22 | Shaft | Ø19.5x425L (Ø16) | 1 |
| 23 | EBL1236VS-A23 | Shift Fork | 122L 55h | 2 |
| 24 | EBL1236VS-A24 | Shift Fork | | 2 |
| 25 | EVS1440B-A25 | Headstock Plate | | 1 |
| 26 | EBL1236VS-A26 | Oil Sight | 1-1/8 in.(28mm.) | 1 |
| 29 | EBL1236VS-A29 | Main Spindle | Ø117.5x408.1L | 1 |
| 30 | EBL1236VS-A30 | Key | 8x70mm | 1 |
| 31 | EBL1236VS-A31 | Key | 7x40mm | 1 |
| 32 | EBL1236VS-A32 | Cover | Ø145xØ80.5x25W | 1 |
| 33 | EBL1236VS-A33 | Gasket | | 1 |
| 34 | EBL1236VS-A34 | Oil Seal | TC Ø80xØ105xØ10mm | 1 |
| 35 | BB-32212 | Bearing | No.32212 | 1 |
| 36 | EBL1236VS-A36 | Gear | 2M 82T | 1 |
| 37 | EBL1236VS-A37 | Collar | Ø75xØ55x26 key 8x4.5 | 1 |
| 38 | EBL1236VS-A38 | Gear | 2M 43T | 1 |
| 39 | EBL1236VS-A39 | Collar | Ø52.25xØ52x20W key 7x3.5 | 1 |
| 40 | EBL1236VS-A40 | Gear | 1.75M 45T | 1 |
| 41 | EBL1236VS-A41 | Circlip | S-50mm | 1 |
| 42 | BB-30210 | Bearing | No.30210 | 1 |
| 43 | EBL1236VS-A43 | Oil Seal | TC 65x85x12mm | 1 |
| 44 | EBL1236VS-A44 | Gasket | | 1 |
| 45 | EBL1236VS-A45 | Cover | Ø123x21W | 1 |
| 46 | TS-1503051 | Socket Head Cap Screw | M6x20mm | 3 |
| 47 | EBL1236VS-A47 | Collar | Ø64.5xØ50x20W | 1 |
| 48 | EBL1236VS-A48 | Nut | Ø75x19W | 1 |
| 49 | TS-1503031 | Socket Head Cap Screw | M6x12mm | 2 |
| 50 | EBL1236VS-A50 | Index Ring | Ø72xØ45x12 | 1 |
| 51 | EBL1236VS-A51 | Cam Lock | | 3 |
| 52 | EBL1236VS-A52 | Pin | | 3 |
| 53 | EBL1236VS-A53 | Spring | | 3 |
| 54 | EBL1236VS-A54 | Screw | | 3 |
| 55 | TS-1504051 | Socket Head Cap Screw | M8x25L | 1 |
| 56 | EBL1236VS-A56 | Washer | Ø44xØ7.9x17 | 1 |
| 57 | EBL1236VS-A57 | Pulley | Ø114.3xØ21.35x50W | 1 |
| 58 | EBL1236VS-A58 | Oil Seal | TC 25x40x8mm | 1 |
| 59 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 6 |
| 60 | EBL1236VS-A60 | Cover | Ø80x21L (Ø35) | 1 |
| 61 | EBL1236VS-A61 | Gasket | | 1 |

| Index No | Part No | Description | Size | Qty |
|----------|---------------|-------------|-----------------------|-----|
| 62 | EBL1236VS-A62 | Circlip | S-25mm | 3 |
| 63 | BB-6205 | Bearing | No.6205 | 1 |
| 64 | EBL1236VS-A64 | Shaft | Ø30x302L 21x25x5 | 1 |
| 65 | EBL1236VS-A65 | Circlip | S-38mm | 1 |
| 66 | EBL1236VS-A66 | Gear | 2M 60T | 1 |
| 67 | EBL1236VS-A67 | Key | 8x30mm | 1 |
| 68 | EBL1236VS-A68 | Gear | 2M 21T | 1 |
| 69 | BB-6204 | Bearing | No.6204 | 1 |
| 70 | EBL1236VS-A70 | Circlip | S-20mm | 3 |
| 71 | EBL1236VS-A71 | O-Ring | 42x48x3.0mm | 1 |
| 72 | EBL1236VS-A72 | Plug | Ø47x12W | 1 |
| 73 | EBL1236VS-A73 | Shaft | Ø25x109L key 5x2.5 | 1 |
| 74 | EBL1236VS-A74 | Key | 5x20mm | 1 |
| 75 | BB-6004 | Bearing | No.6004 | 2 |
| 76 | EBL1236VS-A76 | Cover | P.C.D. Ø42xØ32x32L | 1 |
| 77 | EBL1236VS-A77 | O-Ring | 34x40x3.0mm | 1 |
| 78 | EBL1236VS-A78 | Oil Seal | TC 20x32x2.5mm | 1 |
| 79 | EBL1236VS-A79 | Collar | Ø30xØ20x16W key 7x3.5 | 1 |
| 80 | EBL1236VS-A80 | Gear | 1.75M 35/45T | 1 |
| 81 | EBL1236VS-A81 | O-Ring | 20x25x2.5mm | 1 |
| 82 | EBL1236VS-A82 | Shaft | Ø25x85L | 1 |
| 83 | EBL1236VS-A83 | Gear | 1.75M 35/45T | 1 |
| 84 | EBL1236VS-A84 | Collar | Ø28xØ20x3W | 1 |


15.2.1 EVS-1440B Gearbox Assembly – Exploded View I

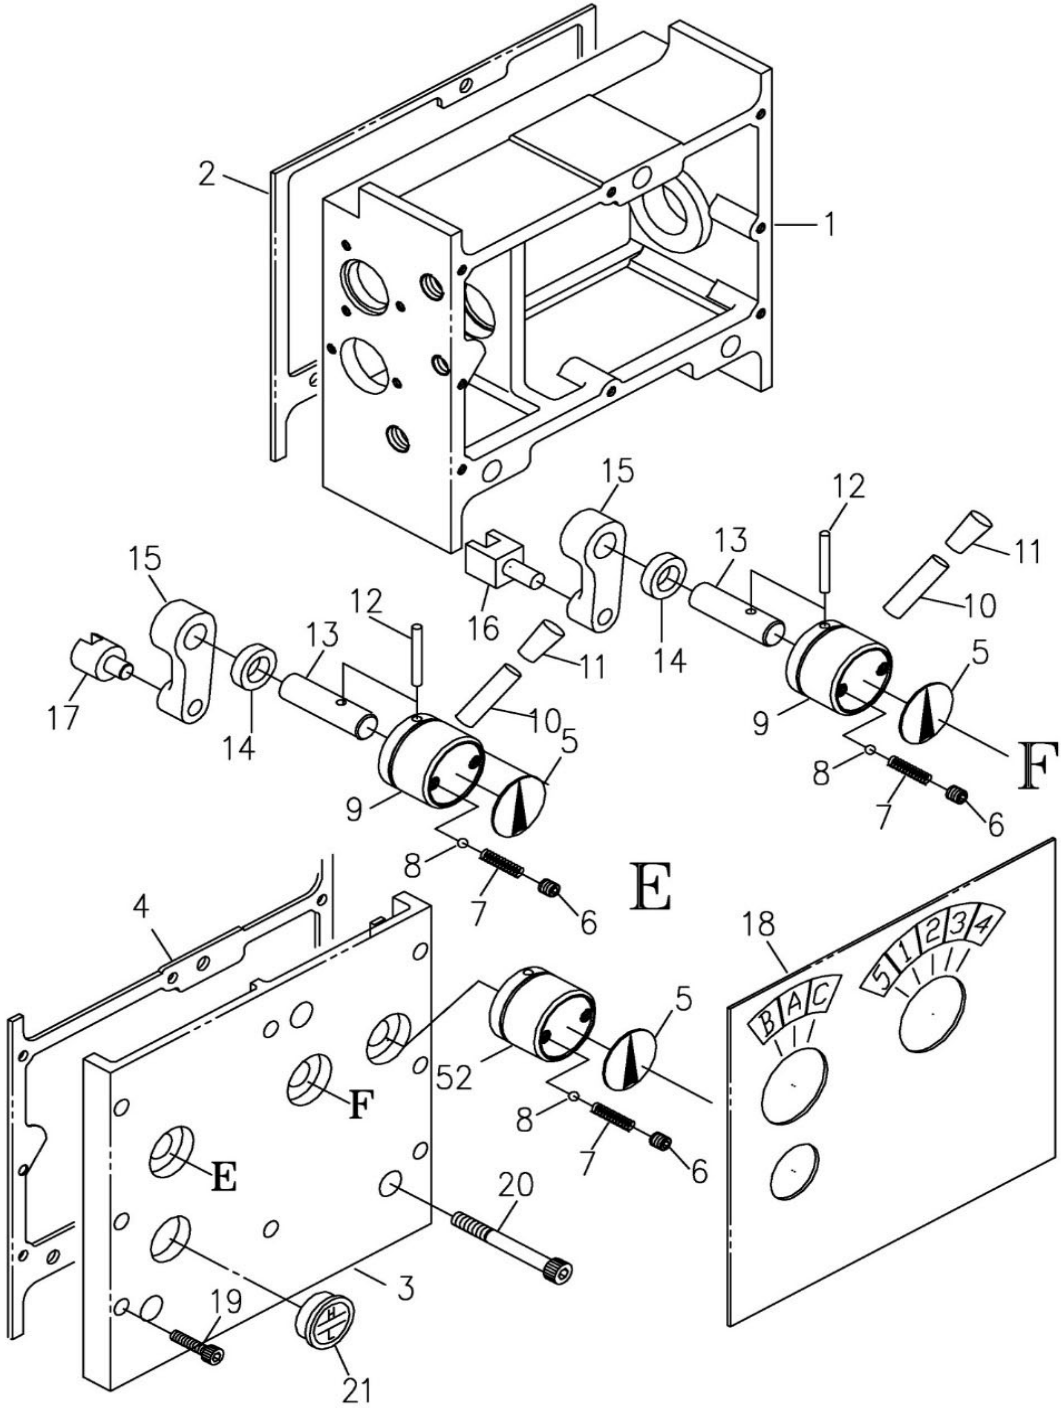

15.2.2 EVS-1440B Gearbox Assembly – Exploded View II

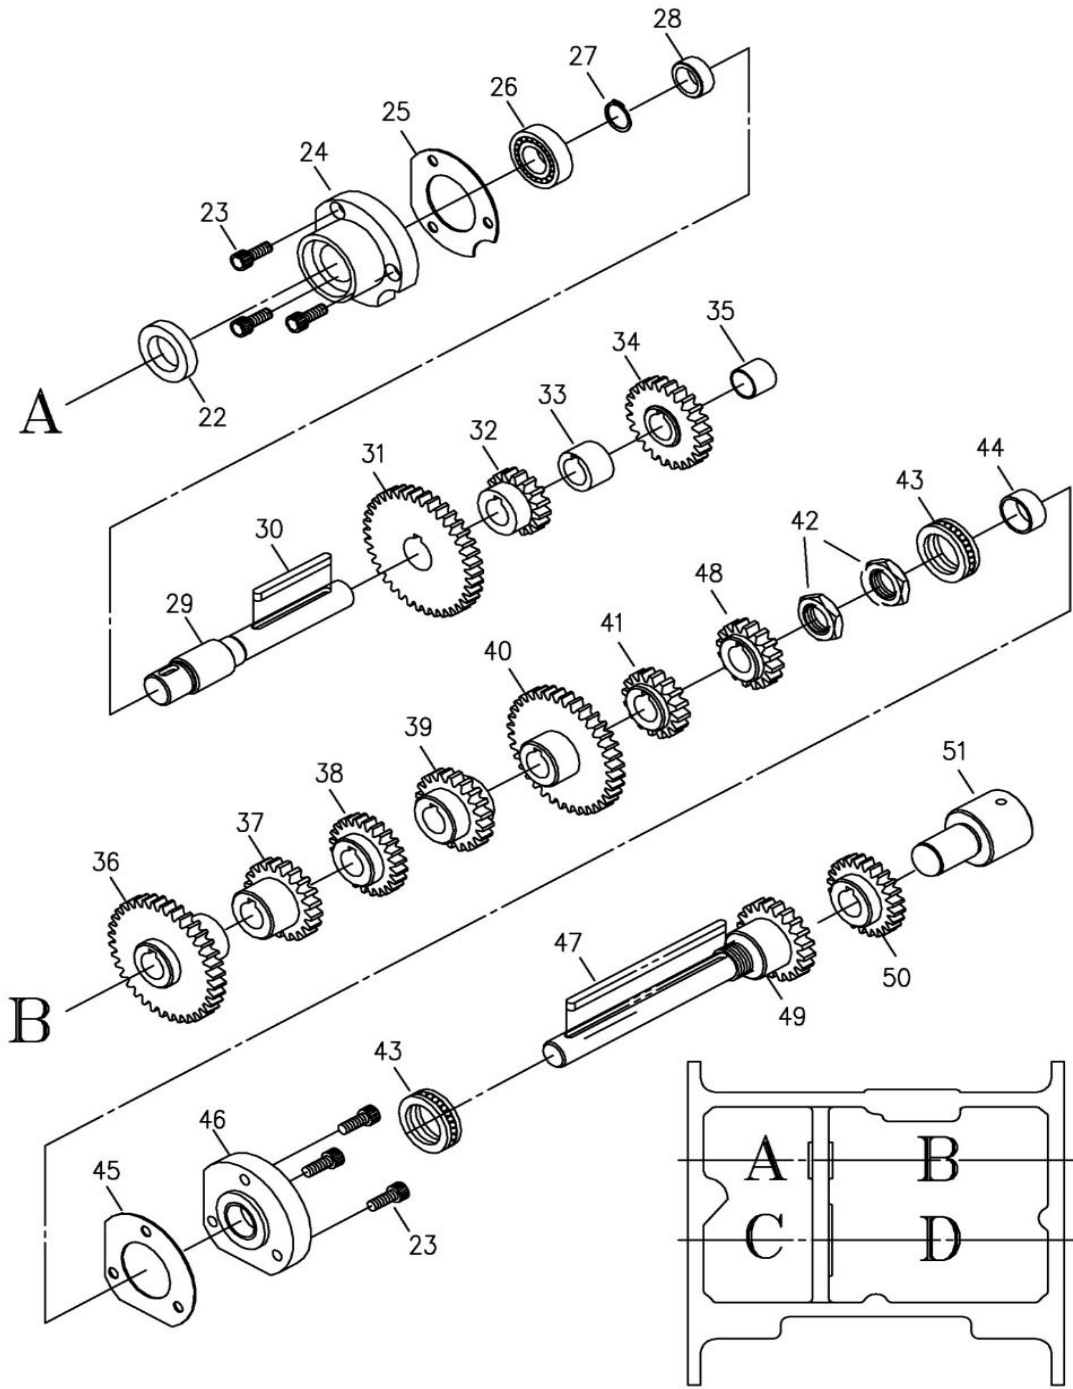

15.2.3 EVS-1440B Gearbox Assembly – Exploded View III

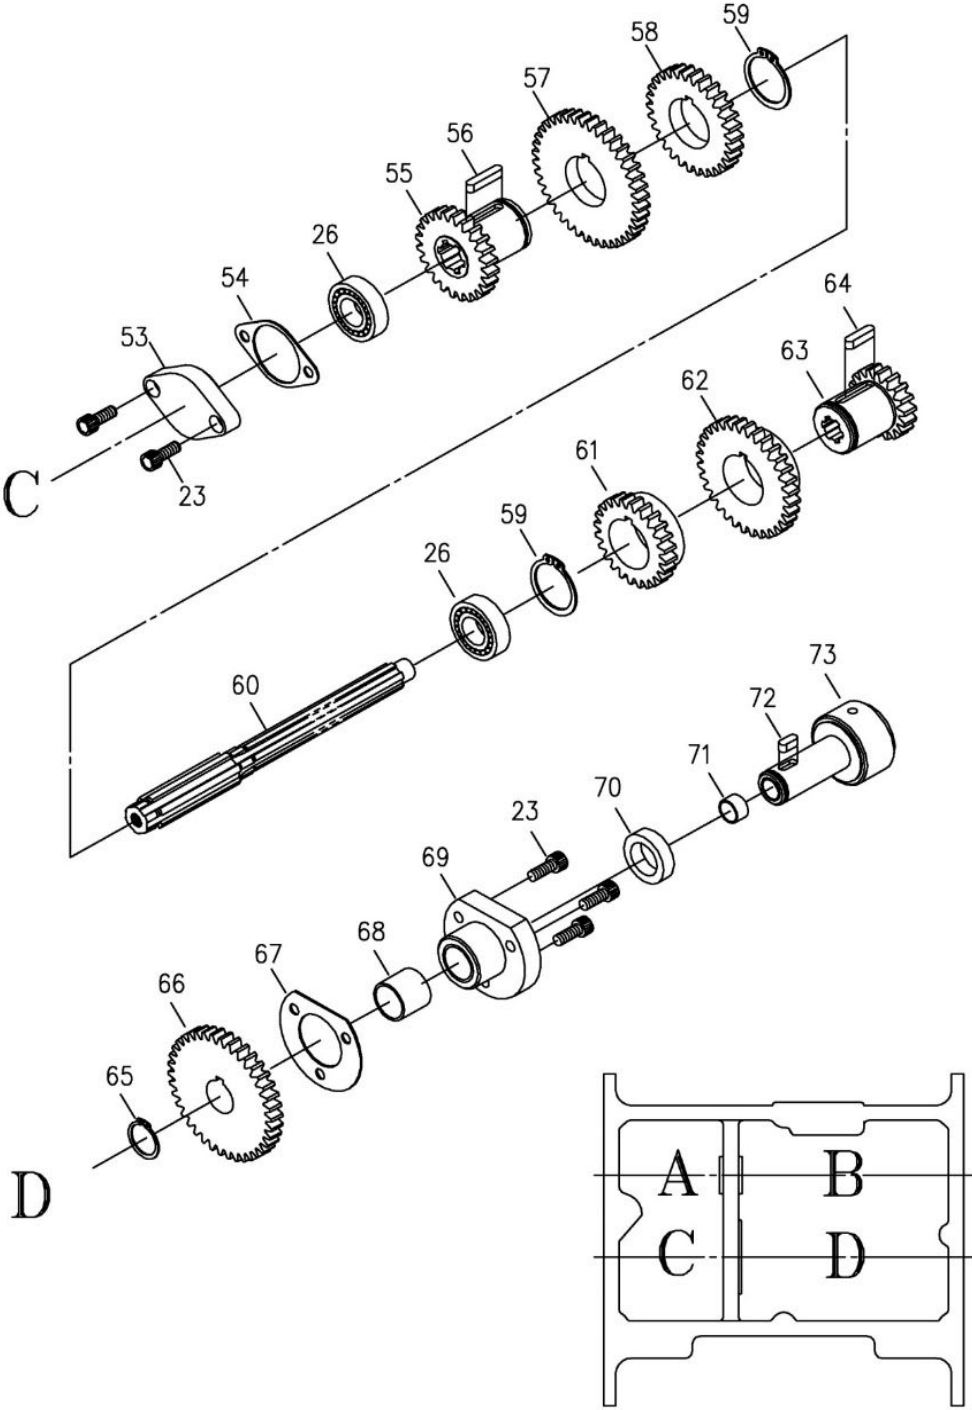


15.2.4 EVS-1440B Gearbox Assembly – Parts List


| Index No | Part No | Description | Size | Qty |
|----------|---------------|-----------------------------------|--------------------|-----|
| 1 | EBL1236VS-B01 | Gear Box | | 1 |
| 2 | EBL1236VS-B02 | Gasket For Gearbox | | 1 |
| 3 | EBL1236VS-B03 | Gear Box Cover | | 1 |
| 4 | EBL1236VS-B04 | Gasket For Gearbox Cover | | 1 |
| 5 | EBL1236VS-B05 | Index Plate | | 3 |
| 6 | TS-1524011 | Set Screw | M8x8L | 3 |
| 7 | EBL1236VS-B07 | Spring | 1/4 in x 27mm | 3 |
| 8 | SB-1/4 | Ball Steel | 1/4 in. dia | 3 |
| 9 | EBL1236VS-B09 | Handle | Ø45x35L | 2 |
| 10 | EBL1236VS-B10 | Lever | | 2 |
| 11 | EVS1440B-A12 | Handle | dia.22xdia.15 x43L | 2 |
| | EVS1440B-B11A | Handle Assembly (includes #10,11) | | 2 |
| 12 | EBL1236VS-B12 | Pin | Ø5x40mm | 2 |
| 13 | EBL1236VS-B13 | Lever | | 2 |
| 14 | EBL1236VS-B14 | Oil Seal | TC 16x26x7mm | 2 |
| 15 | EBL1236VS-B15 | Shift Lever | | 2 |
| 16 | EBL1236VS-B16 | Shift Fork | | 1 |
| 17 | EBL1236VS-B17 | Shift Fork | | 1 |
| 18 | EVS1440B-B18 | Gear Box Plate | | 1 |
| 19 | TS-1503061 | Socket Head Cap Screw | M6x25mm | 8 |
| 20 | TS-1504131 | Socket Head Cap Screw | M8x70mm | 3 |
| 21 | EBL1236VS-B21 | Oil Sight | 1-1/8 in.(28mm.) | 1 |
| 22 | EBL1236VS-B22 | Oil Seal | TC 22x35x7mm | 1 |
| 23 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 11 |
| 24 | EBL1236VS-B24 | Cover | | 1 |
| 25 | EBL1236VS-B25 | Gasket | | 1 |
| 26 | BB-6003 | Bearing | No.6003 | 3 |
| 27 | EBL1236VS-B27 | Circlip | S-16mm | 1 |
| 28 | EBL1236VS-B28 | Collar | | 1 |
| 29 | EBL1236VS-B29 | Shift | | 1 |
| 30 | EBL1236VS-B30 | Key | 5x55mm | 1 |
| 31 | EBL1236VS-B31 | Gear | 2M 32T | 1 |
| 32 | EBL1236VS-B32 | Gear | 2M 16T | 1 |
| 33 | EBL1236VS-B33 | Collar | | 1 |
| 34 | EBL1236VS-B34 | Gear | 2M 24T | 1 |
| 35 | EBL1236VS-B35 | Collar | LFB-1615 | 1 |
| 36 | EBL1236VS-B36 | Gear | 2M 30T | 1 |
| 37 | EBL1236VS-B37 | Gear | 2.75M 20T | 1 |
| 38 | EBL1236VS-B38 | Gear | 2.75M 18T | 1 |
| 39 | EBL1236VS-B39 | Gear | 2.75M 16T | 1 |
| 40 | EBL1236VS-B40 | Gear | 2.25M 28T | 1 |
| 41 | EBL1236VS-B41 | Gear | 2M 16T | 1 |
| 42 | EBL1236VS-B42 | Nut | | 2 |
| 43 | BB-51104 | Thrust Bearing | No.51104 | 2 |
| 44 | EBL1236VS-B44 | Collar | LFB-2010 | 1 |
| 45 | EBL1236VS-B45 | Gasket | | 1 |
| 46 | EBL1236VS-B46 | Cover | | 1 |
| 47 | EBL1236VS-B47 | Key | 5x70mm | 1 |
| 48 | EBL1236VS-B48 | Gear | | 1 |
| 49 | EBL1236VS-B49 | Shaft | | 1 |
| 50 | EBL1236VS-B50 | Shaft | | 1 |
| 51 | EBL1236VS-B51 | Clutch | | 1 |
| 52 | EBL1236VS-B52 | Handle | | 1 |
| 53 | EBL1236VS-B53 | Cover | | 1 |
| 54 | EBL1236VS-B54 | Gasket | | 1 |
| 55 | EBL1236VS-B55 | Gear | 2M 2T | 1 |
| 56 | EBL1236VS-B56 | Key | 5x15mm | 1 |
| 57 | EBL1236VS-B57 | Gear | 2M 40T | 1 |
| 58 | EBL1236VS-B58 | Gear | 2M 30T | 1 |
| 59 | EBL1236VS-B59 | Circlip | S-30 | 2 |

| Index No | Part No | Description | Size | Qty |
|----------|---------------|-------------|--------------|-----|
| 60 | EBL1236VS-B60 | Shaft | | 1 |
| 61 | EBL1236VS-B61 | Gear | 2M 25T | 1 |
| 62 | EBL1236VS-B62 | Gear | 2.75M 20T | 1 |
| 63 | EBL1236VS-B63 | Gear | 2.25M 20T | 1 |
| 64 | EBL1236VS-B64 | Key | 5x20mm | 1 |
| 65 | EBL1236VS-B65 | Circlip | S-20mm | 1 |
| 66 | EBL1236VS-B66 | Gear | 2M 38T | 1 |
| 67 | EBL1236VS-B67 | Gasket | | 1 |
| 68 | EBL1236VS-B68 | Collar | LFB-2020 | 1 |
| 69 | EBL1236VS-B69 | Cover | | 1 |
| 70 | EBL1236VS-B70 | Oil Seal | TC 20x30x8mm | 1 |
| 71 | EBL1236VS-B71 | Collar | LFB-1208 | 1 |
| 72 | EBL1236VS-B72 | Key | 5x12mm | 1 |
| 73 | EBL1236VS-B73 | Shaft | | 1 |




15.3.1 EVS-1440B Apron Assembly – Exploded View I

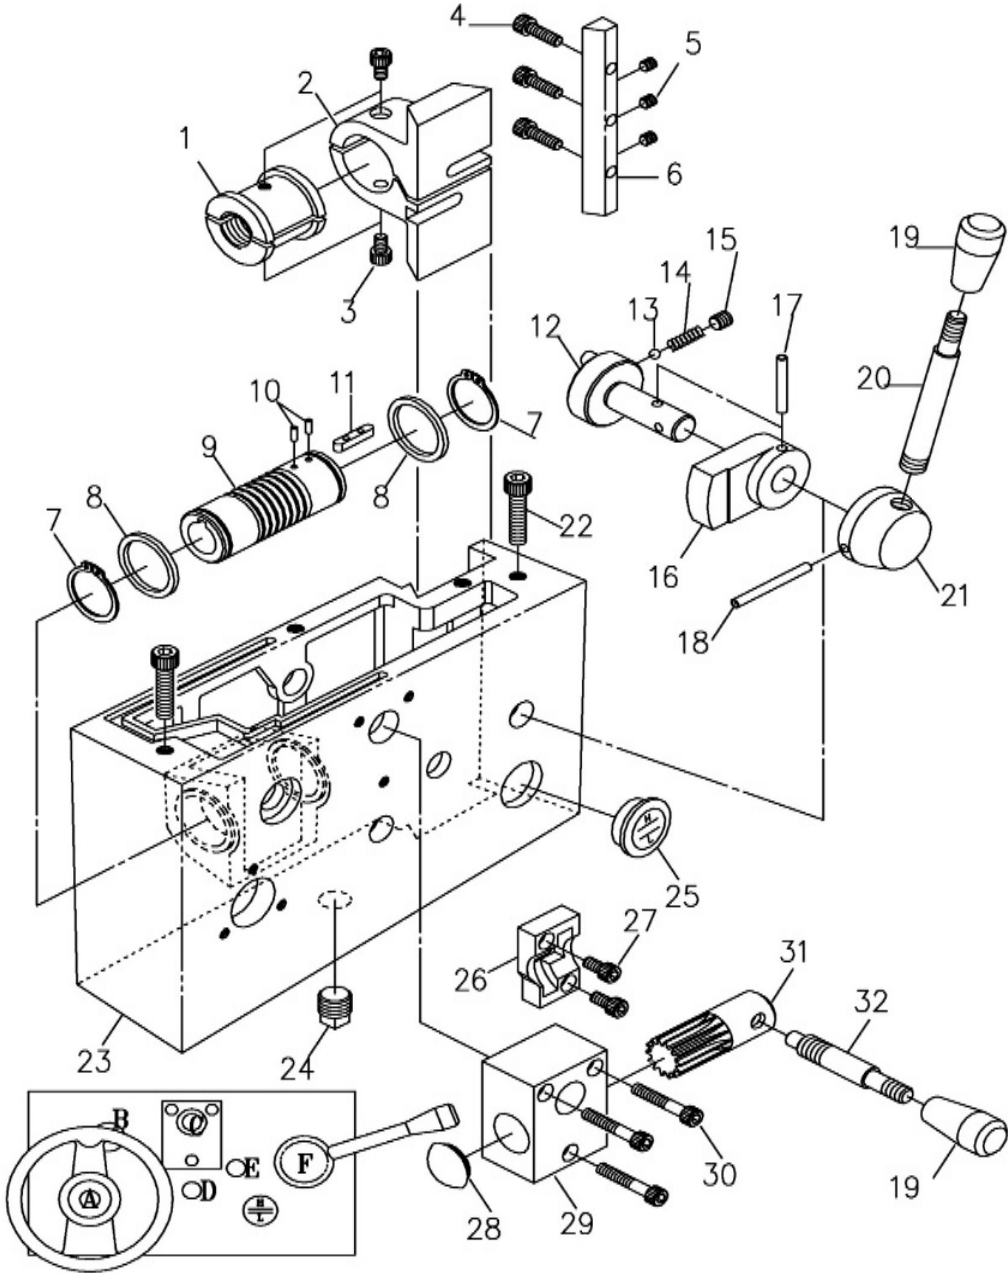

15.3.2 EVS-1440B Apron Assembly – Exploded View II

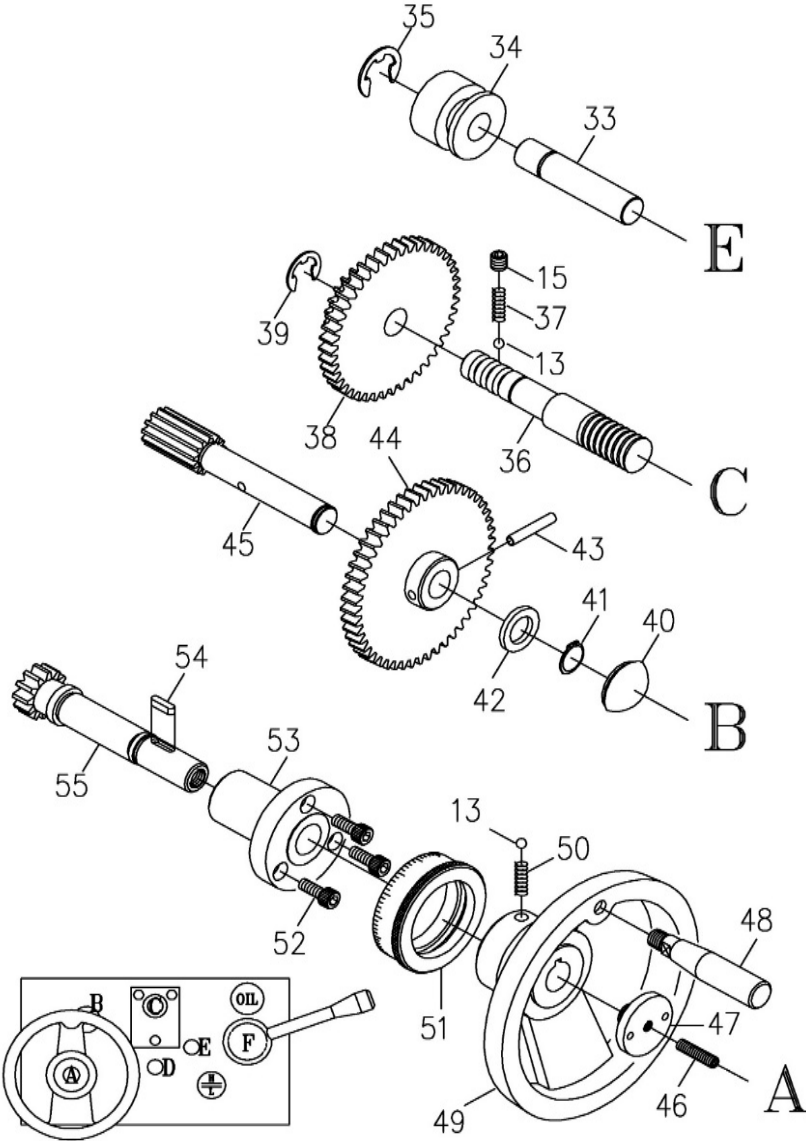

15.3.3 EVS-1440B Apron Assembly – Exploded View III

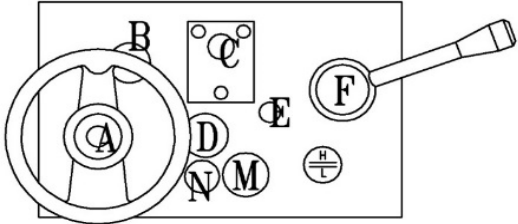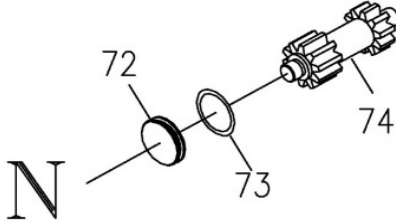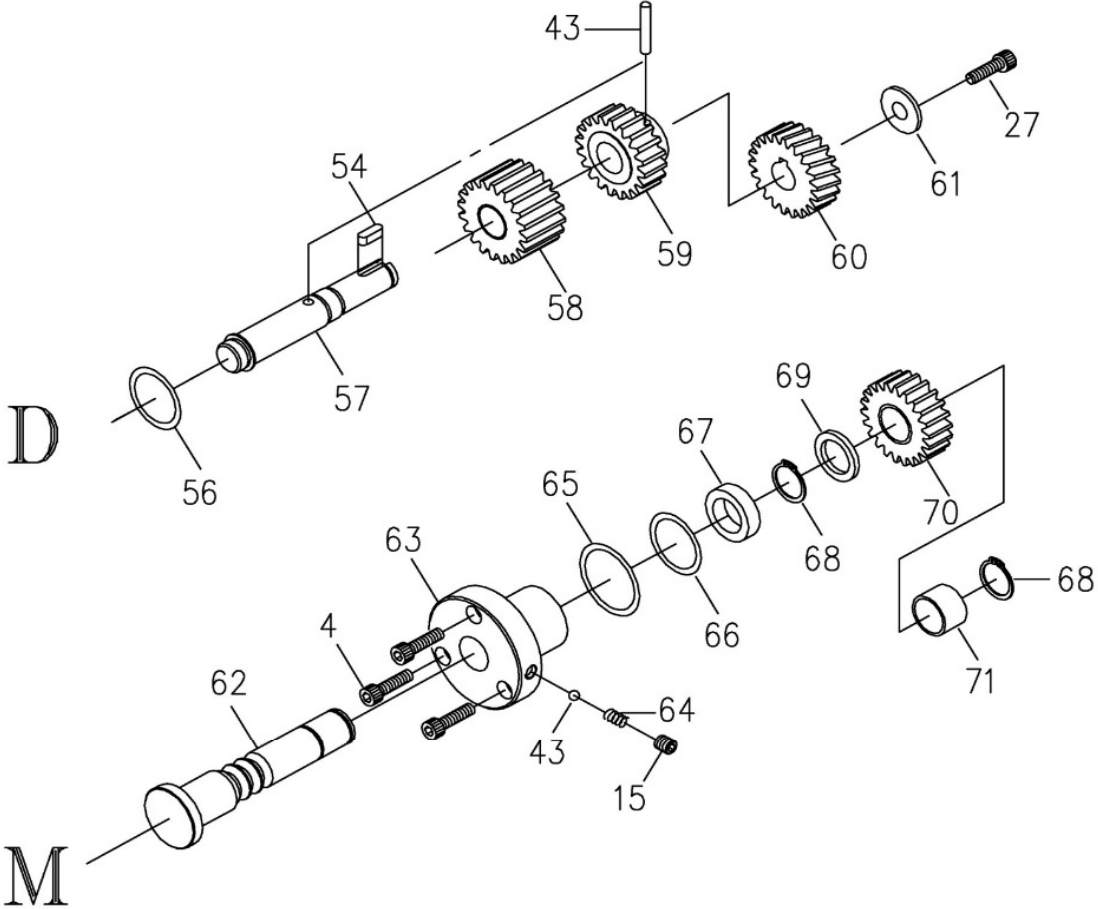


15.3.4 EVS-1440B Apron Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|-----------------------------------|---------------------|-----|
| 1 | EBL1236VS-C01 | Half Nut | 8TPI | 1 |
| 2 | EBL1236VS-C02 | Half Nut Bracket | 105Lx50Wx71h | 1 |
| 3 | TS-1503021 | Socket Head Cap Screw | M6x10mm | 2 |
| | EBL1236VS-C01A | Half Nut Assembly (includes #1~3) | | 1 |
| 4 | TS-1503051 | Socket Head Cap Screw | M6x20mm | 6 |
| 5 | TS-1523031 | Set Screw | M6x10mm | 3 |
| 6 | EBL1236VS-C06 | Gib | 13.8Wx10Hx125L | 1 |
| 7 | EBL1236VS-C07 | Circlip | S-30mm | 2 |
| 8 | EBL1236VS-C08 | Collar | Ø38.1xØ31x3t | 2 |
| 9 | EBL1236VS-C09 | Worm | Ø19.05xØ31x841L | 1 |
| 10 | EBL1236VS-C10 | Pin | 3x8 mm | 2 |
| | EBL1236VS-C08A | Collar Assembly (includes #8~10) | | 1 |
| 11 | EBL1236VS-C11 | Key | 5x25mm | 1 |
| 12 | EBL1236VS-C12 | Shaft | Ø39.9x61L | 1 |
| 13 | SB-1/4 | Ball Steel | 1/4 in. dia | 4 |
| 14 | EBL1236VS-C14 | Spring | 1/4 in x 25mm | 1 |
| 15 | TS-1524011 | Set Screw | M8x8mm | 3 |
| 16 | EBL1236VS-C16 | Lever | 62Lx36Wx17H | 1 |
| 17 | EBL1236VS-C17 | Pin | Ø5x36mm | 1 |
| 18 | EBL1236VS-C18 | Pin | Ø5x60mm | 1 |
| 19 | EVS1440B-A12 | Handle | dia.22x dia.15 x43L | 2 |
| | EVS1440B-C19A | Handle Assembly (includes #19,20) | | 1 |
| 20 | EBL1236VS-C20 | Lever | Ø1/2"x107mmL | 1 |
| 21 | EBL1236VS-C21 | Handle | Ø50x30L Ø16 | 1 |
| 22 | TS-1504071 | Socket Head Cap Screw | M8x35mm | 2 |
| 23 | EBL1236VS-C23 | Apron | 276Lx78Wx172H | 1 |
| 24 | EBL1236VS-C24 | Plug | 3/8 G.P. | 1 |
| 25 | EBL1236VS-C25 | Oil Sight | 3/4 in. (19mm) | 1 |
| 26 | EBL1236VS-C26 | Cam | 50x30x12H | 1 |
| 27 | TS-1503031 | Socket Head Cap Screw | M6x12mm | 2 |
| 28 | EBL1236VS-C28 | Plug | Ø28x8W | 1 |
| 29 | EBL1236VS-C29 | Keep Assembly | 65Lx50Wx35H | 1 |
| 30 | TS-1503081 | Socket Head Cap Screw | M6x35mm | 3 |
| 31 | EBL1236VS-C31 | Gear Shaft | Ø24x67L | 1 |
| 32 | EBL1236VS-C32 | Lever | Ø1/2"x80mmL | 1 |
| | EVS1440B-C32A | Handle Assembly (includes #19,32) | | 1 |
| 33 | EBL1236VS-C33 | Shaft | Ø16x77L | 1 |
| 34 | EBL1236VS-C34 | Collar | Ø38xØ16x30L | 1 |
| 35 | EBL1236VS-C35 | Circlip | E-15mm | 1 |
| 36 | EBL1236VS-C36 | Shaft | Ø20x122L | 1 |
| 37 | EBL1236VS-C37 | Spring | 1/4in x 20mm | 1 |
| 38 | EBL1236VS-C38 | Gear | 2M 22/44T | 1 |
| 39 | EBL1236VS-C39 | Circlip | E-12mm | 1 |
| 40 | EBL1236VS-C40 | Plug | Ø28x8W | 1 |
| 41 | EBL1236VS-C41 | Circlip | S-16mm | 1 |
| 42 | EBL1236VS-C42 | Collar | Ø25.4xØ16x3W | 1 |
| 43 | EBL1236VS-C43 | Pin | Ø5x30mm | 3 |
| 44 | EBL1236VS-C44 | Gear | 2M 50T | 1 |
| 45 | EBL1236VS-C45 | Rack Pinion | Ø22.5x120L | 1 |
| 46 | TS-1523071 | Set Screw | M6x25mm | 1 |
| 47 | EBL1236VS-C47 | Plug | 35x15L ØM6 TAP | 1 |
| 48 | EBL1236VS-C48 | Handle | Ø5/8"x77mmL | 1 |
| 49 | EBL1236VS-C49 | Handwheel | Ø140x68H Ø17 | 1 |
| 50 | EBL1236VS-C50 | Spring | 1/4 in. x 8mm | 2 |
| 51 | EBL1236VS-C51 | Index Ring | Ø63xØ45x20W | 1 |
| 52 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 3 |
| 53 | EBL1236VS-C53 | Keep Assembly | Ø60xØ18x57L | 1 |
| 54 | EBL1236VS-C54 | Key | 4x15mm | 2 |
| 55 | EBL1236VS-C55 | Shaft | Ø28x108L key4x2 | 1 |
| 56 | EBL1236VS-C56 | O-Ring | P14 | 1 |

| Index No | Part No | Description | Size | Qty |
|----------|---------------|---------------|-----------------|-----|
| 57 | EBL1236VS-C57 | Shaft | | 1 |
| 58 | EBL1236VS-C58 | Gear | | 1 |
| 59 | EBL1236VS-C59 | Gear | | 1 |
| 60 | EBL1236VS-C60 | Worm Gear | Ø30xØ14x23L | 1 |
| 61 | EBL1236VS-C61 | Washer | Ø25xØ1/4"x3t | 1 |
| 62 | EBL1236VS-C62 | Shaft | | 1 |
| 63 | EBL1236VS-C63 | Keep Assembly | | 1 |
| 64 | EBL1236VS-C64 | Spring | 1/4 in.x 10mm | 1 |
| 65 | EBL1236VS-C65 | O-Ring | 3.5x34.7x41.7 | 1 |
| 66 | EBL1236VS-C66 | O-Ring | 3.5x28.7x35.7 | 1 |
| 67 | EBL1236VS-C67 | Oil Seal | TC 20x30x8mm | 1 |
| 68 | EBL1236VS-C68 | Circlip | S-20mm | 2 |
| 69 | EBL1236VS-C69 | Collar | | 1 |
| 70 | EBL1236VS-C70 | Gear | | 1 |
| 71 | EBL1236VS-C71 | Collar | LFB-2012 | 1 |
| 72 | EBL1236VS-C72 | Plug | | 1 |
| 73 | EBL1236VS-C73 | O-Ring | 2.4xØ21.8xØ26.6 | 1 |
| 74 | EBL1236VS-C74 | Gear Shaft | | 1 |


15.4.1 EVS-1440B Carriage Assembly – Exploded View

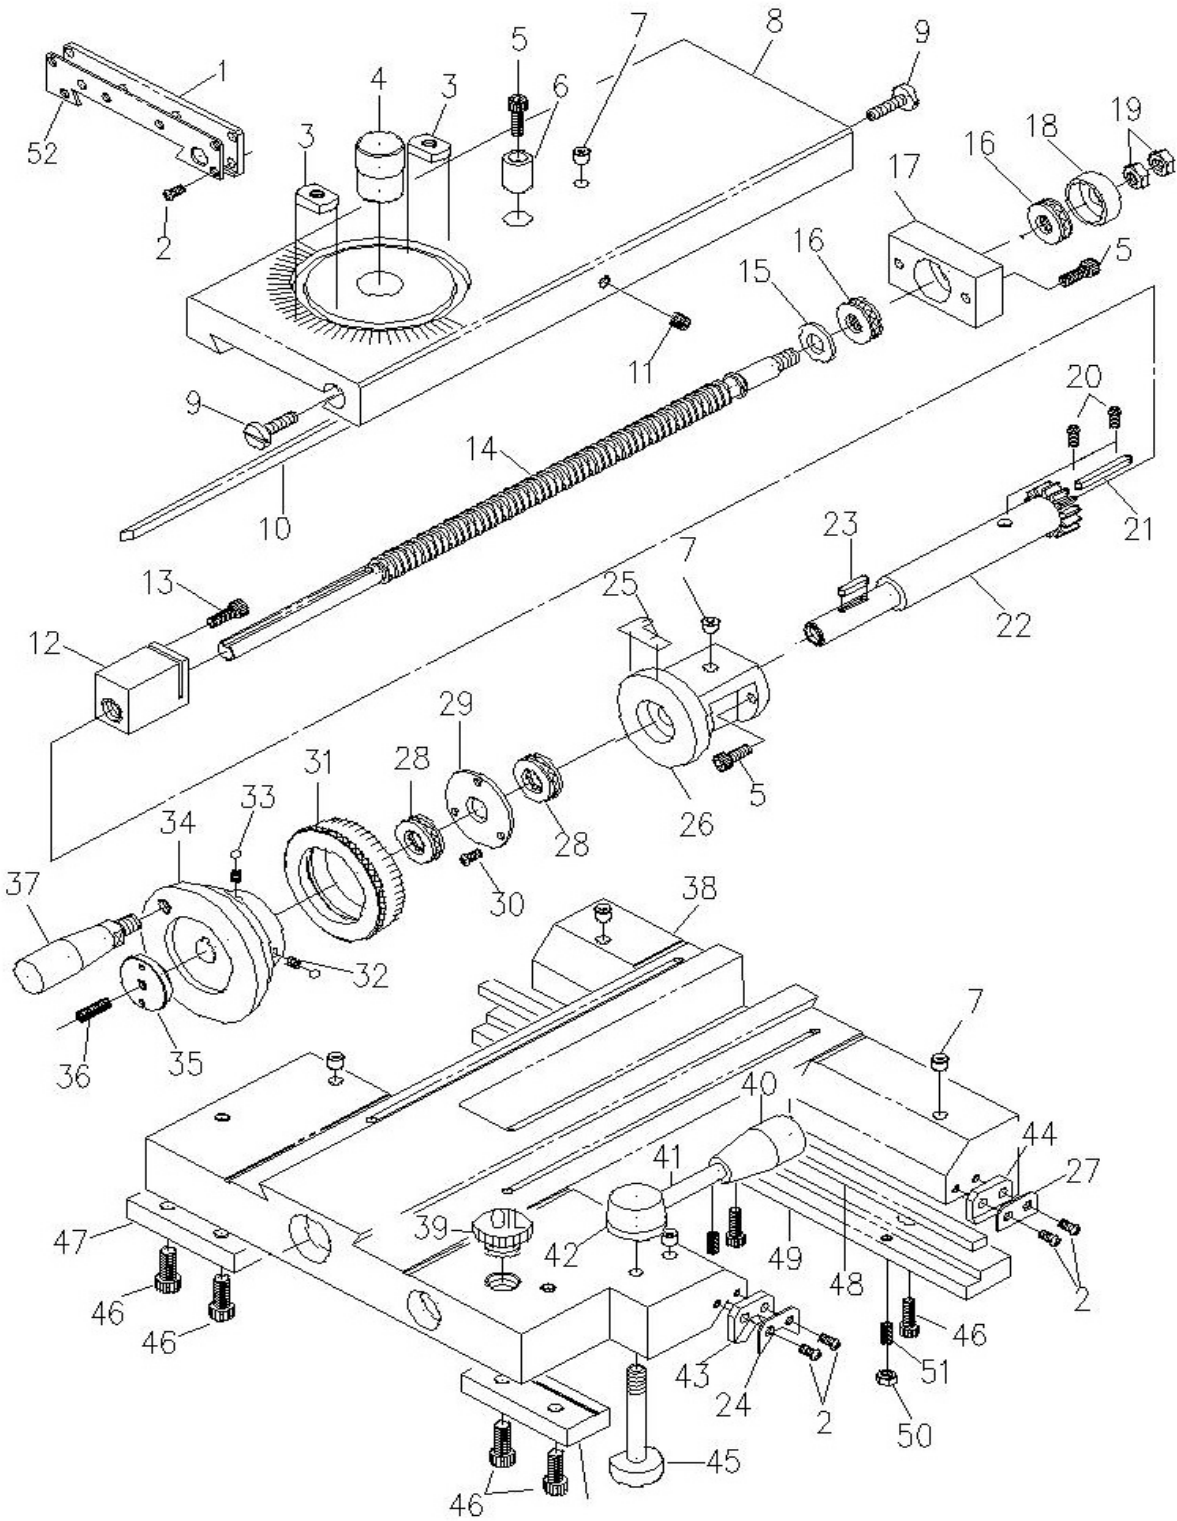

15.4.2 EVS-1440B Carriage Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|---------------|-----------------------------------|---------------------|-----|
| 1 | E1340VS-D01 | Wiper | PVC | 1 |
| 2 | E1340VS-D02 | Screw | 3/16x3/8 in. | 14 |
| 3 | E1340VS-D03 | Nut | 6.5xØ7/8"x14W | 2 |
| 4 | E1340VS-D04 | Pivot | Ø25.4x35L | 1 |
| 5 | TS-1503051 | Socket Head Cap Screw | M6x20mm | 4 |
| 6 | E1340VS-D06 | Collar | Ø16x20L Ø1/4 | 1 |
| 7 | E1340VS-D07 | Ball Oiler | 5/16 in. | 6 |
| 8 | EVS1440B-D08 | Cross-Slide | 370Lx130Wx30H | 1 |
| 9 | E1340VS-D09 | Gib Screw | Ø5/8"x30L | 2 |
| 10 | E1340VS-D10 | Gib | 15x23x460 | 1 |
| 11 | TS-1524011 | Set Screw | M8x8mm | 1 |
| 12 | E1340VS-D12 | Nut | 45Lx25Wx32h | 1 |
| 13 | TS-1503031 | Socket Head Cap Screw | M6x12mm | 1 |
| 14 | E1340VS-D14 | Screw | Ø5/8"x430L 10TPI | 1 |
| | E1340VS-D12A | Nut Assembly (includes #12~14) | | 1 |
| 15 | E1340VS-D15 | Washer | Ø25x1/2"x3t | 1 |
| 16 | BB-51101 | Thrust | NO. 51101 | 2 |
| 17 | EVS1440B-D17 | Keep Assembly | 64x35x20H | 1 |
| 18 | E1340VS-D18 | Bearing Cover | Ø31xØ12x11.5L | 1 |
| 19 | TS-0561031 | Nut | 3/8 in. | 1 |
| 20 | E1340VS-D20 | Nail | 2 mm. | 2 |
| 21 | E1340VS-D21 | Key | 4x40 mm. | 1 |
| 22 | E1440VS-D22 | Gear | | 1 |
| 22 | E1340VS-D22 | Gear | Ø32x139L | 1 |
| 23 | E1340VS-D23 | Key | 4x20 mm. | 1 |
| 24 | E1340VS-D24 | Wiper | | 2 |
| 25 | E1340VS-D25 | Index Plate | | 1 |
| 26 | EVS1440B-D26 | Keep Assembly | Ø70x73LxØ22 | 1 |
| 27 | E1340VS-D27 | Wiper | | 2 |
| 28 | BB-51102 | Thrust | NO. 51102 | 2 |
| 29 | E1340VS-D29 | Washer | Ø49.5xØ16x36 | 1 |
| 30 | TS-081F021 | Screw | 1/4x3/8 in. | 3 |
| 31 | E1340VS-D31 | Index Ring | Ø73xØ50x19.9L | 1 |
| 32 | E1340VS-D32 | Spring | 1/4 in.x20mm. | 2 |
| 33 | E1340VS-D33 | Steel Ball | 1/4 in. | 2 |
| 34 | E1340VS-D34 | Handwheel | Ø90xØ15x49L | 1 |
| 35 | E1340VS-D35 | Plug | Ø35x15L M6TAP | 1 |
| 36 | TS-1523071 | Set Screw | M6x25mm | 1 |
| 37 | E1340VS-D37 | Handle | Ø19x80L | 1 |
| 38 | E1340VS-D38 | Saddle Casting | 312Lx310Wx67H | 1 |
| 39 | E1340VS-D39 | Plug | 3/4 in. (P.V.C) | 1 |
| 40 | EVS1440B-A12 | Handle | dia.22x dia.15 x43L | 1 |
| | EVS1440B-D40A | Handle Assembly (includes #40,41) | | 1 |
| 41 | E1340VS-D41 | Handle | Ø3/8"x65L | 1 |
| 42 | E1340VS-D42 | Handle | Ø5/4"x22W | 1 |
| 43 | E1340VS-D43 | Wiper | PVC | 2 |
| 44 | E1340VS-D44 | Wiper | PVC | 1 |
| 45 | E1340VS-D45 | Screw | Ø9/8"x75L | 1 |
| 46 | TS-1504041 | Socket Head Cap Screw | M8x20mm | 7 |
| 47 | E1340VS-D47 | Strip | 80Lx31Wx13H | 2 |
| 48 | E1340VS-D48 | Gib | 10Wx5Tx310L | 1 |
| 49 | E1340VS-D49 | Strip | 310L33.5Wx15H | 1 |
| 50 | TS-1540041 | Nut | M6mm | 3 |
| 51 | TS-1523051 | Set Screw | M6x16mm | 3 |
| 52 | E1340VS-D52 | Wiper | | 1 |


15.5.1 EVS-1440B Tool Post Assembly – Exploded View

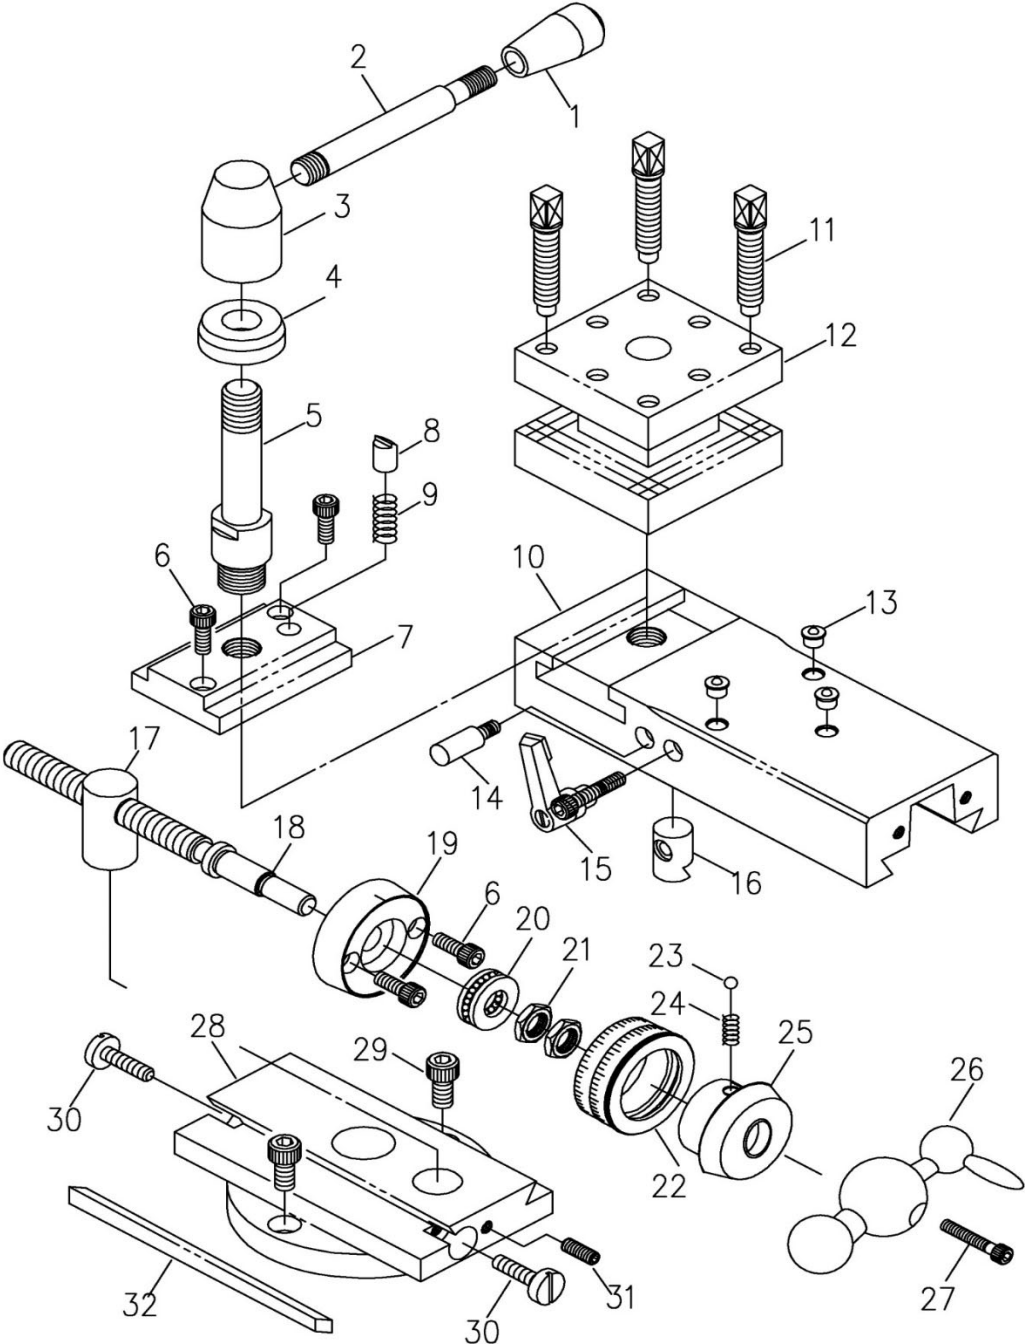

15.5.2 EVS-1440B Tool Post Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---------------------------------|---------------------|-----|
| 1 | EVS1440B-A12 | Handle | dia.22x dia.15 x43L | 1 |
| | EVS1440B-E01A | Handle Assembly (includes #1,2) | | 1 |
| 2 | EBL1236VS-E02 | Lever | Ø1/2"x107L | 1 |
| 3 | EBL1236VS-E03 | Handle Hub | Ø12" 62H" | 1 |
| 4 | EBL1236VS-E04 | Washer | Ø35xØ16x12h | 1 |
| 5 | EBL1236VS-E05 | Bolt | Ø24x106.5L | 1 |
| 6 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 4 |
| 7 | EBL1236VS-E07 | T Nut | | 1 |
| 8 | EBL1236VS-E08 | Pad | Ø3/8"x15L | 1 |
| 9 | EBL1236VS-E09 | Spring | 3/8 in x 20mm | 1 |
| 10 | EBL1236VS-E10 | Top Slide | 200Lx75Wx37W | 1 |
| 11 | EBL1236VS-E11 | Screw | Ø12.7x65 | 8 |
| 12 | EVS1440B-E12 | Tool Post | 75x75x64H | 1 |
| 13 | EBL1236VS-E13 | Ball Oiler | 5/16 in | 3 |
| 14 | EBL1236VS-E14 | Pin | | 1 |
| 15 | EBL1236VS-E15 | Handle | | 1 |
| 16 | EBL1236VS-E16 | Pad | Ø16x24L | 1 |
| 17 | EBL1236VS-E17 | Nut | Ø20x40L | 1 |
| 18 | EBL1236VS-E18 | Screw | Ø15.8x170L | 1 |
| | EBL1236VS-E17A | Nut Assembly (Includes #17~18) | | 1 |
| 19 | EBL1236VS-E19 | Keep Assembly | Ø52.5xØ12x15L | 1 |
| 20 | BB-51101 | Thrust | No.51101 | 2 |
| 21 | TS-1540083 | Nut | M12xPC1.25 4T | 2 |
| 22 | EBL1236VS-E22 | Index Ring | Ø49.5~Ø48xØ20L | 1 |
| 23 | SB-1/4 | Steel Ball | 1/4 in. dia | 1 |
| 24 | EBL1236VS-E24 | Spring | 1/4 in.x 8mm | 1 |
| 25 | EBL1236VS-E25 | Keep Assembly | | 1 |
| 26 | EBL1236VS-E26 | Three Ball Handle | | 1 |
| 27 | TS-1503071 | Socket Head Cap Screw | M6x30mm | 1 |
| 28 | EVS1440B-E28 | Swivel Slide | 140x75x43H Dia.110 | 1 |
| 29 | TS-1504031 | Socket Head Cap Screw | M8x16mm | 2 |
| 30 | EBL1236VS-E30 | Gib Screw | 5/8"x30L | 2 |
| 31 | TS-1523051 | Set Screw | M6x16mm | 1 |
| 32 | EBL1236VS-E32 | Gib | 12x20x190mm | 1 |


15.6.1 EVS-1440B Tailstock Assembly – Exploded View

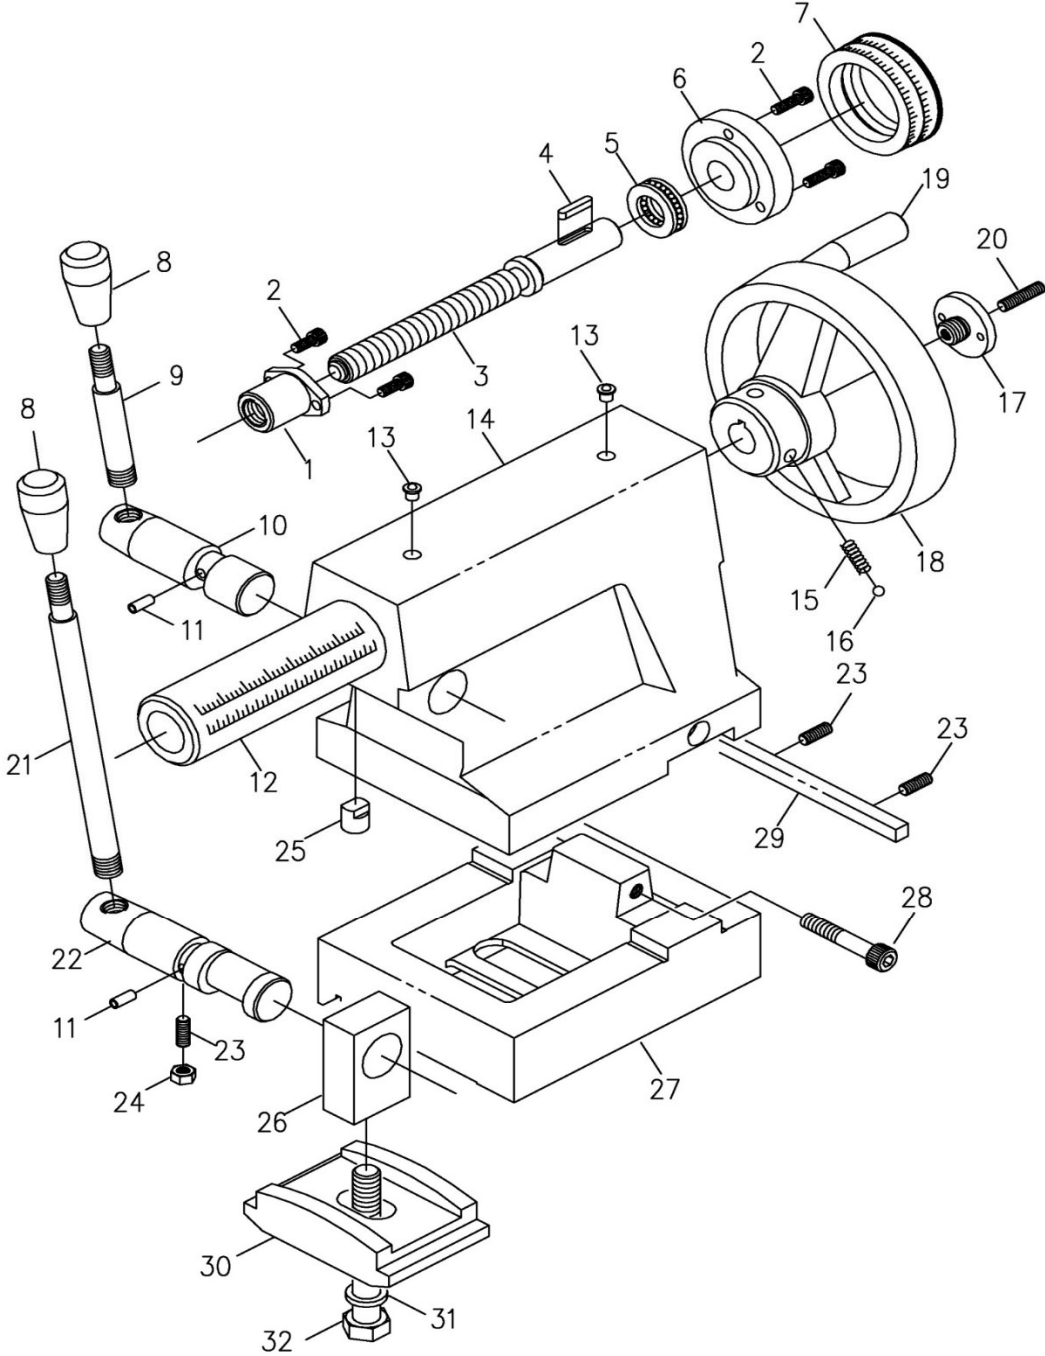

15.6.2 EVS-1440B Tailstock Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|----------------------------------|---------------------|-----|
| 1 | EBL1236VS-F01 | Nut | 30L | 1 |
| 2 | TS-1502041 | Socket Head Cap Screw | M5x16mm | 4 |
| 3 | EBL1236VS-F03 | Screw | Ø20.5x179L | 1 |
| | EBL1236VS-F01A | Nut Assembly (includes #1~3) | | 1 |
| 4 | EBL1236VS-F04 | Key | 4x20mm | 1 |
| 5 | BB-51102 | Thrust | No.51102 | 1 |
| 6 | EBL1236VS-F06 | Keep Assembly | Ø17xØ60x17L | 1 |
| 7 | EBL1236VS-F07 | Index Ring | Ø61.5~Ø60xØ45x20W | 1 |
| 8 | EVS1440B-A12 | Handle | dia.22x dia.15 x43L | 2 |
| | EVS1440B-F08A | Handle Assembly (includes #8,9) | | 1 |
| 9 | EBL1236VS-F09 | Lever | | 1 |
| 10 | EBL1236VS-F10 | Shaft | Ø25xØ16x91L | 1 |
| 11 | EBL1236VS-F11 | Pin | Ø5x12mm | 1 |
| 12 | EBL1236VS-F12 | Barrel | 2 Ø40x190L | 1 |
| 13 | EBL1236VS-F13 | Ball Oiler | 5/16 in | 2 |
| 14 | EVS1440B-F14 | Tailstock Casting | 200x127x171H Ø40 | 1 |
| 15 | EBL1236VS-F15 | Spring | 1/4 in x 20mm | 2 |
| 16 | SB-1/4 | Steel Ball | 1/4 in. dia | 2 |
| 17 | EBL1236VS-F17 | Screw | Ø35x16L | 1 |
| 18 | EBL1236VS-F18 | Handwheel | Ø140x68h | 1 |
| 19 | EBL1236VS-F19 | Handle | Ø5/8"x77L | 1 |
| 20 | TS-1523071 | Set Screw | M6x25mm | 1 |
| 21 | EBL1236VS-F21 | Lever | Ø1/2"x190 | 1 |
| | EVS1440B-F21A | Handle Assembly (includes #8,21) | | 1 |
| 22 | EBL1236VS-F22 | Shaft | Ø25xØ18x114L | 1 |
| 23 | TS-1523051 | Set Screw | M6x16mm | 1 |
| 24 | TS-1540041 | Nut | M6 | 1 |
| 25 | EBL1236VS-F25 | Pad | 2 Ø1/2"x14L | 1 |
| 26 | EBL1236VS-F26 | Pivot Block | 36Lx20Wx57H | 1 |
| 27 | EVS1440B-F27 | Base | 160x127x41H | 1 |
| 28 | TS-1504091 | Socket Head Cap Screw | M8x45mm | 2 |
| 29 | EBL1236VS-F29 | Gib | 8x8x125 | 1 |
| 30 | EBL1236VS-F30 | Clamp Plate | 65Wx94Lx28H | 1 |
| 31 | TS-0680061 | Washer | 1/2 in | 1 |
| 32 | TS-0070051 | Cap Screw | 1/2x2 in | 1 |


15.7.1 EVS-1440B Bed Assembly – Exploded View

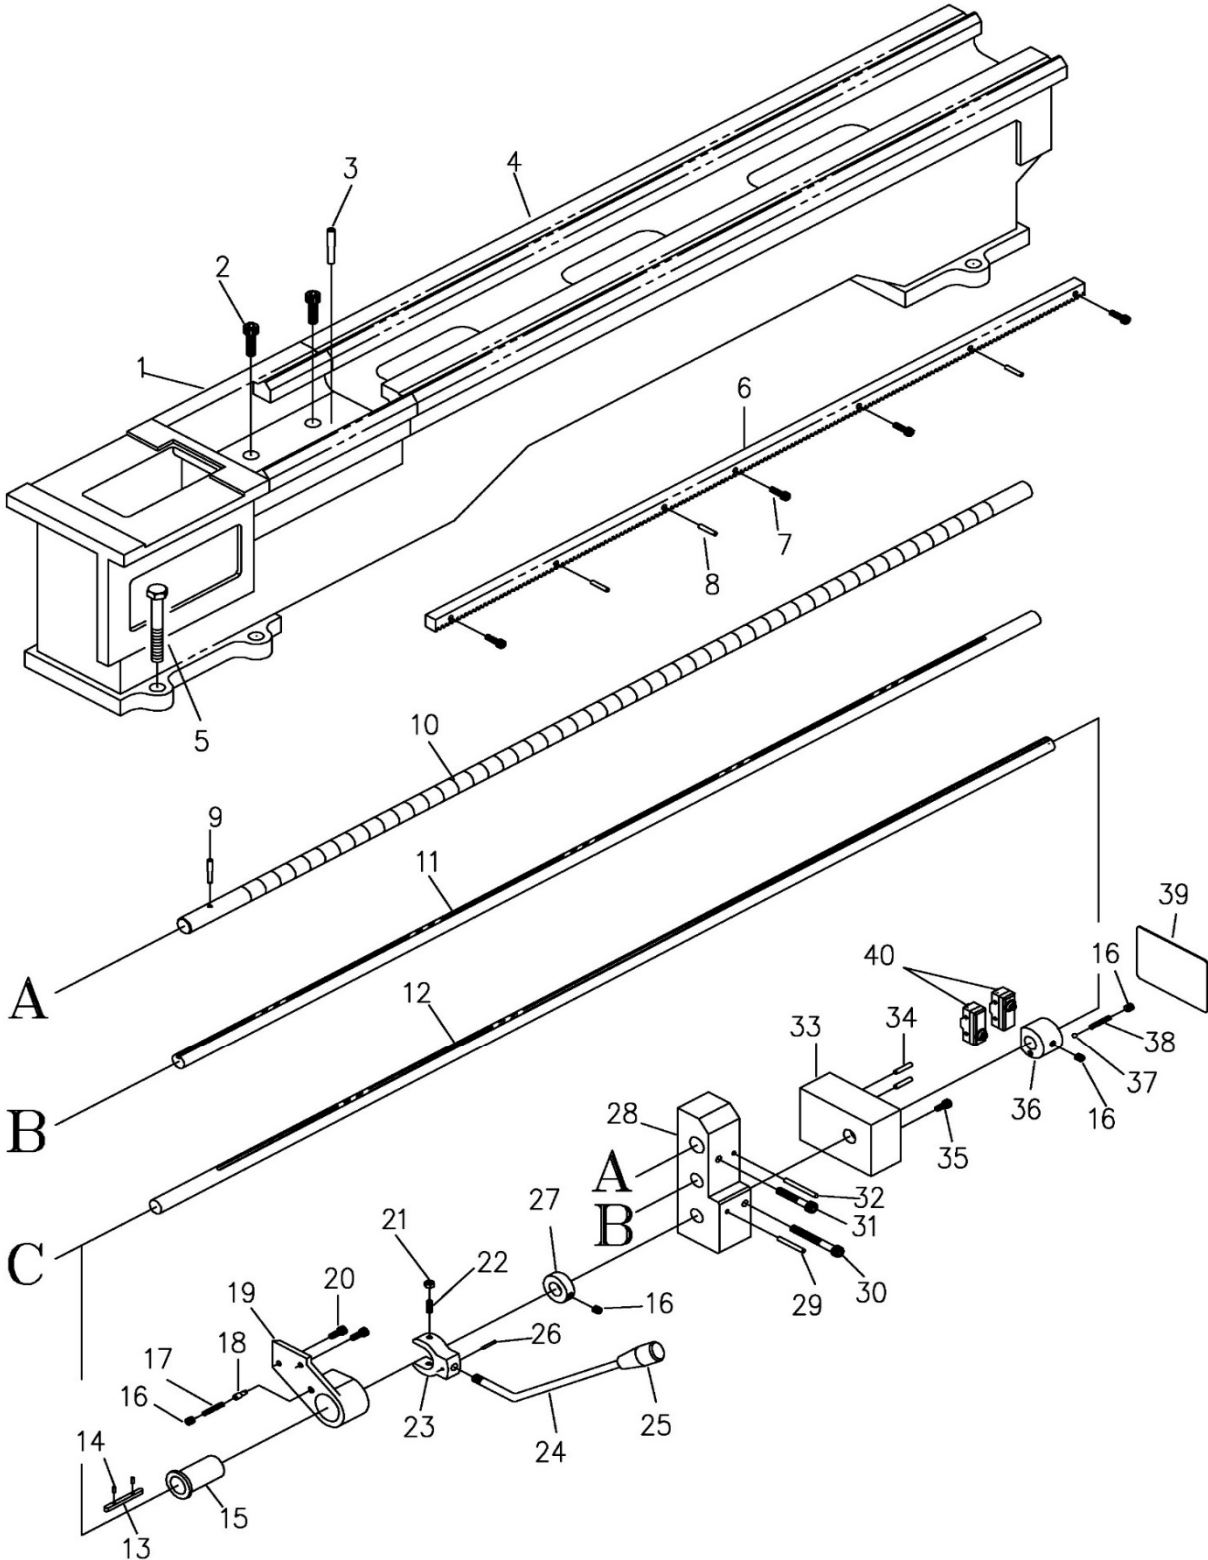

15.7.2 EVS-1440B Bed Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|---------------|-----------------------------------|----------------|-----|
| 1 | EBL1236VS-G01 | Gap Section | 240x190x70 | 1 |
| 2 | TS-1505051 | Socket Head Cap Screw | M10x35mm | 4 |
| 3 | EBL1236VS-G03 | Taper Pin | Ø4x38mm | 2 |
| 4 | EVS1440B-G04 | Bed Casting | 40"-1625 | 1 |
| 5 | TS-0050031 | Hex Cap Screw | 1/2x1-3/4 in | 6 |
| 6 | EBL1236VS-G06 | Rack | 36" 990L | 1 |
| 7 | TS-1503051 | Socket Head Cap Screw | M6x20mm | 4 |
| 8 | EBL1236VS-G08 | Pin | Ø5x30mm | 8 |
| 9 | EVS1440B-G09 | Taper Pin (Aluminum) | Ø 5.6x36L | 3 |
| 10 | EVS1440B-G10 | Lead Screw | 40" 1362L | 1 |
| 11 | EVS1440B-G11 | Feed Shaft | 40" 1385L | 1 |
| 12 | EVS1440B-G12 | Spindle Direction Control Axle | 40" 1445L | 1 |
| 13 | EBL1236VS-G13 | Key | 5x60mm | 1 |
| 14 | EBL1236VS-G14 | Pin | Ø3x8 mm | 2 |
| 15 | EBL1236VS-G15 | Sleeve | Ø38xØ19.05x60L | 1 |
| 16 | TS-1524011 | Set Screw | M8x8mm | 3 |
| 17 | EBL1236VS-G17 | Spring | 1/4 in x 35mm | 1 |
| 18 | EBL1236VS-G18 | Pin | Ø6.3x19L | 1 |
| 19 | EBL1236VS-G19 | Bracket | Ø54 | 1 |
| 20 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 2 |
| 21 | TS-1540041 | Nut | M6 | 2 |
| 22 | TS-1523051 | Set Screw | M6x16mm | 2 |
| 23 | EBL1236VS-G23 | Fork | Ø51x20 | 1 |
| 24 | EBL1236VS-G24 | Lever | Ø3/8" x220L | 1 |
| 25 | EVS1440B-G25 | Handle | | 1 |
| | EVS1440B-G25A | Handle Assembly (includes #24,25) | | 1 |
| 26 | EBL1236VS-G26 | Pin | Ø3x20mm | 1 |
| 27 | EBL1236VS-G27 | Collar | Ø38xØ19.05x12L | 1 |
| 28 | EBL1236VS-G28 | Base | | 1 |
| 29 | EBL1236VS-G29 | Pin | Ø5x40mm | 1 |
| 30 | TS-1504131 | Socket Head Cap Screw | M8x70mm | 1 |
| 31 | TS-1504101 | Socket Head Cap Screw | M8x50mm | 1 |
| 32 | EBL1236VS-G32 | Pin | Ø5x50mm | 1 |
| 33 | EBL1236VS-G33 | Box | 115Lx80Wx48h | 1 |
| 34 | EBL1236VS-G34 | Pin | Ø5x35mm | 2 |
| 35 | TS-1503031 | Socket Head Cap Screw | M6x12mm | 1 |
| 36 | EBL1236VS-G36 | Collar | Ø44xØ19.5x30W | 1 |
| 37 | SB-1/4 | Steel Ball | 1/4 in. dia | 1 |
| 38 | EBL1236VS-G38 | Spring | 1/4 in x 30mm | 1 |
| 39 | EBL1236VS-G39 | Cove | | 1 |
| 40 | EBL1236VS-G40 | Limit Switch | | 2 |


15.8.1 EVS-1440B Cabinet and Panel Assembly – Exploded View

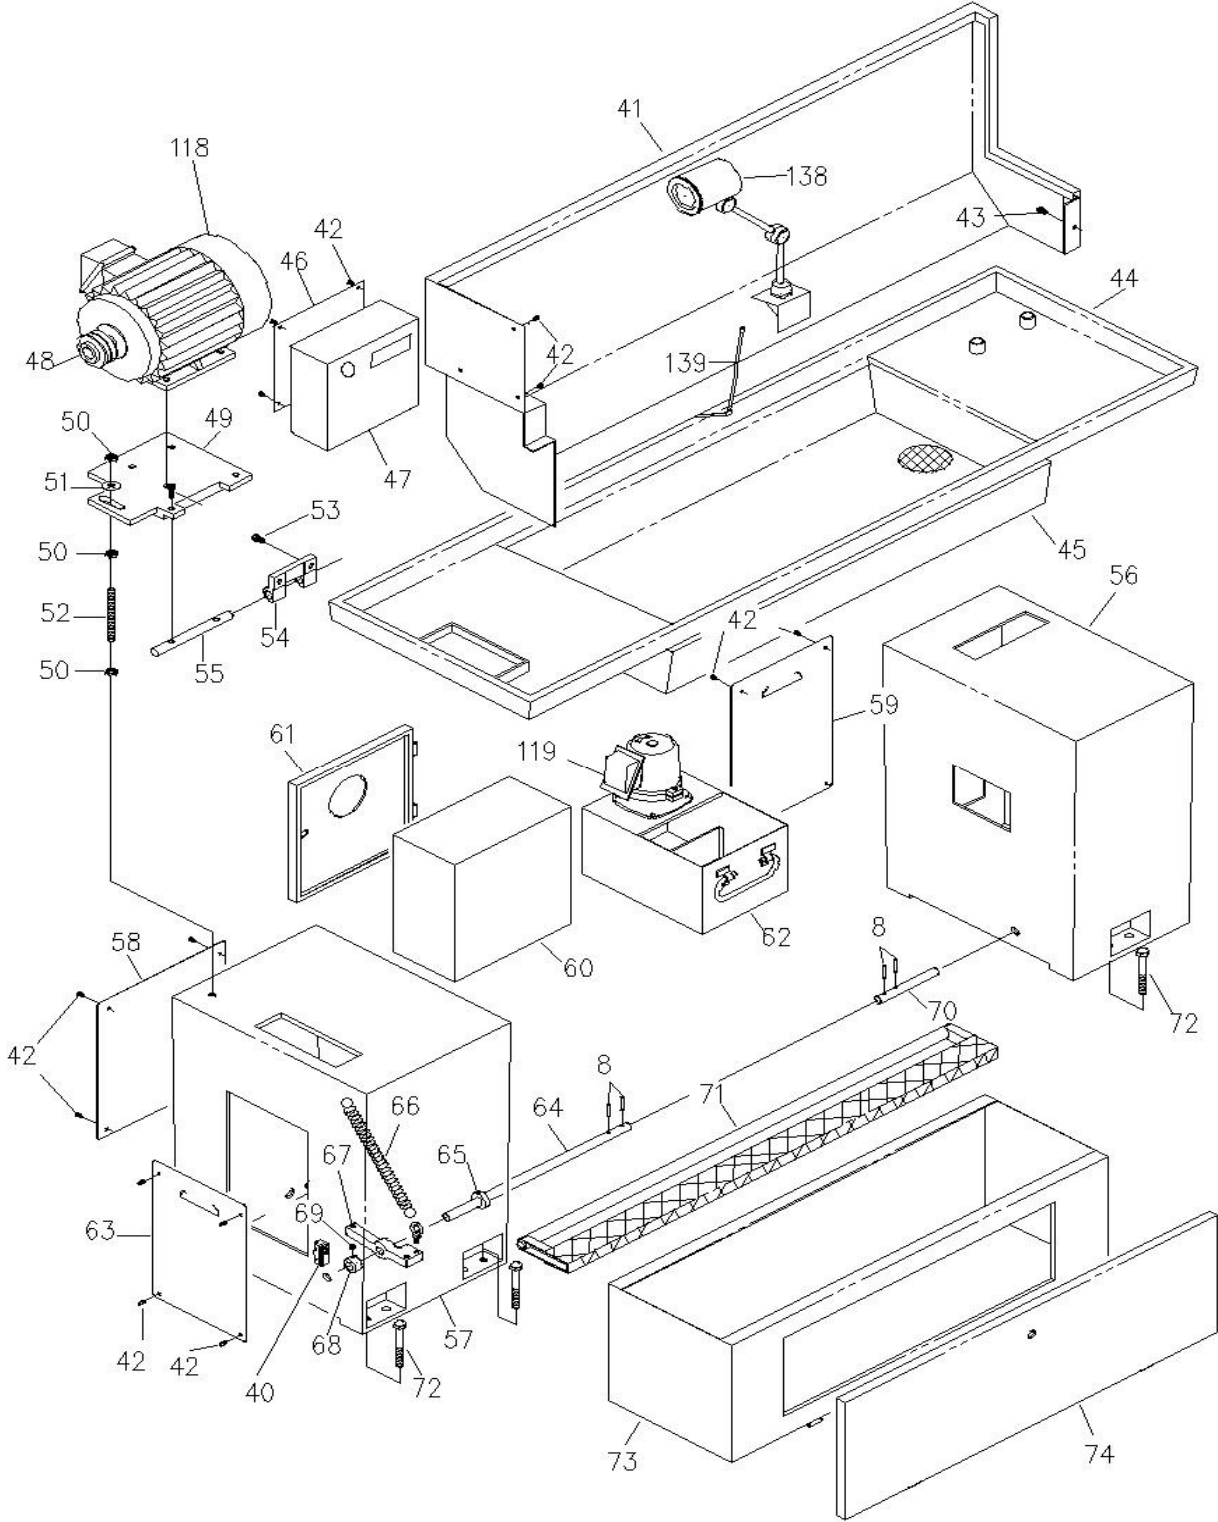

15.8.2 EVS-1440B Cabinet and Panel Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---|----------------------------------|-----|
| 41 | EVS1440B-G41 | Splash Guard | 1385x266x509H | 1 |
| 42 | TS-0254011 | Screw | 1/4x3/8 in | 19 |
| 43 | EBL1236VS-G43 | Cap Screw | 1/4x1-1/4 in | 1 |
| 44 | EVS1440B-G44 | Chip Pan | 1750x510x67H | 1 |
| 45 | EVS1440B-G45 | Chip Tray | 1050x480x122H | 1 |
| 46 | EBL1236VS-G46 | Guard | Gray color | 1 |
| 47 | EBL1236VS-G47 | Cover | Gray color | 1 |
| 48 | EBL1236VS-G48 | Pulley | | 1 |
| 49 | EBL1236VS-G49 | Motor Platform | 275x220Wx1/2"T(12.7mm) | 1 |
| 50 | TS-0561051 | Nut | 1/2 in | 3 |
| 51 | TS-0680061 | Washer | 1/2 in | 1 |
| 52 | TS-0273121 | Socket Hex Set Screw | 1/2x3 in | 1 |
| 53 | TS-1504041 | Socket Head Cap Screw | M8x20mm | 2 |
| 54 | EBL1236VS-G54 | Bracket | 109Lx65W | 1 |
| 55 | EBL1236VS-G55 | Shaft | Ø3/4"x170L | 1 |
| 56 | EBL1236VS-G56 | Floor Stand | 500Wx300Lx620H | 1 |
| 57 | EBL1236VS-G57 | Floor Stand | 437Lx368Wx15H | 1 |
| 58 | EBL1236VS-G58 | Cover | 350Lx330Wx1.6T | 1 |
| 59 | EBL1236VS-G59 | Cover | 390Lx260Wx1.6T | 1 |
| 60 | EBL1236VS-G60 | Electric Box | 300x300x178x1.2T | 1 |
| 61 | EBL1236VS-G61 | Cover | 300x300x20x1.2T | 1 |
| | EBL1236VS-G60A | Electric Box Assembly (includes #60,61) | | 1 |
| 62 | EBL1236VS-G62 | Coolant Tank | 310Lx220Wx170H | 1 |
| 63 | EBL1236VS-G63 | Cover | 350Lx240Wx1.6T | 1 |
| 64 | EBL1236VS-G64 | Shaft | | 1 |
| 65 | EBL1236VS-G65 | Collar | | 1 |
| 66 | EBL1236VS-G66 | Spring | | 1 |
| 67 | EBL1236VS-G67 | Bolt | | 1 |
| 68 | EBL1236VS-G68 | Collar | | 1 |
| 69 | TS-1524011 | Set Screw | M8x8mm | 1 |
| 70 | EBL1236VS-G70 | Shaft | | 1 |
| 71 | EVS1440B-G71 | Brake Pad | 1550x150 | 1 |
| 72 | TS-0100041 | Cap Screw | 1/2x1/4 in | 6 |
| 73 | EVS1440B-G73 | Cabinet | 1068x305x300 | 1 |
| 74 | EVS1440B-G74 | Front Cover | 1060x300x20 | 1 |
| | EVS1440B-G73A | Cabinet Assembly (includes #73,74) | 1068x325x300 | 1 |
| 118 | EVS1440B-G118 | Main Motor | 3HP,230/460V,3PH | 1 |
| 119 | EVS1440B-G119 | Pump | 1/8HP,115/230V,1PH,prewired 230V | 1 |
| 138 | EVS1440B-G138 | Work Lamp | AC24V 9W 0.5m/500Lux | 1 |
| 139 | EVS1440B-G139 | Pipe | 115mm | 1 |
| | EBL1236VS-GA32 | Belt | A32 | 2 |
| | EVS1440B-TB | Tool Box (see Figure 6-1 for contents) | | |


15.9.1 EVS-1440B End Gear Assembly – Exploded View

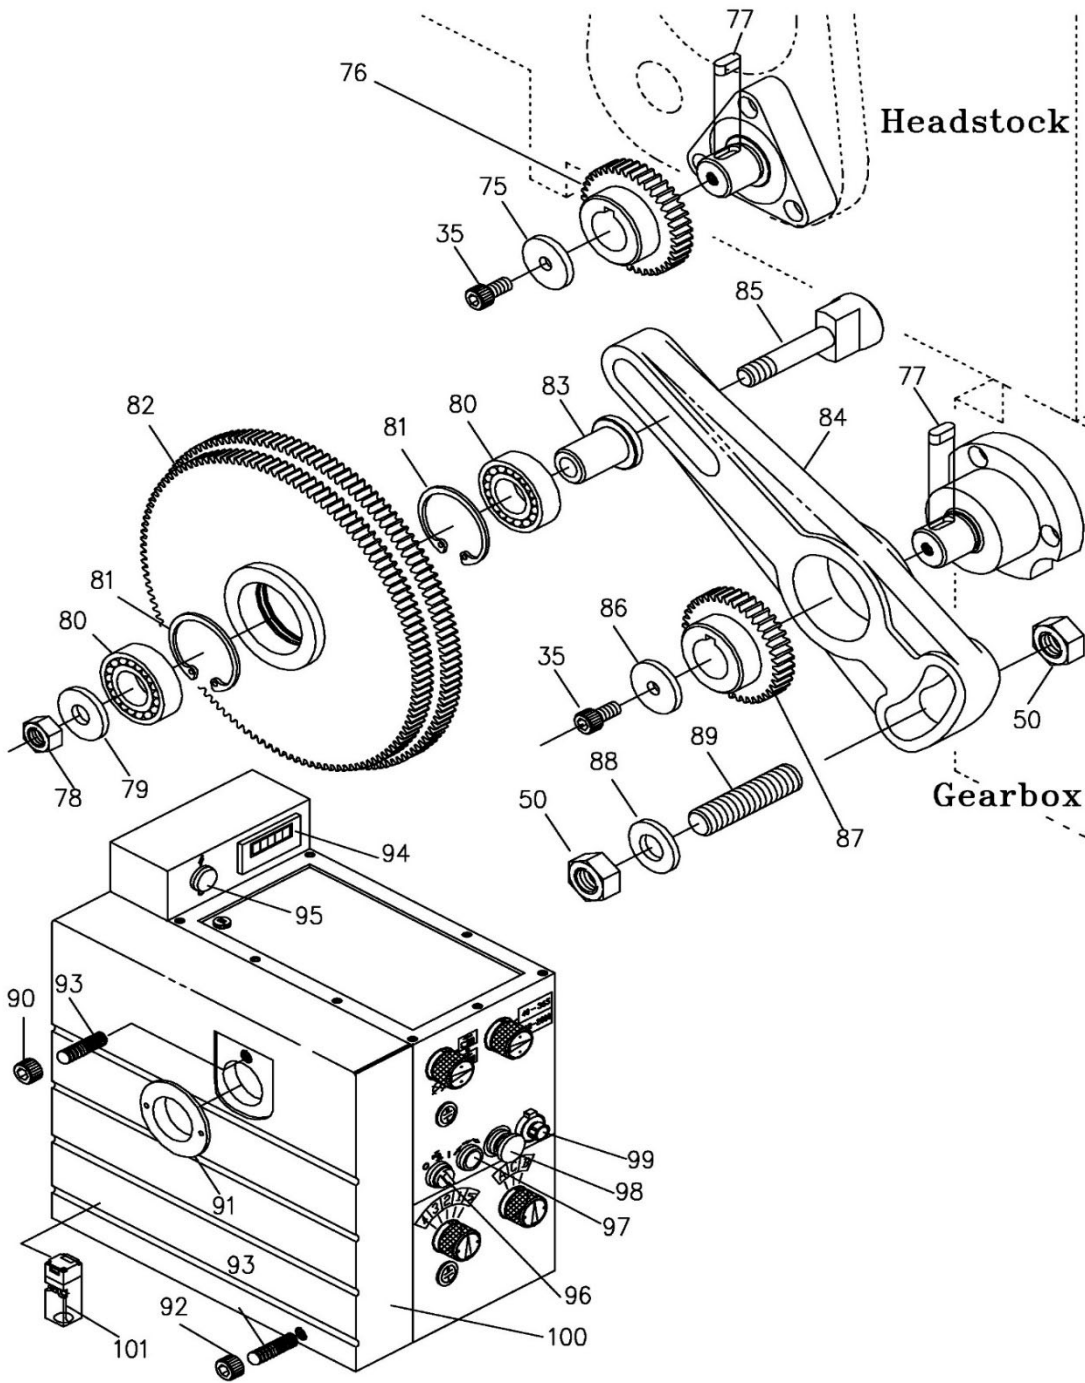

15.9.2 EVS-1440B End Gear Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---------------------------------------|---------------|-----|
| 35 | TS-1503031 | Socket Head Cap Screw | M6x12mm | 2 |
| 50 | TS-0561051 | Nut | 1/2 in | 2 |
| 75 | EBL1236VS-G75 | Washer | Ø25xØ1/4"x3T | 2 |
| 76 | EBL1236VS-G76 | Change Gear | 26T | 1 |
| 77 | EBL1236VS-G77 | Key | 5x12mm | 2 |
| 78 | TS-0561031 | Nut | 3/8 in | 1 |
| 79 | EBL1236VS-G79 | Washer | Ø25xØ3/8"x2T | 1 |
| 80 | BB-6003Z | Bearing | No.6003Z | 2 |
| 81 | EBL1236VS-G81 | Circlip | R-35mm | 2 |
| 82 | EBL1236VS-G82 | Double Gear | 120/127T | 1 |
| 83 | EBL1236VS-G83 | Shaft Collar | Ø25xØ3/8"x29L | 1 |
| 84 | EBL1236VS-G84 | Swing Frame | | 1 |
| 85 | EBL1236VS-G85 | Shaft | Ø25x65L | 1 |
| 86 | EBL1236VS-G86 | Washer | | 1 |
| 87 | EBL1236VS-G87 | Change Gear | 52T | 1 |
| 88 | EBL1236VS-G88 | Washer | Ø25x1/2"x3T | 1 |
| 89 | TS-0273101 | Socket Hex Set Screw | 1/2x2 in | 1 |
| 90 | EBL1236VS-G90 | Nut | | 1 |
| 91 | EBL1236VS-G91 | Collar | | 1 |
| 92 | EBL1236VS-G92 | Nut | | 1 |
| 93 | EBL1236VS-G93 | Shaft | | 2 |
| 94 | EBL1236VS-G94 | RPM Speed Meter | | 1 |
| 95 | EVS1440B-G95 | Pilot Light | ANPL-22 | 1 |
| 96 | EVS1440B-G96 | Coolant Selecting Switch | ASS-22 | 1 |
| 97 | EVS1440B-G97 | Jogging Push Button Switch | APB-22 | 1 |
| 98 | EVS1440B-G98 | Emergency Stop Switch | ALEPE-22 | 1 |
| 99 | EVS1440B-G99 | Variable Speed Selector | RV24NY20S | 1 |
| 100 | EVS1440B-G100 | End Cover | | 1 |
| 101 | EBL1236VS-G101 | End Cover Limit Switch | | 1 |
| | EVS1440B-CGS | Change Gear Set (50/46/44/40/35/30 T) | | 1 |


15.10.1 EVS-1440B Chuck Guard Assembly – Exploded View

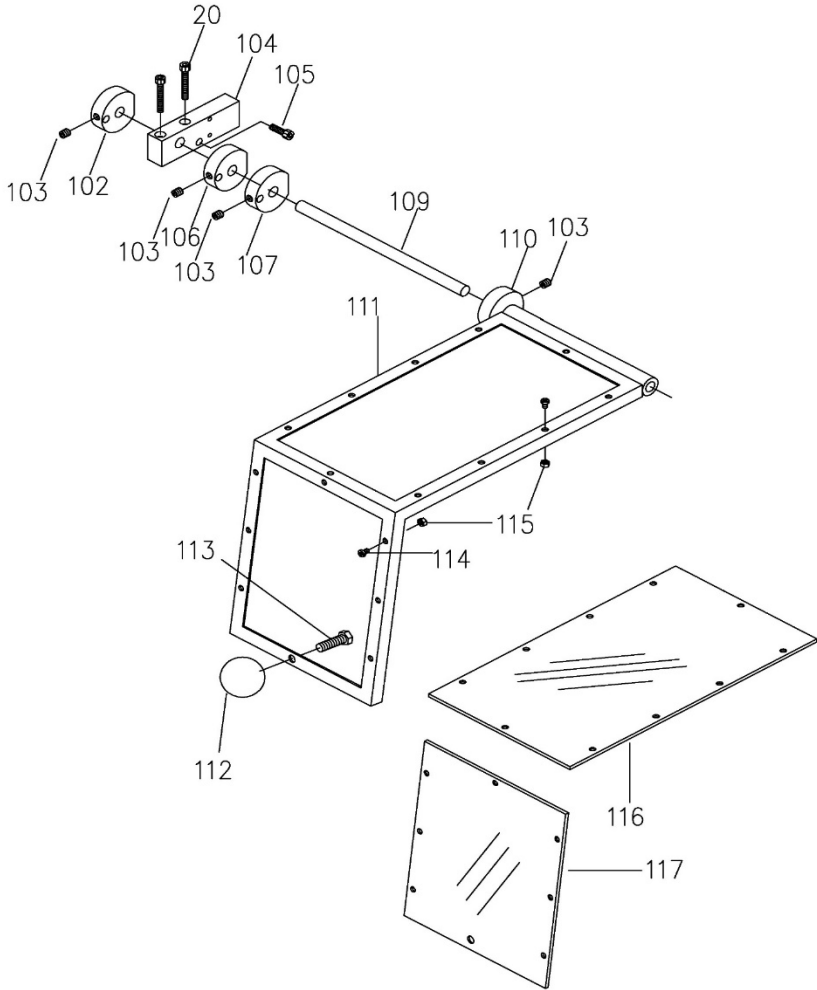

15.10.2 EVS-1440B Chuck Guard Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|-----------------------|--------------|-----|
| 20 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 2 |
| 102 | EBL1236VS-G102 | Cam | | 1 |
| 103 | TS-1523021 | Set Screw | M6x8mm | 4 |
| 104 | EBL1236VS-G104 | Keep Assembly | | 1 |
| 105 | TS-1503021 | Socket Head Cap Screw | M6x10mm | 1 |
| 106 | EBL1236VS-G106 | Collar | | 1 |
| 107 | EBL1236VS-G107 | Cam | | 1 |
| 109 | EBL1236VS-G109 | Shaft | | 1 |
| 110 | EBL1236VS-G110 | Collar | | 1 |
| 111 | EBL1236VS-G111 | Chuck Guard | | 1 |
| 112 | EBL1236VS-G112 | Handle | PVC | 1 |
| 113 | TS-1505031 | Socket Head Cap Screw | M10x25mm | 1 |
| 114 | EBL1236VS-G114 | Screw | 3/16x1/4 in | 18 |
| 115 | EBL1236VS-G115 | Nut | 3/16 in | 18 |
| 116 | EBL1236VS-G116 | Window | 3Tx193x343mm | 1 |
| 117 | EBL1236VS-G117 | Window | 3Tx193x230mm | 1 |


15.11.1 EVS-1440B Coolant Pump Assembly – Exploded View

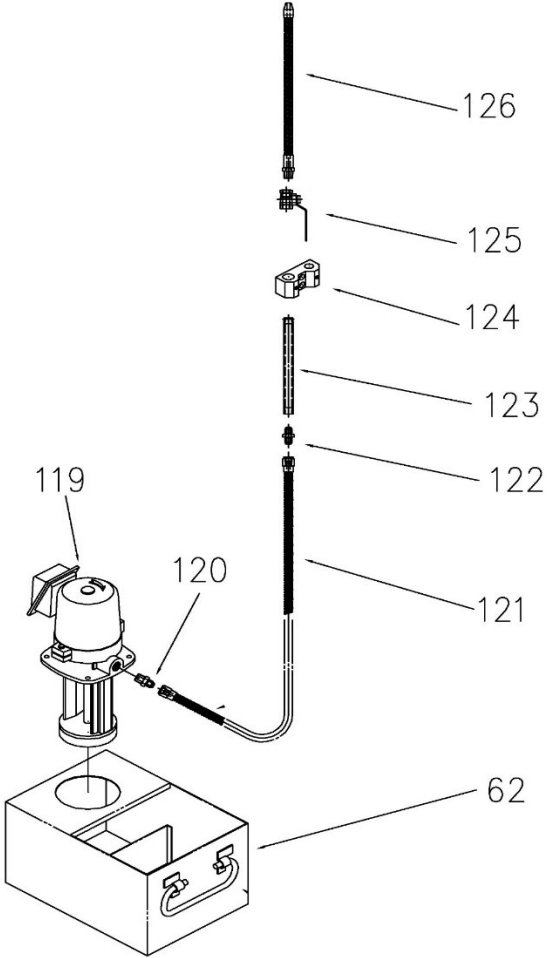

15.11.2 EVS-1440B Coolant Pump Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---------------|----------------------------------|-----|
| 62 | EBL1236VS-G62 | Coolant Tank | 310Lx220Wx170H | 1 |
| 119 | EVS1440B-G119 | Pump | 1/8HP,115/230V,1PH,prewired 230V | 1 |
| 120 | EBL1236VS-G120 | Nipple | | 1 |
| 121 | EBL1236VS-G121 | Flexible Hose | | 1 |
| 122 | EBL1236VS-G122 | Nipple | | 1 |
| 123 | EBL1236VS-G123 | Tube | | 1 |
| 124 | EBL1236VS-G124 | Bracket | | 1 |
| 125 | EBL1236VS-G125 | Value Gate | | 1 |
| 126 | EBL1236VS-G126 | Spraying Pipe | | 1 |


15.12.1 EVS-1440B Dial Indicator Assembly – Exploded View

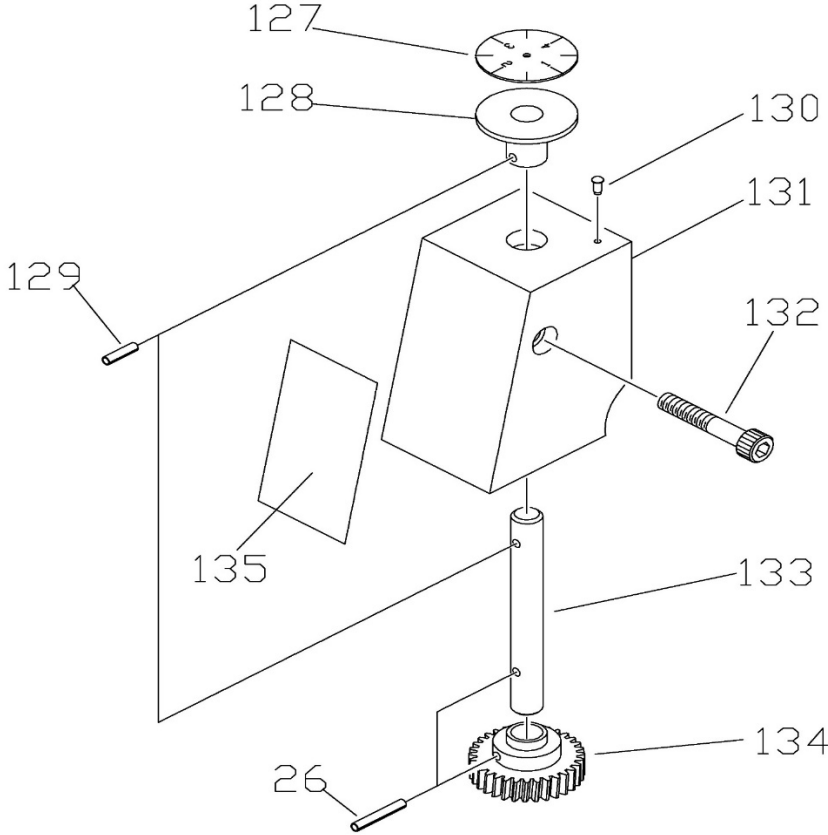

15.12.2 EVS-1440B Dial Indicator Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|-----------------------|----------------|-----|
| 26 | EBL1236VS-G26 | Roll Pin | Ø3x20mm | 1 |
| 127 | EBL1236VS-G127 | Plate | | 1 |
| 128 | EBL1236VS-G128 | Dog | Ø60xØ19.05x15W | 1 |
| 129 | EBL1236VS-G129 | Roll Pin | 3x12 mm | 1 |
| 130 | EBL1236VS-G130 | Nail | 2 mm | 1 |
| 131 | EBL1236VS-G131 | Guard | 75x59x45 | 1 |
| 132 | EBL1236VS-G132 | Socket Head Cap Screw | M6x50mm | 1 |
| 133 | EBL1236VS-G133 | Shaft | Ø9.5x81L | 1 |
| 134 | EBL1236VS-G134 | Gear | Ø34Ø9.5x17L | 1 |
| 135 | EBL1236VS-G135 | Threading Plate | | 1 |


15.13.1 EVS-1440B Chuck Assembly – Exploded View

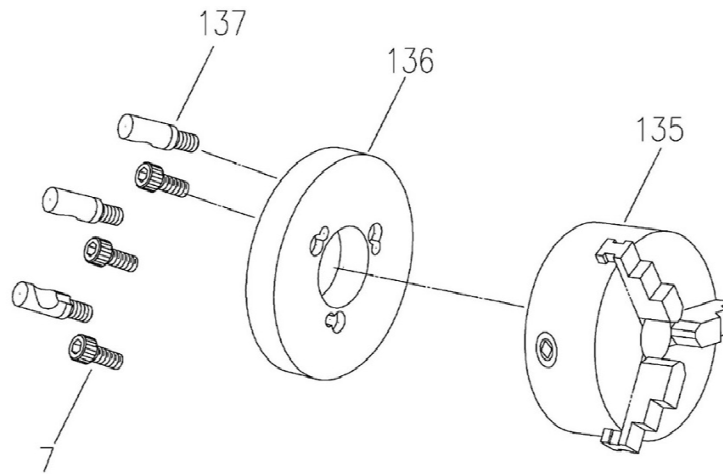

15.13.2 EVS-1440B Chuck Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|-----------------------|---------|-----|
| 7 | TS-1503051 | Socket Head Cap Screw | M6x20mm | 3 |
| 135 | EBL1236VS-SK6 | 3-Jaw Scroll Chuck | 6" | 1 |
| 136 | EBL1236VS-G136 | Backplate | 6" | 1 |
| 137 | EBL1236VS-G137 | Stud | D1-4 | 3 |


15.14.1 EVS-1440B Face Plate (OPTIONAL) – Exploded View

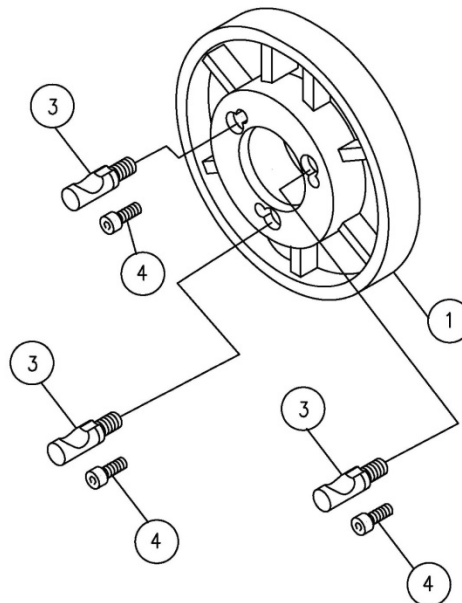

15.14.2 EVS-1440B Face Plate (OPTIONAL) – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|-----------------------|------------|-----|
| 1 | E1440VS-FP02 | Face Plate 12" | Ø300x40Hmm | 2 |
| 3 | EBL1236VS-G137 | Stud | D1-4 | 3 |
| 4 | TS-1503051 | Socket Head Cap Screw | M6x20 | 3 |


15.15.1 EVS-1440B Four-Position Stop Assembly – Exploded View

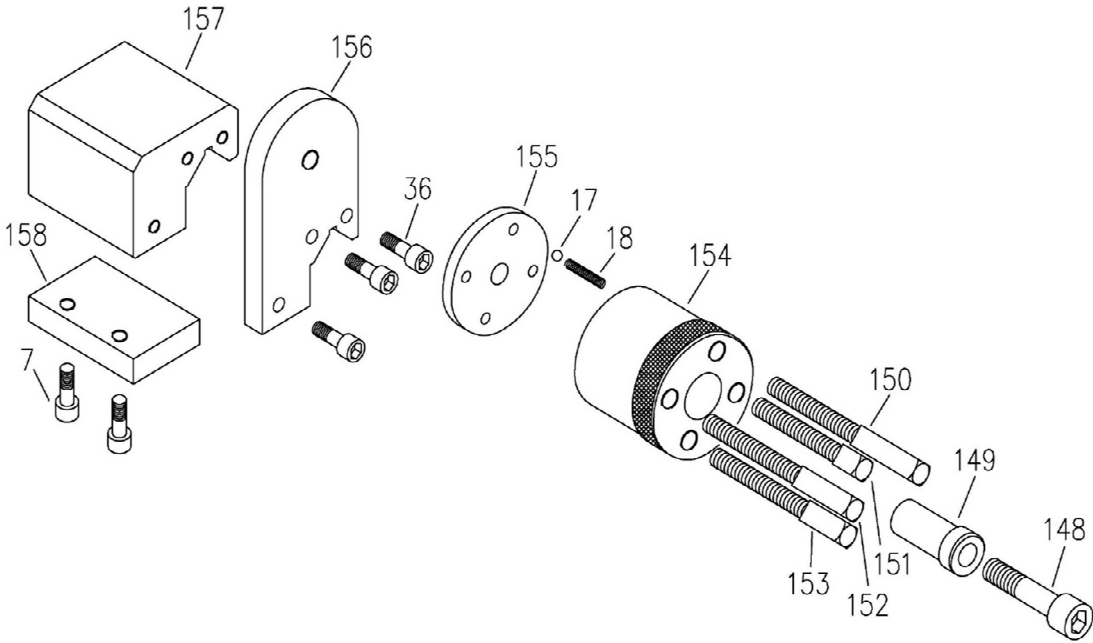

15.15.2 EVS-1440B Four-Position Stop Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|---------------|--------------------------|---------------|-----|
| 7 | TS-1503051 | Socket Head Cap Screw | M6x20mm | 2 |
| 17 | SB-1/4 | Steel Ball | 1/4 in. dia. | 1 |
| 18 | E1340VS-G18 | Spring | 1/4 in.x35mm. | 1 |
| 36 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 3 |
| 148 | E1440VS-I148 | Socket Head Cap Screw | 3/8x70mm | 1 |
| 149 | E1440VS-I149 | Sleeve | | 1 |
| 150 | E1440VS-I150 | Screw | | 1 |
| 151 | E1440VS-I151 | Screw | | 1 |
| 152 | E1440VS-I152 | Screw | | 1 |
| 153 | E1440VS-I153 | Screw | | 1 |
| 154 | E1440VS-I154 | Collar | | 1 |
| 155 | E1440VS-I155 | Cover | | 1 |
| 156 | E1440VS-I156 | Plate | | 1 |
| 157 | E1440VS-I157 | Base | | 1 |
| 158 | E1440VS-I158 | Strip | | 1 |
| | E1440VS-I4PSA | 4 Position Stop Assembly | | 1 |


15.16.1 EVS-1440B Chuck Key Bracket Assembly – Exploded View

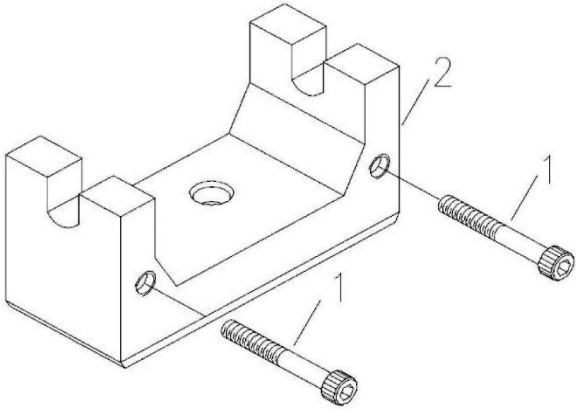

15.16.2 EVS-1440B Chuck Key Bracket Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|--------------|-----------------------|---------|-----|
| 1 | TS-1504111 | Socket Head Cap Screw | M8x55mm | 2 |
| 2 | EVS1440B-CKB | Chuck Key Bracket | | 1 |


15.17.1 EVS-1440B Steady Rest Assembly – Exploded View

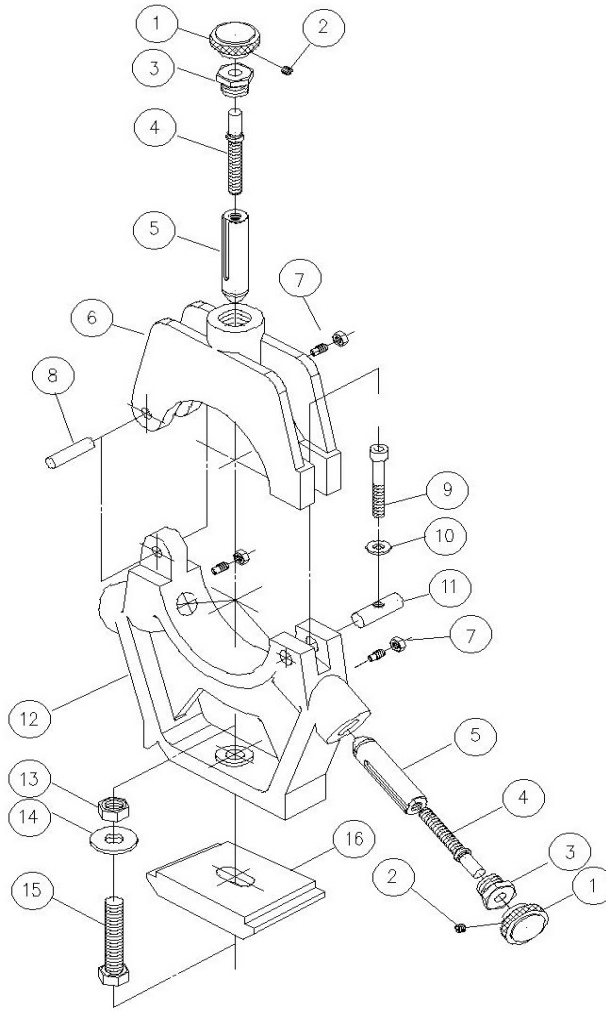

15.17.2 EVS-1440B Steady Rest Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-----------------------|------------------------------|-----------------|-----|
| 1 | E1440VS-FR01 | Nut | Ø20xØ24x25L | 3 |
| 2 | TS-1523011 | Set Screw | M6x6mm | 3 |
| 3 | E1440VS-FR03 | Screw | Ø23x17L | 3 |
| 4 | E1440VS-FR04 | Set Screw | Ø9.5x77L | 3 |
| | E1440VS-FR01A | Nut Assembly (includes #1~4) | | 3 |
| 5 | EVS1440B-SR05 | Bronze Shaft | Ø18.8x78L | 3 |
| 6 | E1236VS-SR06 | Arm | 168x32x125 | 1 |
| 7 | TS-1523041/TS-2311061 | Set Screw w/Nut | M6x12L + M6 nut | 3 |
| 8 | E1440VS-SR08 | Shaft | Ø8x40L | 1 |
| 9 | TS-1504111 | Socket Head Cap Screw | M8x55mm | 1 |
| 10 | TS-0732061 | Washer | 3/8 in | 1 |
| 11 | E1440VS-SR11 | Pin | Ø12.7x40L | 1 |
| 12 | E1236VS-SR12 | Base | 171x32x153 | 1 |
| 13 | TS-0561051 | Nut | 1/2 in | 1 |
| 14 | TS-0680061 | Washer | 1/2 in | 1 |
| 15 | TS-0070071 | Cap Screw | 1/2x2-1/2 in | 1 |
| 16 | EBL1236-F30 | Clamp Plate | 85Lx94Wx28h | 1 |


15.18.1 EVS-1440B Follow Rest Assembly – Exploded View

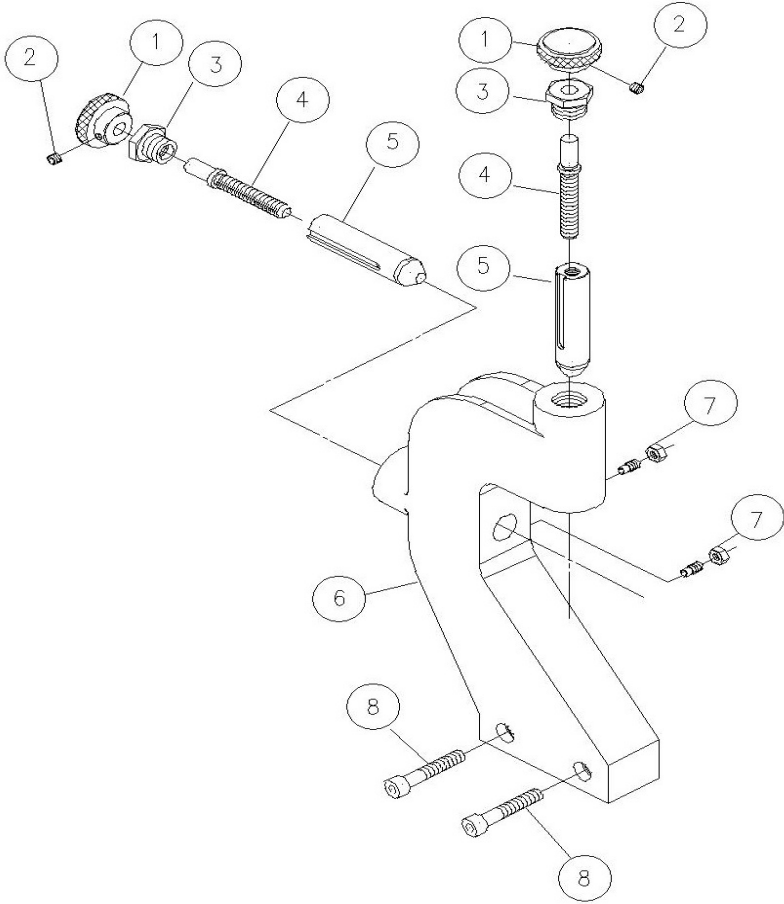

15.18.2 EVS-1440B Follow Rest Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-----------------------|------------------------------|-----------------|-----|
| 1 | E1440VS-FR01 | Nut | Ø20xØ24x25L | 2 |
| 2 | TS-1523011 | Set Screw | M6x6mm | 2 |
| 3 | E1440VS-FR03 | Screw | Ø23x17L | 2 |
| 4 | E1440VS-FR04 | Set Screw | Ø9.5x77L | 2 |
| | E1440VS-FR01A | Nut Assembly (includes #1~4) | | 2 |
| 5 | EVS1440B-FR05 | Bronze Shaft | Ø18.8x78L | 2 |
| 6 | E1236VS-FR06 | Follow Rest | 271x32x159 | 1 |
| 7 | TS-1523041/TS-2311061 | Set Screw w/Nut | M6x12L + M6 nut | 2 |
| 8 | TS-1490081 | Socket Head Cap Screw | M8x45mm | 2 |


15.19.1 #892035 Taper Attachment Assembly (OPTIONAL) – Exploded View

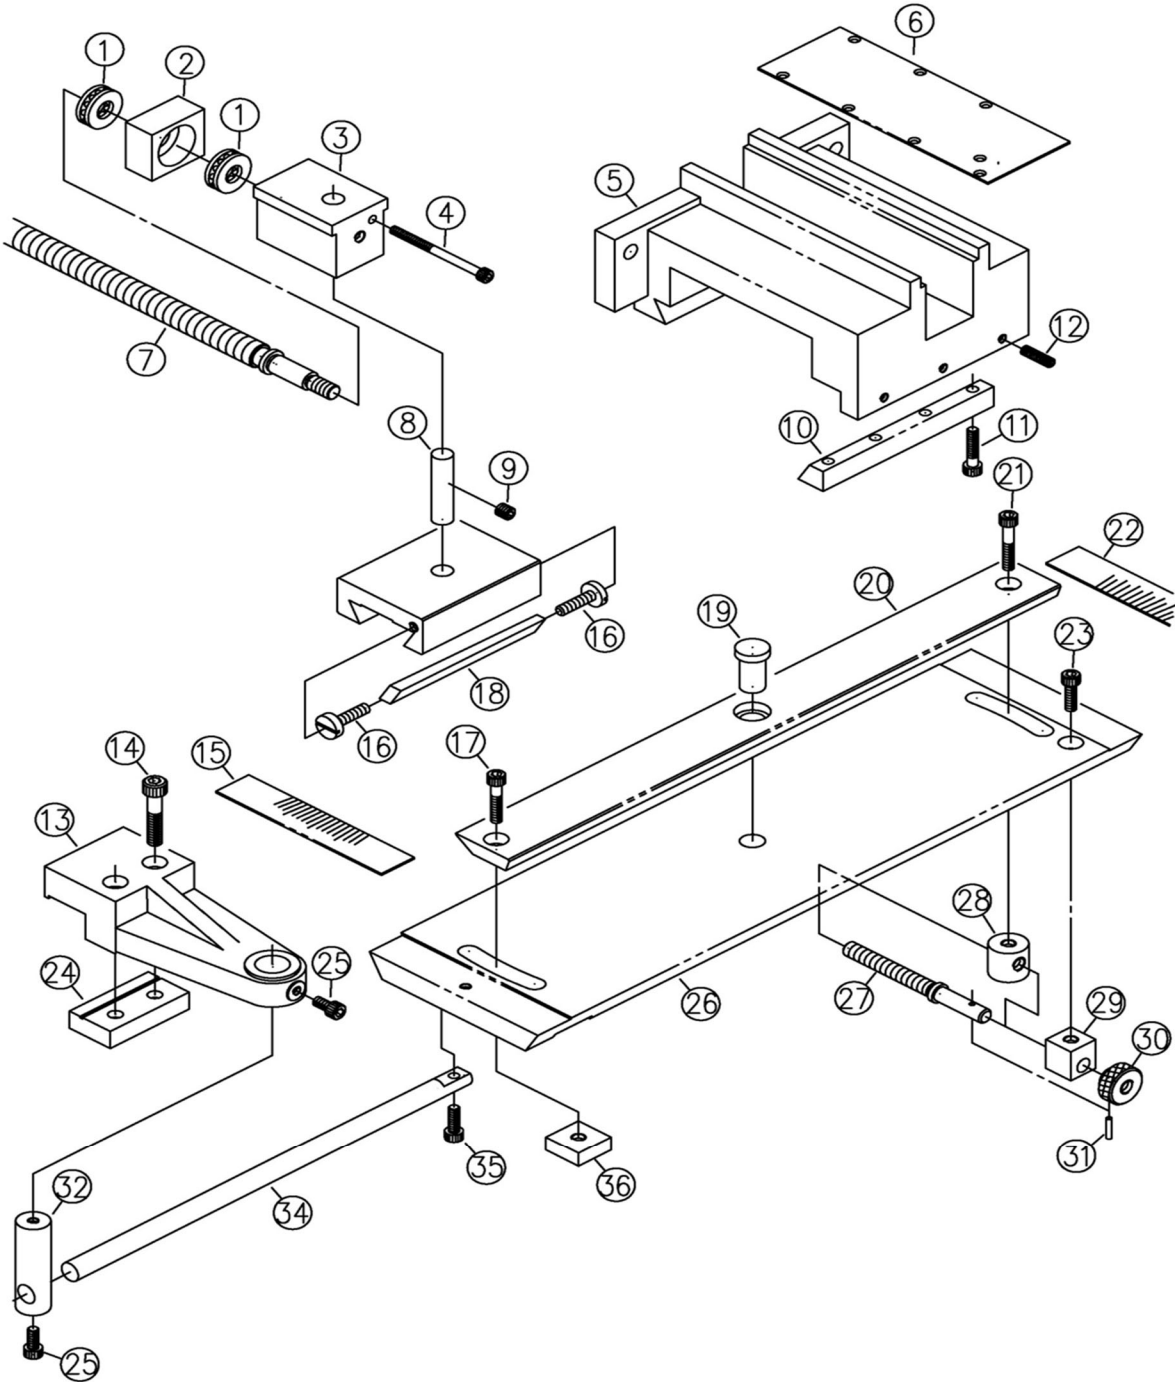

15.19.2 #892035 Taper Attachment Assembly (OPTIONAL) – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|-------------|-----------------------|--------------------|-----|
| 1 | E1440VS-J01 | Thrust No. 51101 | | 2 |
| 2 | E1440VS-J02 | Block | 52x20x35 | 1 |
| 3 | E1440VS-J03 | Yoke | 60x42x41.5 | 1 |
| 4 | E1440VS-J04 | Socket Head Cap Screw | M5x65MM | 1 |
| 5 | E1440VS-J05 | Base | 175x180x85 | 1 |
| 6 | E1440VS-J06 | Cover | 170x63x1.2 | 1 |
| 7 | E1440VS-J07 | Lead Screw | Ø5/8"x405L | 1 |
| 8 | E1440VS-J08 | Shaft | Ø12x50L | 1 |
| 9 | TS-1524011 | Set Screw | M8x8mm | 1 |
| 10 | E1440VS-J10 | Strip | 130x18.86(10.2)x15 | 1 |
| 11 | TS-1523061 | Set Screw | M6x20mm | 1 |
| 12 | TS-1503061 | Socket Head Cap Screw | M6x25mm | 1 |
| 13 | E1440VS-J13 | Bracket | 159x60x40 | 1 |
| 14 | TS-1504081 | Socket Head Cap Screw | M8x40mm | 1 |
| 15 | E1440VS-J15 | Angle Plate | 128x25x1.2 | 1 |
| 16 | E1440VS-J16 | Gib Screw | | 1 |
| 17 | TS-1503071 | Socket Head Cap Screw | M6x30mm | 1 |
| 18 | E1440VS-J18 | Gib | 110x7.27x5.57 | 1 |
| 19 | E1440VS-J19 | Shaft | | 1 |
| 20 | E1440VS-J20 | Lever | 420x40x15 | 1 |
| 21 | TS-1503081 | Socket Head Cap Screw | M6x35mm | 1 |
| 22 | E1440VS-J22 | Angle Plate | 126x25x1.2 | 1 |
| 23 | TS-2236181 | Socket Head Cap Screw | M6x18mm | 1 |
| 24 | E1440VS-J24 | Strip | 80x31x13 | 1 |
| 25 | TS-1503031 | Socket Head Cap Screw | M6x12mm | 2 |
| 26 | E1440VS-J26 | Base | 460x130x18 | 1 |
| 27 | E1440VS-J27 | Screw | Ø3/8"(Ø9.525)x105L | 1 |
| 28 | E1440VS-J28 | Nut | Ø22x22L | 1 |
| 29 | E1440VS-J29 | Strip | 19x19x22 | 1 |
| 30 | E1440VS-J30 | Nut | Ø28(Ø20)x19L | 1 |
| 31 | E1440VS-J31 | Pin | 3x15mm | 1 |
| 32 | E1440VS-J32 | Pivot | Ø3/4"x65L | 1 |
| 34 | E1440VS-J33 | Rod | Ø1/2"x300L | 1 |
| 35 | TS-1503041 | Socket Head Cap Screw | M6x16mm | 1 |
| 36 | E1440VS-J35 | Strip | 25x25x10 | 1 |
| | 892035 | Taper Component | | 1 |


15.20.1 EVS-1440B Control Plate Assembly – Exploded View

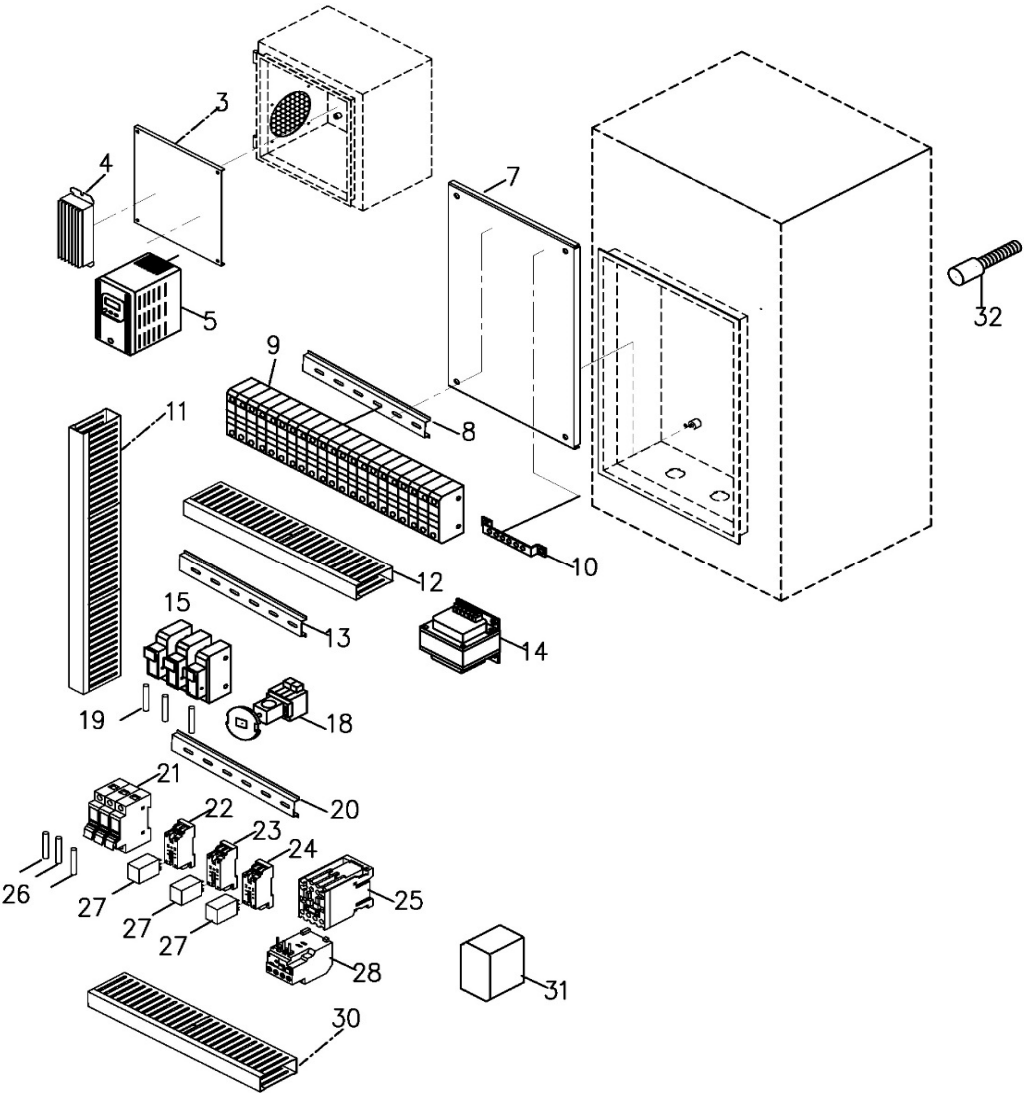








15.20.2 EVS-1440B Control Plate Assembly – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|---------------|-----------------------------|-----------------------|-----|
| 3 | EBL1236VS-H03 | Plate | | 1 |
| 4 | 300W70OHM | Brake Resistance | 300W 70Ω 220V | 1 |
| 5 | EBL1236VS-H05 | Inverter | VFD022B23A/AC240V/3HP | 1 |
| 7 | EBL1236VS-H07 | Plate | | 1 |
| 8 | EBL1236VS-H08 | Track | | 1 |
| 9 | EVS1440B-H09 | Terminal Blocks (Non-CSA) | 10A /30 | 1 |
| 10 | EBL1236VS-H10 | Earthing Terminal Blocks | | 1 |
| 11 | EBL1236VS-H11 | Trunking | | 1 |
| 12 | EBL1236VS-H12 | Trunking | | 1 |
| 13 | EBL1236VS-H13 | Track | | 1 |
| 14 | EBL1236VS-H14 | Control Circuit Transformer | 120VC /AC24V(5A) | 1 |
| 15 | EVS1440B-H15 | Fuse Box (Non-CSA) | TFBR-101 | 3 |
| 18 | EBL1236VS-H18 | Main Power Switch (QS1) | 690VAC/25A | 1 |
| 19 | EVS1440B-F5A | Fuse (Non-CSA) | 5A TFB-101N | 3 |
| 20 | EBL1236VS-H20 | Track | | 1 |
| 21 | EBL1236VS-H21 | Fuse Boxes (F1) | CT-F101 10x38 | 1 |
| 22 | EBL1236VS-H22 | Relay Socket | | 1 |
| 23 | EBL1236VS-H23 | Relay Socket | | 1 |
| 24 | EBL1236VS-H24 | Relay Socket | | 1 |
| 25 | EBL1236VS-H25 | Magnetic Contactor | CU-11/AC24V/(3A1b) | 1 |
| 26 | EVS1440B-F32A | Fuse (Non-CSA) | 32A CT- FB101 | 3 |
| 27 | EBL1236VS-H27 | Relay (KA1,KA2, KA3) | MY4N-J/ A24V | 3 |
| 28 | EBL1236VS-H28 | Thermal Overload Relay | RHU-10K1/ 0.45~0.63A | 1 |
| 30 | EBL1236VS-H30 | Trunking | | 1 |
| 31 | EVS1440B-H31 | Power Supply | PU N AC 24V | 1 |
| 32 | EVS1440B-H32 | Sensor | PNP M12x40 | 1 |

16.0 Electrical Connections for EVS-1440B

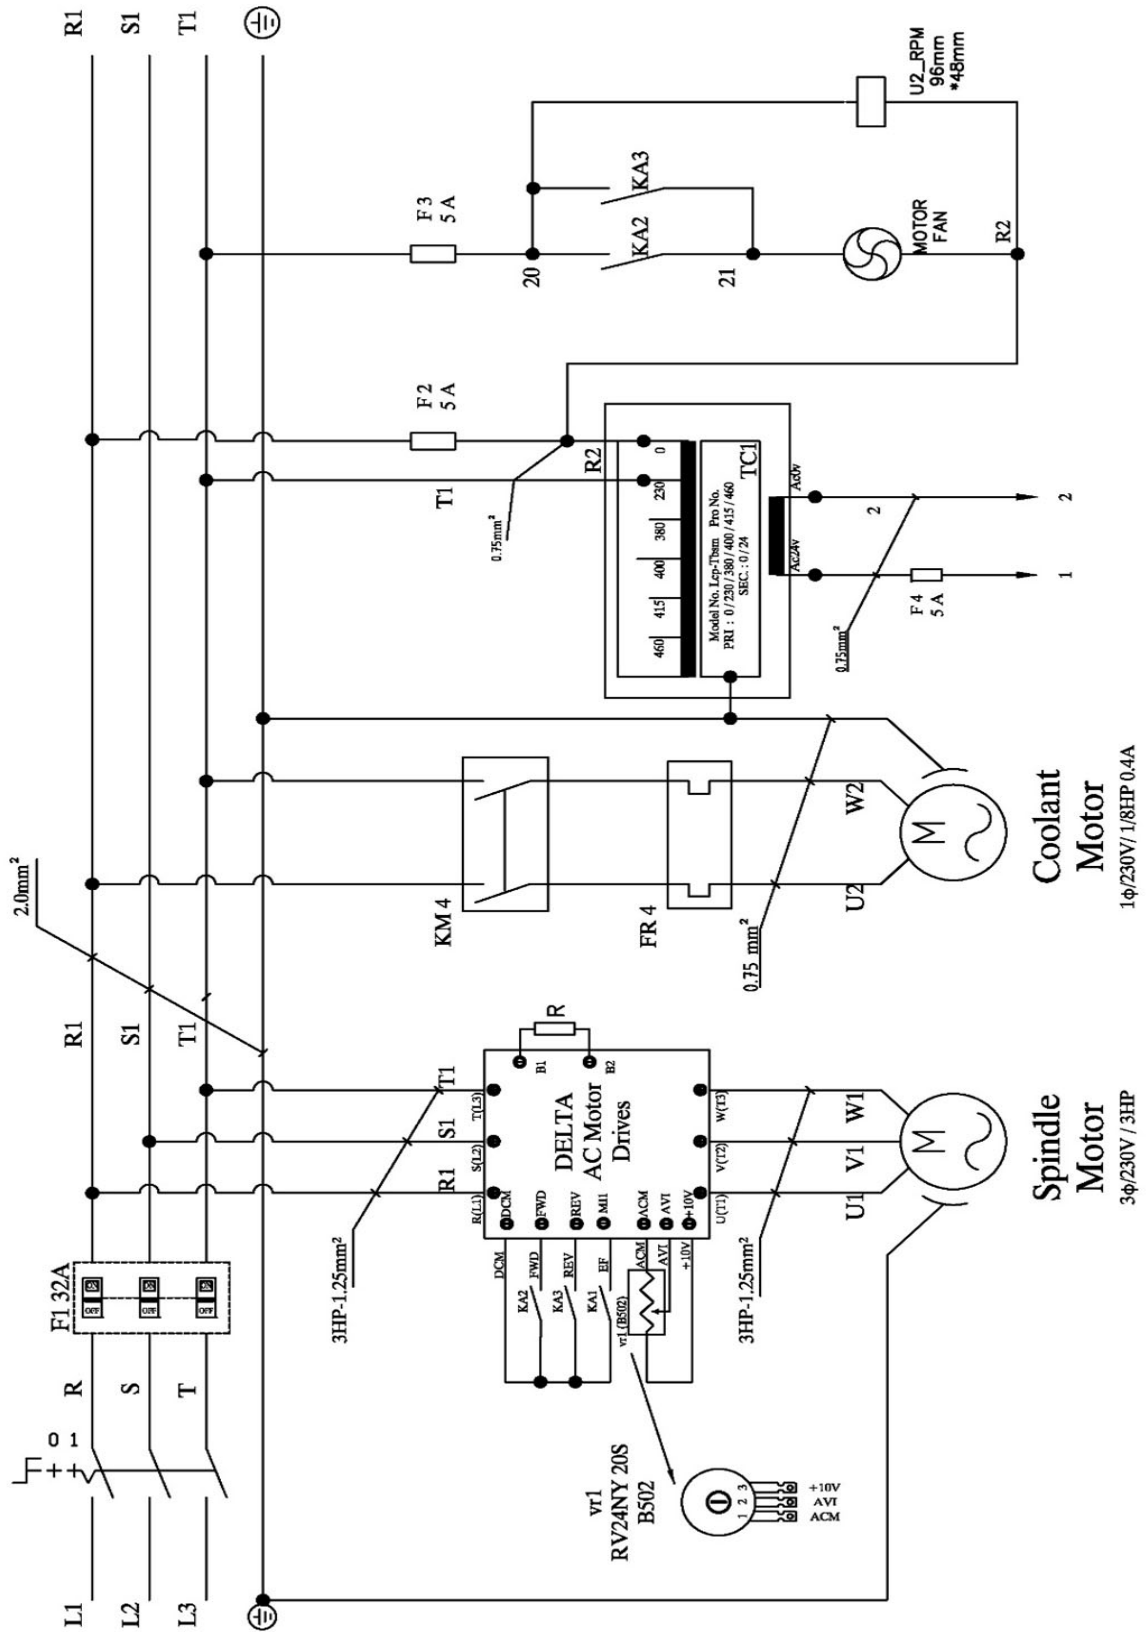

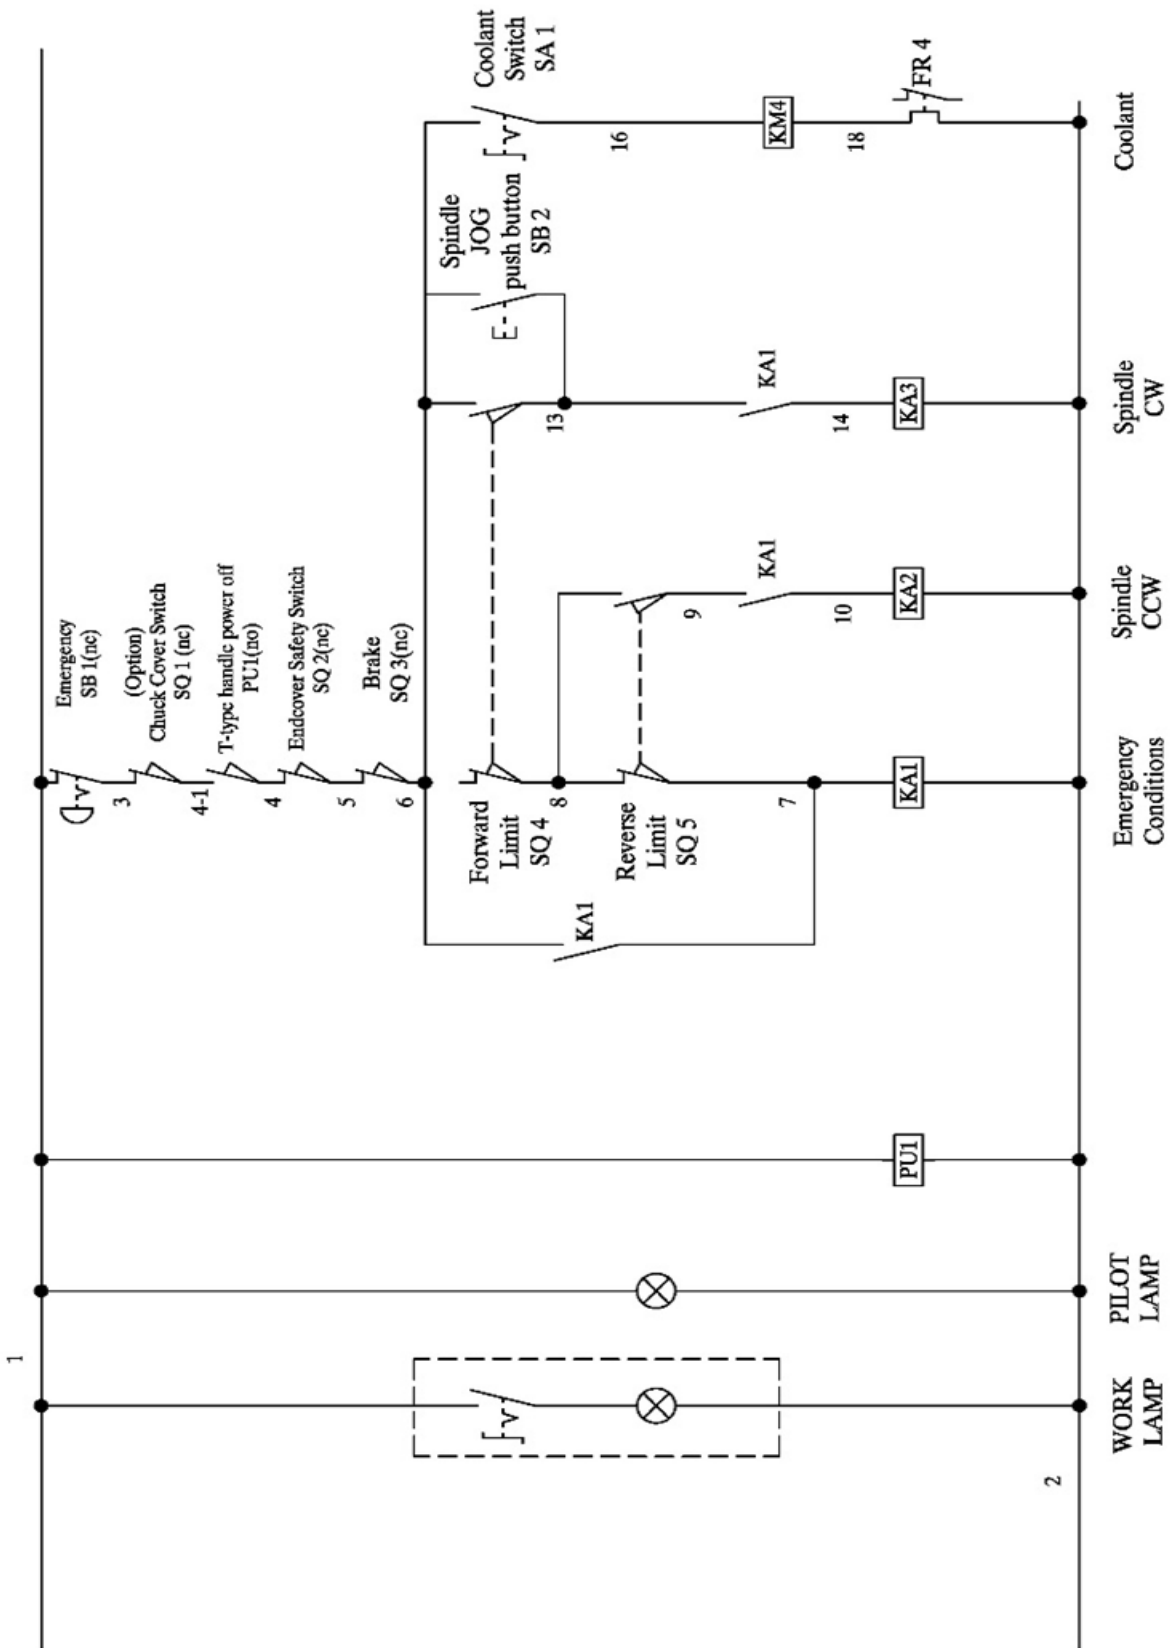

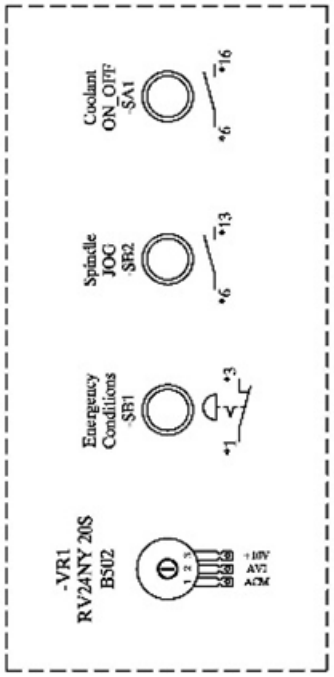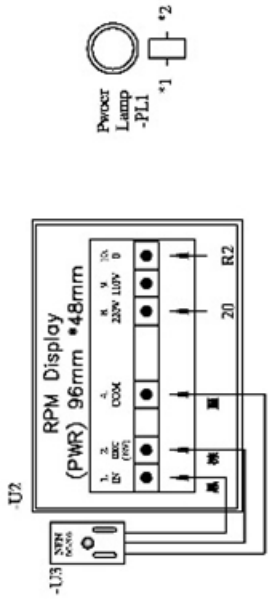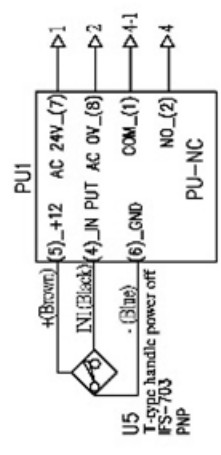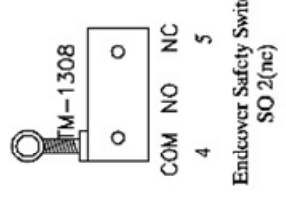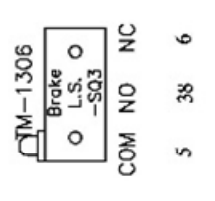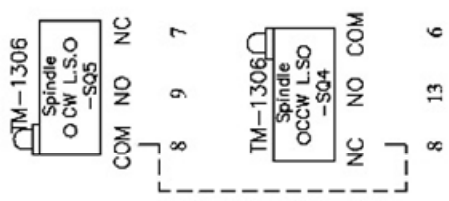

17.0 Warranty and service

JET warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact Technical Service by calling 1-800-274-6846, 8AM to 5PM CST, Monday through Friday.

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official JET branded website.

- JET products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90 day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations or lack of maintenance. JET woodworking machinery is designed to be used with Wood. Use of these machines in the processing of metal, plastics, or other materials outside recommended guidelines may void the warranty. The exceptions are acrylics and other natural items that are made specifically for wood turning.

Warranty Limitations

Woodworking products with a Five Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty. Please contact Technical Service at 1-800-274-6846 for further clarification.

How to Get Technical Support

Please contact Technical Service by calling 1-800-274-6846. **Please note that you will be asked to provide proof of initial purchase when calling.** If a product requires further inspection, the Technical Service representative will explain and assist with any additional action needed. JET has Authorized Service Centers located throughout the United States. For the name of an Authorized Service Center in your area call 1-800-274-6846 or use the Service Center Locator on the JET website.

More Information

JET is constantly adding new products. For complete, up-to-date product information, check with your local distributor or visit the JET website.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

JET LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

JET SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

JET sells through distributors only. The specifications listed in JET printed materials and on official JET website are given as general information and are not binding. JET reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever. JET® branded products are not sold in Canada by JPW Industries, Inc.

Product Listing with Warranty Period

| |
|--|
| 90 Days – Parts; Consumable items |
| 1 Year – Motors; Machine Accessories |
| 2 Year – Metalworking Machinery; Electric Hoists, Electric Hoist Accessories; Woodworking Machinery used for industrial or commercial purposes |
| 5 Year – Woodworking Machinery |
| Limited Lifetime – JET Parallel clamps; VOLT Series Electric Hoists; Manual Hoists; Manual Hoist Accessories; Shop Tools; Warehouse & Dock products; Hand Tools; Air Tools |

NOTE: JET is a division of JPW Industries, Inc. References in this document to JET also apply to JPW Industries, Inc., or any of its successors in interest to the JET brand.



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com