


## WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.


Route 145, Winthrop Road,  
Chester, Connecticut 06412  
Phone: (860) 526-9504  
Fax: (860) 526-4078

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

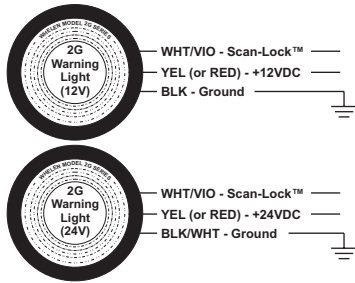

### GROMMET MOUNTING / HOLE CHART

Mounting Surface Thickness	Mounting Hole Diameter
.0625" (1/16")	4.47"
.125" (1/8")	4.50"
.1875" (3/16")	4.50"
.25" (1/4")	4.53"
.375" (3/8")	4.56"

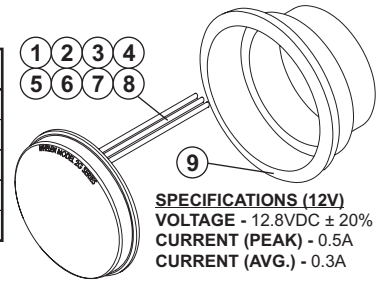

### Installation:

- Using the chart provided, cut an appropriately sized hole (based on the thickness of the mounting surface).
- Install the rubber grommet into the vehicle, then snap the lighthouse into the rubber grommet. Extend the wires to your power source and switch(s). **All customer supplied wires that connect to the positive terminal of the battery, must be sized to supply at least 125% of the maximum operating current and be fused at the battery to carry the load.**
- Wire the lighthouse using the wiring diagrams shown above.

### WARNING!

As mounting this product requires drilling holes, the installer **MUST** be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.

### SPECIFICATIONS (24V)

VOLTAGE - 25.6VDC ± 20%  
CURRENT (PEAK) - 0.30A  
CURRENT (AVG.) - 0.120A

See reverse for Scan-Lock™ procedures and flash patterns


©2005 Whelen Engineering Company Inc.  
Form No.13998A (062207)

## WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.


Route 145, Winthrop Road,  
Chester, Connecticut 06412  
Phone: (860) 526-9504  
Fax: (860) 526-4078

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

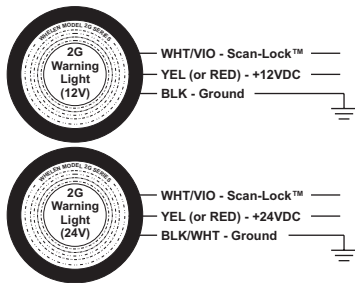

### GROMMET MOUNTING / HOLE CHART

Mounting Surface Thickness	Mounting Hole Diameter
.0625" (1/16")	4.47"
.125" (1/8")	4.50"
.1875" (3/16")	4.50"
.25" (1/4")	4.53"
.375" (3/8")	4.56"

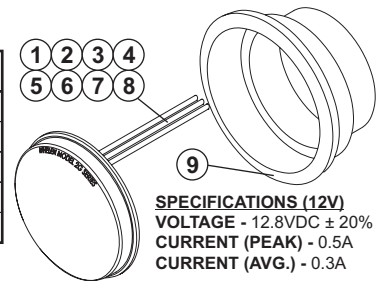

### Installation:

- Using the chart provided, cut an appropriately sized hole (based on the thickness of the mounting surface).
- Install the rubber grommet into the vehicle, then snap the lighthouse into the rubber grommet. Extend the wires to your power source and switch(s). **All customer supplied wires that connect to the positive terminal of the battery, must be sized to supply at least 125% of the maximum operating current and be fused at the battery to carry the load.**
- Wire the lighthouse using the wiring diagrams shown above.

### WARNING!

As mounting this product requires drilling holes, the installer **MUST** be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.

### SPECIFICATIONS (24V)

VOLTAGE - 25.6VDC ± 20%  
CURRENT (PEAK) - 0.30A  
CURRENT (AVG.) - 0.120A

See reverse for Scan-Lock™ procedures and flash patterns

©2005 Whelen Engineering Company Inc.  
Form No.13998A (062207)

**Scan-Lock™** - The WHT/VIO wire is used for Scan-Lock™ pattern control. A momentary switch (normally open) should be used to control this function. Scan-Lock™ operation is as follows:

**TO CYCLE THROUGH ALL PATTERNS:** Apply the WHT/VIO wire to +VBAT for less than 1 second and release to cycle forward. Apply the WHT/VIO wire to +VBAT for more than 1 second and release to cycle backward.

**TO SET A PATTERN AS DEFAULT:** When the desired pattern is displayed, allow it to run for more than 5 seconds. The lighting system will now display this pattern when active.

**TO RESET TO THE FACTORY DEFAULT PATTERN:** With the flasher off, apply the WHT/VIO wire to +VBAT and turn power back on. When the default pattern is displayed, remove the WHT/VIO wire from voltage and allow the pattern to run for at least 5 seconds.

QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
	*		01-0664265-*1	2G GROMMET MOUNT WARNING LIGHT (12V)
*			01-0664265-*2	2G GROMMET MOUNT WARNING LIGHT (24V)
	A/R	1	01-0264256-A1	ASSY / LED / WARNING - AMBER (12V)
	A/R	2	01-0264256-R1	ASSY / LED / WARNING - RED (12V)
	A/R	3	01-0264256-11	ASSY / LED / WARNING - AMBER w/CLEAR (12V)
	A/R	4	01-0264256-51	ASSY / LED / WARNING - RED w/CLEAR (12V)
A/R		5	01-0264256-A2	ASSY / LED / WARNING - AMBER (24V)
A/R		6	01-0264256-R2	ASSY / LED / WARNING - RED (24V)
A/R		7	01-0264256-12	ASSY / LED / WARNING - AMBER w/CLEAR (24V)
A/R		8	01-0264256-52	ASSY / LED / WARNING - RED w/CLEAR (24V)
1	1	9	11-416446-000	GROMMET

\*=LED/Lens Color  
A=Amber/Amber 1=Amber/Clear  
R=Red/Red 2=Red/Clear

**2G Warning Light Flash Patterns**

<ol style="list-style-type: none"> <li>1. SignalAlert™ 75**</li> <li>2. SignalAlert™ 150</li> <li>3. SignalAlert™ 375</li> <li>4. SingleFlash 150</li> <li>5. SingleFlash 75</li> <li>6. SingleFlash 15</li> <li>7. DoubleFlash 150</li> <li>8. DoubleFlash 75</li> </ol>	<ol style="list-style-type: none"> <li>9. CometFlash®</li> <li>10. ActionFlash™</li> <li>11. ModuFlash™</li> <li>12. ComAlert™</li> <li>13. ActionScan™</li> <li>14. SignalAlert™ Steady</li> <li>15. Steady</li> <li>** <i>default pattern</i></li> </ol>
---	--

**Scan-Lock™** - The WHT/VIO wire is used for Scan-Lock™ pattern control. A momentary switch (normally open) should be used to control this function. Scan-Lock™ operation is as follows:

**TO CYCLE THROUGH ALL PATTERNS:** Apply the WHT/VIO wire to +VBAT for less than 1 second and release to cycle forward. Apply the WHT/VIO wire to +VBAT for more than 1 second and release to cycle backward.

**TO SET A PATTERN AS DEFAULT:** When the desired pattern is displayed, allow it to run for more than 5 seconds. The lighting system will now display this pattern when active.

**TO RESET TO THE FACTORY DEFAULT PATTERN:** With the flasher off, apply the WHT/VIO wire to +VBAT and turn power back on. When the default pattern is displayed, remove the WHT/VIO wire from voltage and allow the pattern to run for at least 5 seconds.

QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
	*		01-0664265-*1	2G GROMMET MOUNT WARNING LIGHT (12V)
*			01-0664265-*2	2G GROMMET MOUNT WARNING LIGHT (24V)
	A/R	1	01-0264256-A1	ASSY / LED / WARNING - AMBER (12V)
	A/R	2	01-0264256-R1	ASSY / LED / WARNING - RED (12V)
	A/R	3	01-0264256-11	ASSY / LED / WARNING - AMBER w/CLEAR (12V)
	A/R	4	01-0264256-51	ASSY / LED / WARNING - RED w/CLEAR (12V)
A/R		5	01-0264256-A2	ASSY / LED / WARNING - AMBER (24V)
A/R		6	01-0264256-R2	ASSY / LED / WARNING - RED (24V)
A/R		7	01-0264256-12	ASSY / LED / WARNING - AMBER w/CLEAR (24V)
A/R		8	01-0264256-52	ASSY / LED / WARNING - RED w/CLEAR (24V)
1	1	9	11-416446-000	GROMMET

\*=LED/Lens Color  
A=Amber/Amber 1=Amber/Clear  
R=Red/Red 2=Red/Clear

**2G Warning Light Flash Patterns**

<ol style="list-style-type: none"> <li>1. SignalAlert™ 75**</li> <li>2. SignalAlert™ 150</li> <li>3. SignalAlert™ 375</li> <li>4. SingleFlash 150</li> <li>5. SingleFlash 75</li> <li>6. SingleFlash 15</li> <li>7. DoubleFlash 150</li> <li>8. DoubleFlash 75</li> </ol>	<ol style="list-style-type: none"> <li>9. CometFlash®</li> <li>10. ActionFlash™</li> <li>11. ModuFlash™</li> <li>12. ComAlert™</li> <li>13. ActionScan™</li> <li>14. SignalAlert™ Steady</li> <li>15. Steady</li> <li>** <i>default pattern</i></li> </ol>
---	--