

Multipurpose Oscillating Tool

Owner's Manual



WARNING: Read carefully and understand all ASSEMBLY AND OPERATION INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item #61478

Thank you very much for choosing an Ironton™ product!
For future reference, please complete the owner's record below:
Serial Number/Lot Date Code:
Purchase Date:
Save the receipt, warranty, and this manual. It is important that you read the entire manual to become familiar with this product before you begin using it.

This oscillating tool is designed for certain applications only. Northern

modification or improper use of this product such as an application for which it was not designed. We strongly recommend that this product not be modified and/or used for any application other than that for which it

Tool and Equipment is not responsible for issues arising from

For technical questions, please call 1-800-222-5381.

was designed.

Table of Contents

Intended Use	4
Packaging Contents	4
Technical Specifications	
Important Safety Information	
Specific Operation Warnings	
Grounding	7
Extension Cords	
Main Parts of Oscillating Tool	9
Before Each Use	
Operating Instructions	9
Maintenance	12
Troubleshooting	13
Parts Diagram	
Parts List	
Replacement Parts	16
Limited Warranty	

Intended Use

The Ironton Multipurpose Oscillating Tool is a versatile product for home repair, remodeling, and restoration. It's a detail sander, close-quarter saw, power scraper, and grout removal tool. It's perfect for trimming door jambs during flooring installation, removing old caulking, taking up vinyl flooring or carpeting, chiseling out door hinges, or trimming cabinets for installation. The tool features a 2.5 amp variable speed motor that delivers 15,000 to 22,000 oscillations per minute.

Packaging Contents

- Oscillating Tool
- 2 Saw Blades
- Sanding Pad

- Scraping Blade
- Storage Case
- 12 Sanding Papers

Owner's Manual

Technical Specifications

Property	Specification
Rate	110V / 60Hz
Amperage	2.5A
Speed	15,000 – 22,000 OPM

Important Safety Information

AWARNING

- Read and understand all instructions. Failure to follow all instructions may result in serious injury or property damage.
- The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when using this tool. Always be aware of the environment and ensure that the tool is used in a safe and responsible manner.
- Do not allow persons to operate or assemble the product until they have read this manual and have developed a thorough understanding of how it works.
- Do not modify this product in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the product. There are specific applications for which the product was designed.
- Use the right tool for the job. DO NOT attempt to force small equipment to do the work of larger industrial equipment. There are certain applications for which this equipment was designed. This product will be safer and do a better job at the capacity for which it was intended. DO NOT use this equipment for a purpose for which it was not intended.
- Industrial or commercial applications must follow OSHA requirements.

AWARNING

WORK AREA SAFETY

- Inspect the work area before each use. Keep work area clean, dry, free of clutter, and well-lit.
 Cluttered, wet, or dark work areas can result in injury. Using the product in confined work areas may put you dangerously close to cutting tools and rotating parts.
- Do not use the tool where there is a risk of causing a fire or an explosion; e.g., in the presence of flammable liquids, gases, or dust. The product can create sparks, which may ignite the flammable liquids, gases, or dust.
- Do not allow the tool to come into contact with an electrical source. The tool is not insulated and contact will cause electrical shock.
- Keep children and bystanders away from the work area while operating the tool. Do not allow children to handle the product.
- Be aware of all power lines, electrical circuits, water pipes, and other mechanical hazards in your work area. Some of these hazards may be hidden from your view and may cause personal injury and/or property damage if contacted.

MWARNING

PERSONAL SAFETY

- Stay alert, watch what you are doing, and use common sense when operating the tool. Do not use the tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the tool may result in serious personal injury.
- Dress properly. Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing
 and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving
 parts. Air vents on the tool often cover moving parts and should be avoided.
- Wear the proper personal protective equipment when necessary. Use ANSI Z87.1 compliant safety
 goggles (not safety glasses) with side shields, or when needed, a face shield. Use a dust mask in
 dusty work conditions. Also use non-skid safety shoes, hardhat, gloves, dust collection systems,
 and hearing protection when appropriate. This applies to all persons in the work area.
- Do not overreach. Keep proper footing and balance at all times.
- Remove keys or wrenches before connecting the tool to an air supply, power supply, or turning on the tool. A wrench or key that is left attached to a rotating part of the tool may cause personal injury.
- Secure the work with clamps or a vise instead of your hand when practical. This safety precaution allows for proper tool operation using both hands.

ACAUTION

OSCILLATING TOOL USE AND CARE

• Do not force the tool. Products are safer and do a better job when used in the manner for which they are designed. Plan your work, and use the correct product for the job.

- Check for damaged parts before each use. Carefully check that the product will operate properly
 and perform its intended function. Replace damaged or worn parts immediately. Never operate the
 product with a damaged part.
- Do not use a product with a malfunctioning switch. Any power tool that cannot be controlled with the power switch is dangerous and must be repaired by an authorized service representative before using.
- Disconnect the power/air supply from the product and place the switch in the locked or off position before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.
- Store the tool when it is not in use. Store it in a dry, secure place out of the reach of children. Inspect the tool for good working condition prior to storage and before re-use.
- Use only accessories that are recommended by the manufacturer for use with your product. Accessories that may be suitable for one product may create a risk of injury when used with another tool. Never use an accessory that has a lower operating speed or operating pressure than the tool itself.
- Keep guards in place and in working order. Never operate the product without the guards in place.
- Do not leave the tool running unattended.

Specific Operation Warnings

AWARNING

- To reduce the risk of injury, always wear eye protection.
- To reduce the risk of injury, always wear respiratory protection.
- To reduce the risk of injury, use only accessories rated at least equal to the maximum speed marked on the tool.
- To reduce the risk of injury, always use proper guards when grinding.
- Hold power tools by insulated gripping surfaces, when performing an operation where the cutting tool may contact hidden wiring or its own cord.
- Use auxiliary handles if supplied with the tool.
- Use the tool only for dry sanding and for cutting dry wood and plastics. Water entering the housing
 of the electric tool greatly increases the danger of an electric shock.
- Keep your hands away from the saw blade. Do not reach under the work piece. Touching the saw blade may cause injury.
- Use suitable devices to locate hidden cables or pipes. Contact with an electric cable may cause an electric shock. Damaging a gas pipe may cause fire or explosion. Damaging a water pipe may cause extensive damage and/or electric shock.
- Unit and tools warm up when using them for a long time. Do not overload the tool and allow cooling down between the individual operational steps.
- Do not open the unit and do not try to repair it yourself. Contact a technician if the tool needs servicing. Only use original replacement parts.

Grounding

MWARNING


- This machine must be grounded while in use to protect the operator from electrical shock. This
 unit is equipped with an electrical cord that has an equipment grounding conductor and a
 grounding plug. The plug MUST be plugged into a matching receptacle that is properly installed
 and grounded in accordance with ALL local codes and ordinances.
- DO NOT MODIFY THE PROVIDED PLUG. If it will not fit the receptacle, have the proper receptacle installed by a qualified electrician.
- CHECK with a qualified electrician or service person if you do not completely understand the grounding instructions, or if you are not sure the tool is properly grounded.

Grounded Tools: Tools with 3-Prong Plugs

Tools marked with **Grounding Required** have a 3-wire cord and 3-prong grounding plug. The plug must be connected to a properly grounded outlet. If the tool should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user, reducing the risk of electric shock. (See Figure A.)

The grounding prong in the plug is connected through the green wire inside the cord to the grounding system in the tool. The green wire in the cord must be the only wire connected to the tool's grounding system and must never be attached to an electrically live terminal.

Your tool must be plugged into an appropriate outlet, properly installed and grounded in accordance with all codes and ordinances. The plug and outlet should look like those in the following illustration.

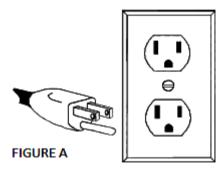

Double Insulated Tools: Tools with Two-Prong Plugs

Tools marked **Double Insulated** do not require grounding. They have a special double insulation system which satisfies OSHA requirements and complies with the applicable standards of Underwriters Laboratories, Inc., the Canadian Standard Association, and the National Electrical Code. (See Figure B.)

Double insulated tools may be used in either of the 120 volt outlets shown in the following illustration.

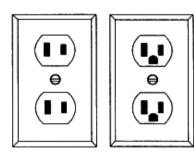


FIGURE B

Extension Cords

AWARNING

- USE A PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When
 using an extension cord, be sure to use one heavy enough to carry the current your product will
 draw. An undersized cord will cause a drop in line voltage, resulting in loss of power and cause
 overheating.
- Be sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified person before using it. Protect your extension cords from sharp objects, excessive heat and damp or wet areas.
- Grounded tools require a 3-wire extension cord. Double Insulated tools can use either a 2- or 3wire extension cord.
- As the distance from the supply outlet increases, you must use a heavier gauge extension cord.
 Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage.
- The smaller the wire's gauge number, the greater the capacity of the cord. For example, a 14-gauge cord can carry a higher current than a 16-gauge cord. Minimum extension cord wire size is shown in the following table:

Minimum Wire Size Of Extension Cords				
Namoniata AMPS		Cord Length		
Nameplate AMPS	25'	50'	100'	150'
0-6	18 AWG	16 AWG	16 AWG	14 AWG
6-10	18 AWG	16 AWG	14 AWG	12 AWG
10-12	16 AWG	16 AWG	14 AWG	12 AWG
12-16	14 AWG	12 AWG	NOT RECO	MMENDED

- When using more than one extension cord to make up the total length, make sure each cord contains at least the minimum wire size required.
- If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum cord size.
- If you are using an extension cord outdoors, make sure it is marked with the suffix **W-A** (**W** in Canada) to indicate it is acceptable for outdoor use.
- Make sure your extension cord is properly wired and in good electrical condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it.
- Protect your extension cords from sharp objects, excessive heat, and damp or wet areas.

Main Parts of Oscillating Tool



Subassembly
Quick Change Lever
ON/OFF Switch
Speed Controller
Saw Blade
Sand Paper Pads
Spade
Sanding Pad Holder

Before Each Use

MARNING

• Use suitable devices to locate hidden cables or pipes. Contact with an electric cable may cause an electric shock. Damaging a gas pipe may cause fire or explosion. Damaging a water pipe may cause extensive damage and/or electric shock.

Operating Instructions

MARNING

- To reduce the risk of injury, always wear eye protection.
- To reduce the risk of injury, always wear respiratory protection.
- To reduce the risk of injury, use only accessories rated at least equal to the maximum speed marked on the tool.
- To reduce the risk of injury, always use proper guards when grinding.
- Hold power tools by insulated gripping surfaces, when performing an operation where the cutting

tool may contact hidden wiring or its own cord.

- Use auxiliary handles if supplied with the tool.
- Use the tool only for dry sanding and for cutting dry wood and plastics. Water entering the housing of the electric tool greatly increases the danger of an electric shock.
- Keep your hands away from the saw blade. Do not reach under the work piece. Touching the saw blade may cause injury.
- Unit and tools warm up when using them for a long time. Do not overload the tool and allow cooling down between the individual operational steps.
- Do not open the unit and do not try to repair it yourself. Contact a technician if the tool needs servicing. Only use original replacement parts.

Applications









Installing the Sanding Pad Holder

- 1. Lift up the quick change lever (1).
- 2. Attach the sanding pad holder (2) to the tool.
- 3. Lower the quick change lever (1).




Using the Attachment

1. Lift up the quick change lever (1).



2. Attach the spade (3) to the tool.

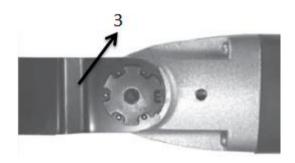

3. Lower the quick change lever (1). The attachments can be positioned in a 30° angle to both sides of the tool (e.g., in line with the housing or on the right or left side of the housing).



Speed Controller

Turn the speed controller to the desired setting to increase or decrease the speed. The controller can be adjusted from 1 - 6. The speed rate can be changed during operation as well.



Maintenance

MWARNING

Keep the ventilation slots clean and free from debris.

Maintain the tool by adopting a program of conscientious repair and maintenance in accordance with the following recommended procedures. It is recommended that the general condition of any tool be examined before it is used. Keep your tool in good repair. Keep all cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control. Keep handles dry, clean, and free from oil and grease. The following chart is based on a normal operation schedule.


Maintenance Interval	Maintenance Point
Daily before operating	Inspect the general condition of the tool. Check for: Loose hardware, misalignment or binding of moving parts, damaged cord/electrical wiring, cracked or broken parts, and any other condition that may affect its safe operation.
After use	Wipe external surfaces of the tool with a clean cloth.
Periodically	Wear ANSI-approved safety goggles and NIOSH-approved breathing protection and blow dust and grit out of the motor vents using dry compressed air.

Troubleshooting

Use the table below to troubleshoot problems before contacting service personnel or your local dealer. If the problem continues after troubleshooting, call your local dealer for assistance.

Failure	Possible Cause	Corrective Action
Tool will not start.	Cord not connected.	Check that cord is plugged in to power source.
	Internal damage or wear.	Have a technician service the tool.
Attachment is loose on the tool.	Holes on attachment not lined up with pins on spindle.	Remove the attachment and re-mount.
Performance	Attachment dull or damaged.	Keep cutting accessories sharp. Replace as needed.
decreases over time.	Carbon brushes worn or damaged.	Have a qualified technician replace brushes.
	Forcing tool to work too fast.	Allow tool to work at its own rate.
Tool is overheating	Attachment dull or damaged.	Keep cutting accessories sharp. Replace as needed.
	Blocked motor housing vents.	Do no block the vents.

Parts Diagram

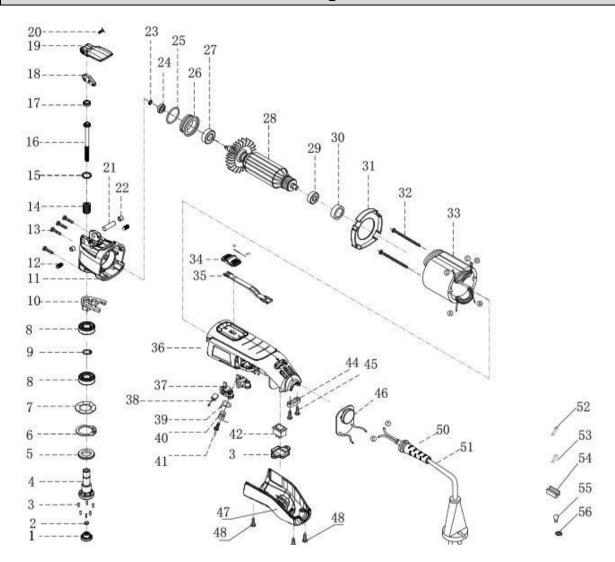

Parts List

Part Number	Part Description	Quantity
1	Flange	1
2	Felt-ring	1
3	Pin	1
4	Spindle	1
5	Seal Ring	1
6	Circlip for Shaft 28	2
7	Spline Spring Washer	1
8	Bearing 6001	2
9	Circlip for Shaft 14	1
10	Toggle Block	1
11	Reducer	1
12	Limit Ball	2
13	Screw ST4x27	4
14	Spring	1
15	Sealing Washer	1
16	Bolt	1
17	Sealed Cap	1
18	Cam Wheel	1
19	Trigger	1
20	Screw M4x16	1
21	Pin	1
22	Steel Bushing	2
23	Circlip for Shaft 4	1
24	Bearing Washer	2
25	Sealing Washer	2
26	Middle Cover	1
27	Bearing 625	1
28	Armature	1
29	Bearing 607	1
30	Rubber Bush	1
31	Guide Wind Circle	1
32	Screw ST4.0x50	2
33	Stator	1
34	Pull Brace	1
35	Link Pale	1
36	Plastic Housing	1
37	Brush Holder	2
38	Carbon Brush	2
39	Lug	2
40	Spring	2
41	Screw ST4.0x20	2
42	Switch	1
43	Switch Holder	1
44	Cord Clip	1
45	Screw ST4.0x14	2
46	Adjustable- Switch	1
47	Back Housing	1
48	Screw ST 4.0x10	1
49	Screw ST 4.0x16	2
50	Rubber Sleeve	1
51	Cord	1
52	2.8 Wiring Inserted Connector	2
JL	2.0 Willing inserted Confidential	

Part Number	Part Description	Quantity
53	4.8 Wiring Inserted Connector	2
54	Tridentate Buckle	2
55	O-Buckle	1
56	Tooth Type Gasket ø4.2	1

Replacement Parts

- For replacement parts and technical questions, please call Customer Service at 1-800-222-5381.
- Not all product components are available for replacement. The illustrations provided are a convenient reference to the location and position of parts in the assembly sequence.
- When ordering parts, the following information will be required: item description, item model number, item serial number/item lot date code, and the replacement part reference number.
- The distributor reserves the rights to make design changes and improvements to product lines and manuals without notice.

Limited Warranty

Northern Tool and Equipment Company, Inc. ("We" or "Us") warrants to the original purchaser only ("You" or "Your") that the Ironton product purchased will be free from material defects in both materials and workmanship, normal wear and tear excepted, for a period of <u>one year</u> from date of purchase. The foregoing warranty is valid only if the installation and use of the product is strictly in accordance with product instructions. There are no other warranties, express or implied, including the warranty of merchantability or fitness for a particular purpose. If the product does not comply with this limited warranty, Your sole and exclusive remedy is that We will, at our sole option and within a commercially reasonable time, either replace the product or product component without charge to You or refund the purchase price (less shipping). This limited warranty is not transferable.

Limitations on the Warranty

This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workmanlike manner.

Obligations of Purchaser

You must retain Your product purchase receipt to verify date of purchase and that You are the original purchaser. To make a warranty claim, contact Us at 1-800-222-5381, identify the product by make and model number, and follow the claim instructions that will be provided. The product and the purchase receipt must be provided to Us in order to process Your warranty claim. Any returned product that is replaced or refunded by Us becomes our property. You will be responsible for return shipping costs or costs related to Your return visit to a retail store.

Remedy Limits

Product replacement or a refund of the purchase price is Your sole remedy under this limited warranty or any other warranty related to the product. We shall not be liable for: service or labor charges or damage to Your property incurred in removing or replacing the product; any damages, including, without limitation, damages to tangible personal property or personal injury, related to Your improper use, installation, or maintenance of the product or product component; or any indirect, incidental or consequential damages of any kind for any reason.

Assumption of Risk

You acknowledge and agree that any use of the product for any purpose other than the specified use(s) stated in the product instructions is at Your own risk.

Governing Law

This limited warranty gives You specific legal rights, and You also may have other rights which vary from state to state. Some states do not allow limitations or exclusions on implied warranties or incidental or consequential damages, so the above limitations may not apply to You. This limited warranty is governed by the laws of the State of Minnesota, without regard to rules pertaining to conflicts of law. The state courts located in Dakota County, Minnesota shall have exclusive jurisdiction for any disputes relating to this warranty.



Distributed by:

Northern Tool & Equipment Company, Inc.

Burnsville, Minnesota 55306

www.northerntool.com

Made in China